

Removing an Over-running Coupler (ORC) - by Marty in VA

We took some pictures the other day while removing the ORC.

Grease (Zerk) Fitting



Set Screw



Remove grease fitting and set screw.



Use drive pin punch to remove pin.



Roll pin halfway out.



All parts and tools used after removal.



Use PTO cap to cover your Power Take Off shaft



*Best internet source
of information and help
for old Ford tractors.*

www.ntractorclub.com