

INSTRUCTIONS FOR INSTALLING AIR CLEANER EXTENSION STACK ON FORD-FERGUSON TRACTOR



1 Cut out template shown below and lay along the bead around the rounded right-hand back corner of the battery cover opening.

2 Locate center punch mark at position indicated on template.

3 Cut a 2" diameter hole through the hood using the center punch mark as center.

4 Remove air cleaner assembly from tractor.


5 Remove top screen assembly from air cleaner and cut out cover support bracket with a pair of snips.

6 Attach air stack extension assembly using the clamp provided for this purpose.

7 Remove cap from top of air stack extension.

8 Replace air cleaner assembly in its former position by pushing the air stack tube up through the hole which was cut in the hood.

9 Replace air stack cap.

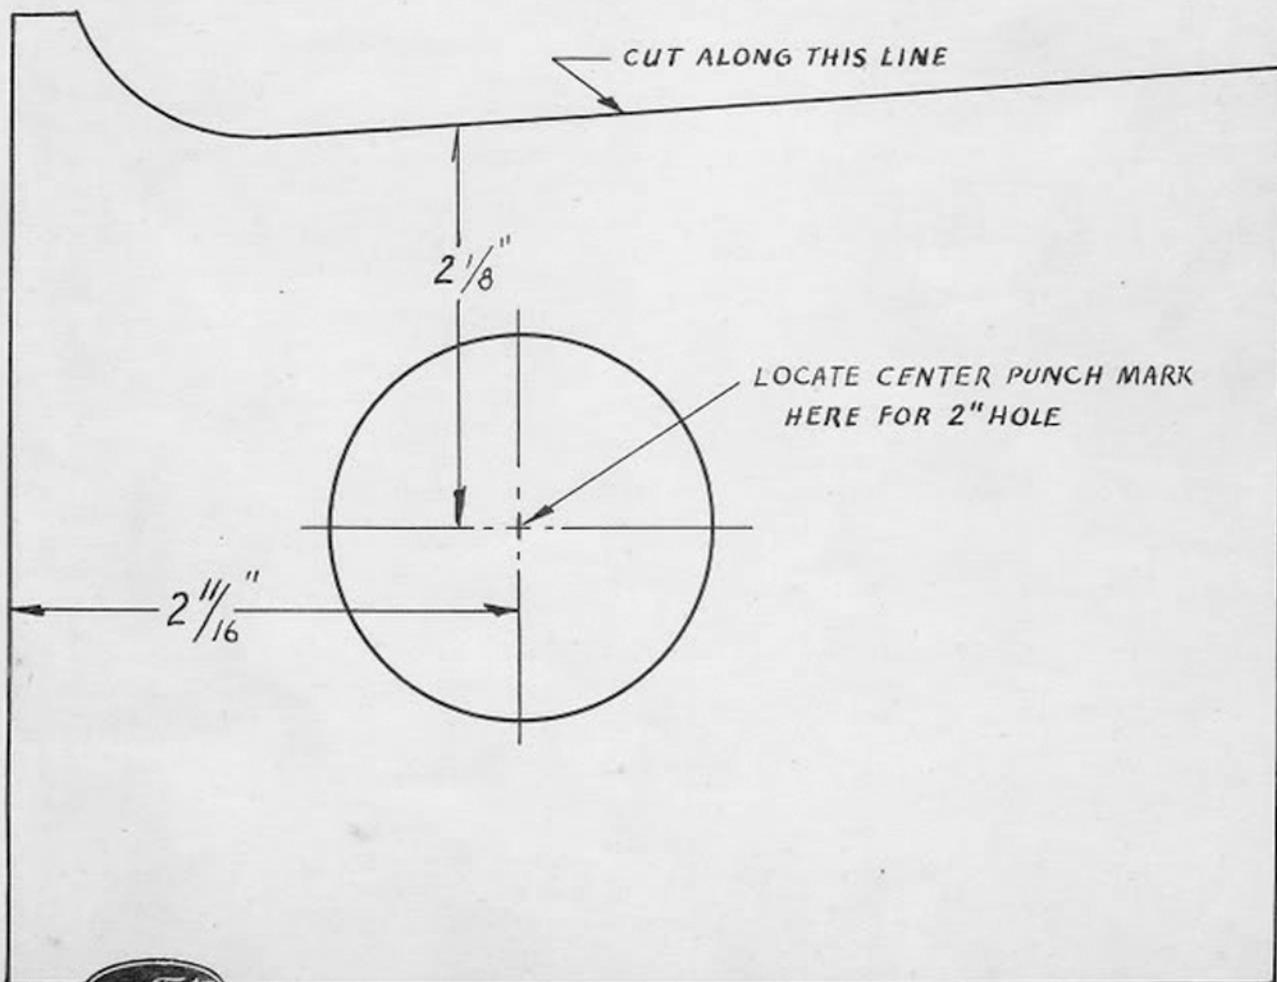

HARRY FERGUSON, INC., DETROIT 3, MICHIGAN