

Angle Adapter, Dozer Blade Model 19-137


Spring Release, Dozer Blade Model 19-138

6 Foot Universal Dozer Blade Model 19-139

7 Foot Universal Dozer Blade Model 19-140

Mounting Brackets, Dozer Blade
Model 19-141

## PARTS BOOK

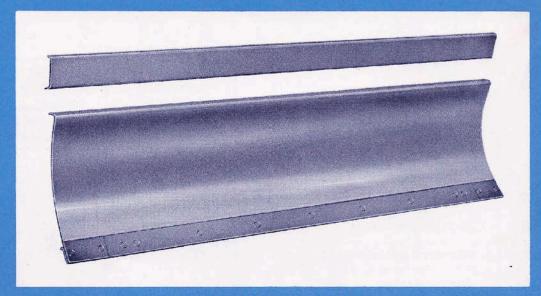

SEPTEMBER, 1958

TRACTOR AND IMPLEMENT DIVISION

Ford Motor Company,

2500 East Maple Road, Birmingham, Michigan

## MODEL INDEX

Model No. Description		Group No.	
19 <b>-</b> 137	Angle Adapter, Dozer Blade	1-3	
19-138	Spring Release, Dozer Blade	1-2	
19-139	6 Foot Universal Blade	1-1	
19-140	7 Foot Universal Blade	1-1	
19-141	Mounting Brackets, Dozer Blade	1-4	

#### EXTRA EQUIPMENT

190033	Skid Shoe,	Dozer Blade	
195872	6 Foot Top	Blade Extension,	Dozer Blade
108396	7 Foot Top	Blade Extension,	Dozer Blade

#### "USAGE CHART"

			Standa Heavy Load	Duty	Industri Super I Loader	outy
			Blade Straight	Position Angle	Blade   Straight	
	19-139	6 Foot Universal Blade	X	x	х	x
	19-140	7 Foot Universal Blade	x	X	X,	x
•	19-141	Mounting Brackets	x		х	
	19-112	Standard Attaching Kit	x	x		
	19-137	Angle Adapter		x		x
	19-138	Spring Release		Optional	1	Optional
	190033	Skid Shoe	Optional	Optional	Optional	Optional
	195872	6 Foot Top Blade Extension	Optional		Optional	L
	108396	7 Foot Top Blade Extension	Optional		Optiona	ı


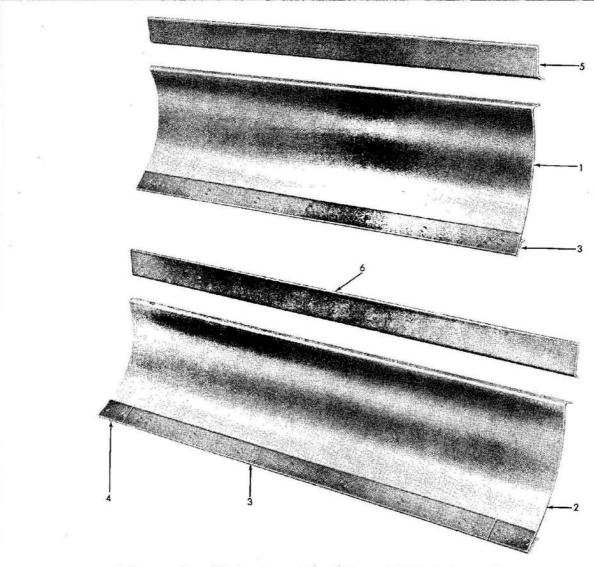


FIG.	Figure 1 - Blade Assembly 6Ft and 7Ft Universal Dozer PART NO. NAME AND DESCRIPTION			QTY. REQ.		
		GROUP 1-1 BLADE ASSEMBLY	19-139	19-140		
1	19-139	BLADE, 6Ft., Universal Dozer (WA)				
2	19-140	BLADE, 7Ft., Universal Dozer (WA)	20	1		
3	194827 195861	IP, Cutting				
_	300308-58	CIP, Cutting .(Short)				
-	, , , , , , , , , , , , , , , , , , , ,	BOLT, 1/2 - 13 x 1-1/2 Plow - Lip to Blade				
-		LOCKWASHER, 1/2, NUT, 1/2 - 13 Hex	73	17		
-	302515 <b>-</b> 58	BOLT, 3/4 - 10 x 1-3/4 Carriage Bracket to Stringer	2	2		
-		BOLT, 3/4 - 10 x 1-3/4 Carriage Bracket to Stringer LOCKWASHER, 3/4, NUT, 3/4 - 10 Hex	2	2		
		ACCESSORY EQUIPMENT				
5	195872 108396	TOP EXTENSION, 6Ft Dozer Blade	1	,		

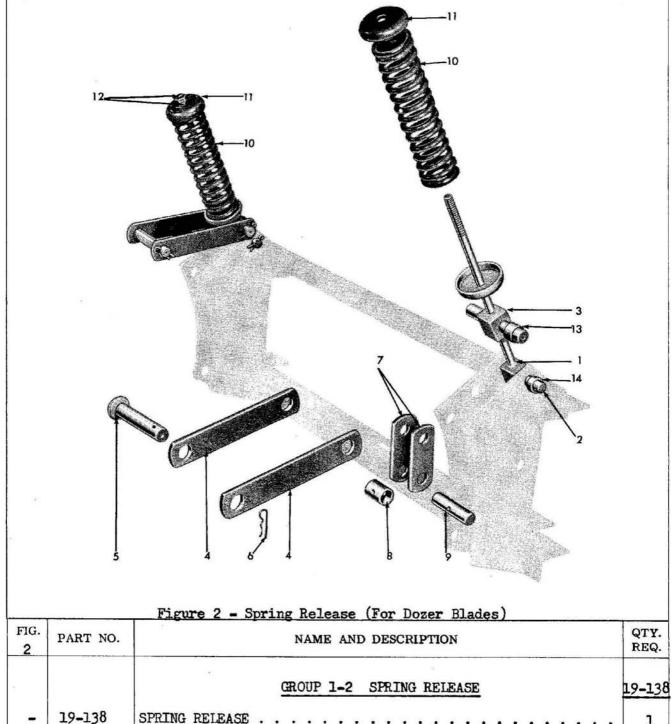

		Dozer Blade	
FIG. 2	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
	**	GROUP 1-2 SPRING RELEASE (Cont'd)	19 <b>-</b> 13
7 8 9 -	108005 108006 108007	LINK, Spring, Short  SPACER (Short Link)  PIN, 1 x 3-3/4 Drilled)  PIN, 1/4 x 2 Cotter  PIN, 3/16 x 1-1/2 Cotter - Trunnion & Spring Guide Pins	4 2 2 2 8
10	190001	SPRING, Release	2
11 12	190002 33947-88	CAP, Spring	14 14
13 14	190335 202336	RETAINER, Spring (Link Spacer) Trunnion	4 4
			el l



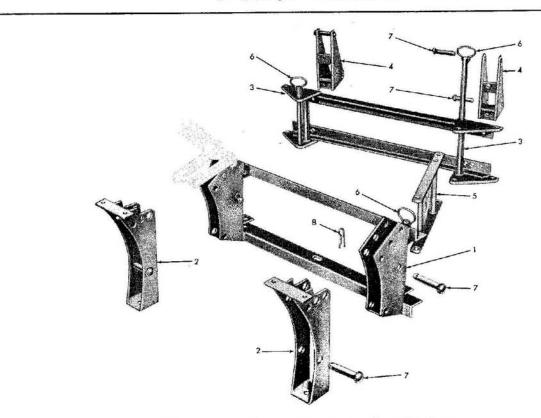


Figure 3 - Dozer Blade Angle Adapter

FIG.	PART NO.	NAME AND DESCRIPTION		
		GROUP 1-3 DOZER BLADE ANGLE ADAPTER	19-137	
_	19-137	DOZER BLADE ANGLE ADAPTER	1	
1	108023	FRAME, Dozer Blade Pivot (WA)	1	
2	108020	BRACKET, Blade Support (WA)	2	
3	108017 304806-58	PLATE, Angle (WA)	1 4 4	
4	108009	PLATE, Mounting (WA)	2	
5	108012	SPACER, Blade Angle (WA)	1	
6	108028	PIN, Drop (WA)	3	
7 8 -	108030 358813-s8	PIN, 1.00 x 4.84 Headed Drilled) PIN, 1/4 x 3-1/4 Spring PIN, 1/4 x 1-1/2 Cotter  ) Blade Angle Adaptor	8 2 6	
		If this model is used with Model 19-138 Spring Release (For Dozer Blades) 2, Drilled Headed Pins (108030) and the Spring Pins (358813-S8) are placed in a reserve location as illustrated above, on the left side of Frame Assembly (108023). Otherwise, use as shown on the right side.		

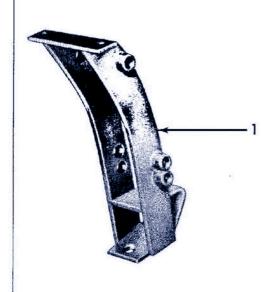

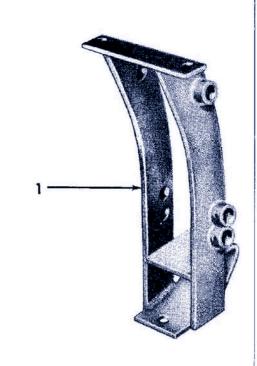

PART NO.	NAME AND DESCRIPTION	QTY. REQ.
	GROUP 1-4 BRACKET ASSEMBLY - DOZER BLADE MOUNTING	19-143
19-141	BRACKET ASSEMBLY, Dozer Blade Mounting	1
195853	BRACKET, Pivot Plate & Stop (WA)	2
	For Straight Blade Applications only.	
	903	
	19-141	GROUP 1-4 BRACKET ASSEMBLY - DOZER BLADE MOUNTING  19-141 BRACKET ASSEMBLY, Dozer Blade Mounting

#### NUMERICAL INDEX

19-137 Dozer Blade 4 19-138 Spring Release 2 19-139 Blade Assy 1	108028 Pin
19-140 Blade Assy 1 19-141 Bracket Assy 5 33947-S8 Nut 3	108396 Extension 1 190001 Spring 3 190002 Cap 3
108000 Guide	190335 Retainer
108005 Link	195861 Lip Cutting 1 195872 Top Extension 1 202336 Spacer 3
108008 Pin	300308-S8 Bolt
108017 Plate	358813-58 Pin 2,4