

LOADERS

STANDARD
HEAVY DUTY
REAR MOUNTED
INDUSTRIAL

BUCKETS and CRANES

MASTER PARTS BOOK



NOVEMBER, 1953

FORD TRACTOR DIV

2500 East Maple Ryww.ntractorclub.com om, Myhiga

MASTER PARTS BOOK

PREFACE

The purpose of this Parts Books is to present, in convenient group sequence, a listing of all parts which may be required to service Dearborn Loaders.

This Parts Book is divided into ten groups. Each group covers a separate section of the Loaders. Group I contains the Frame Assemblies of all Models; Group II includes the Lift Arm Assemblies of all Models; etc.

NOVEMBER 1953

FORD TRACTOR DIVISION
Ford Motor Company,

2500 EAST MAPLE ROAD . BIRMINGHAM, MICHIGAN

GENERAL INFORMATION

To insure simplicity and in keeping with a uniform system of parts book preparation this book has been compiled and arranged according to six major divisions as follows:

GENERAL INFORMATION — This division contains an explanation of the features of this catalog plus instructions and examples as to how the catalog may be most efficiently used.

GROUP INDEX — This division contains a list of the main groups and sub-groups into which the Parts List has been separated, together with the page number on which each of these groups appear.

ILLUSTRATION INDEX — This division lists the figure numbers, titles and page numbers on which each illustration may be found.

ALPHABETICAL INDEX — This division contains an alphabetical listing of all parts ogether with the Group numbers in which each part may be found.

PAR S LIST — This division, which makes up the body of the catalog, lists all the parts which are available for service replacement, and indicates the part number and name of each, as well as the quantity required per unit.

In order to simplify the locating of parts, this division has been broken down into main groups and sub-groups as listed in the Group Index on Page 5. For example, Group 6 covers the Control Valves and Attachments and has been broken down into three sub-groups as follows:

Group 6-1 Control Valve and Attachments for Models 19-8 (Prior), 8A (Prior)

Group 6-2 Control Valve and Attachments for Model 19-22, 59

Group 6-3 Control Valve for Models 19-23 (Prior), 19-42, (Prior), 60, 61 (Prior)

To further simplify the locating of parts in the Parts List and to insure positive identification of the part or parts required an Exploded View Illustration has been placed at the beginning of each sub-group. These illustrations are actual photographs of the various assemblies, sub-assemblies and attaching parts listed in each sub-group. Each part in every illustration has been given an item number which ties it up directly with its respective part number in the Parts List.

NUMERICAL INDEX - This division contains a List of all parts in numerical order, together with their part name and page number on which each part may be found.

INSTRUCTIONS FOR LOCATING PARTS WITHIN THIS PARTS BOOK

By using the various indexes, illustrations and the grouping system employed in this book any part may be easily located. For example:

- 1. If only the name or description of the part is known
 - a. Turn to the Alphabetical Index and locate the part by description of name in 'alphabetical sequence.
 - b. Turn to the Group number listed and locate the desired part in the Parts List.

- 2. If only the function of the part is known
 - a. Turn to the Group Index or the model illustrations in the front of the book and ascertain the group in which the part is most likely to appear in the Parts List.
 - b. Turn to the indicated group and refer to the illustration preceding that group and locate the desired part on that illustration.
 - c. Ascertain the item number of the part desired and locate the item number on the immediately following Parts List by using the illustration reference column.
- 3. If only the part number is known
 - a. Turn to the Numerical Index and locate the part in numerical sequence.
 - b. Turn to the page number listed and locate the desired part in the Parts List.

NOTE:

The following examples are offered to show the ease and simplicity with which parts may be located in this book.

(1) For example, if the parts order clerk or a mechanic wishes to ascertain the part number of the drive shaft for the Heavy Duty Loader he can first turn to the Alphabetical Index which lists the part he is looking for as Shaft, drive, to be found in Group 7-2. By turning to Group 7-2 he will find the part number of the part required to be 194355.

If he is in doubt as to whether the part he has found is the correct part a check can be made by referring to the illustrations as indicated by the figure number and item number shown in the Illustration Reference Column.

(2) For another example, if he wishes to locate the same part but he does not know the correct name of the part, but does know it is part of the Hydraulic Pump and Drive Parts, he can refer to the Group Index on Page 6. In this Index he will find the Hydraulic Pump and Drive Parts to be in Group 7-2 located on Page 67. On turning to this page he will find an Exploded View Illustration of the Hydraulic Pump and Drive Parts heading up this group. By referring to this Illustration he will-find the part he wants to be item No. 26. By referring to the Illustration Reference column in the Parts List directly following the illustration he will find the part number listed after item No. 26 to be 194355.

It would also be possible to locate the group which this part was in by referring to the model illustrations in the front part of the book. Here on Figure 5 he will find the Hydraulic Pump and Drive Parts he is looking for with an arrow pointing to it designating that this part can be found in Group 7-2. When the group number has been determined the same procedure of locating the part on the illustration and Parts List in Group 7-2 could be followed as outlined in the previous paragraph.

(3) If the part number of the drive shaft required is known to be 194355 the number can simply be looked up in the Numerical Index on Page 90. Here again he will find the part he is looking for can be found on Page 67.

It is felt that by careful study of the instructions and examples outlined above and then by putting them to practice when using the book that you will find this Parts Book extremely simple to use as well as concise and complete in every way.

MODEL INDEX

Model No.	Description	Group No.
19-7	Dearborn Standard Manure & Material Loader (Prior)	1,2,3,5,8
19-8	Dearborn Heavy Duty Manure & Material Loader (Prior)	1,2,3,6,7,8
19-8A	Dearborn Heavy Duty Manure & Material Loader (Prior)	1,2,3,6,7,8
19-9	Bucket Assembly, Material Type (Prior)	8
19-9A	Bucket Assembly, Material Type (Prior)	8
19-10	Bucket Assembly, Manure Fork Type (Prior)	8
19-10A	Bucket Assembly, Manure Fork Type (Prior)	8
19-21	Dearborn Standard Loader	1,2,3,5,8,9,10
19-22	Dearborn Heavy Duty Loader 1	,2,3,5,6,7,8,9,10
19-23	Dearborn Heavy Duty Loader w/Hydraulic Bucket Control (Prior)	All
19-26	Standard to Heavy Duty Loader Conversion Kit	10
19-27	Standard to Heavy Duty Loader w/Hydraulic Bucket Control	Not Serviced
19-28	Hydraulic Bucket Control Attachment Conversion Kit (Prior)	Not Serviced
19-29	Dearborn Rear Mounted Loader	1,3,8
19-31	Bucket Assembly, Material Type	8
19-32	Bucket Assembly, Manure Fork Type	8
19-33	Dearborn Crane Attachment (19-21, 22, 23, 59, 60)	9
19-41	Plate Assembly, Material (19-29, 19-65)	8
19-42	Dearborn Industrial Loader (2N, 9N, 8N Tractors) (Prior)	All
19-43	Bucket (Industrial Loader)	8
19-52	Dearborn Rear End Crane	9
19-53	Dearborn Snow and Grain Bucket (Industrial Loader)	8
19-54	Attachment, Adapter Unit (Industrial Loader)	8
19-59	Dearborn Standard Loader (NAA Tractor)	1,2,3,5,8,9
19-60	Dearborn Heavy Duty Loader (NAA Tractor)	1,2,3,5,6,7,8,9
19-61	Dearborn Industrial Loader (NAA Tractor) (Prior)	All
/ 19-62	Standard Loader Conversion Kit (19-21 to NAA Tractor)	10
19-63	Heavy Duty Loader Conversion Kit (19-22 to NAA Tractor)	10
19-64	Industrial Loader Conversion Kit (19-42 to NAA Tractor)	10
19-65	Dearborn Rear Mounted Loader (NAA Tractor)	1,3,8
19-66	Rear Mounted Loader Conversion Kit (19-29 to NAA Tractor) .	3
19-68	Dearborn Manure Fork (Industrial Loader)	8
19-69	Dearborn Crane Attachment (Industrial Loader)	9
19-70	Dearborn Industrial Loader (2N, 9N, 8N Tractors)	A11
19-71	Dearborn Industrial Loader (NAA Tractor)	All
22-53	Dearborn Rear End Crane (Replaced by Model 19-52)	-99
23-10	Selec-Trol Valve	5,10



GROUP INDEX

u	roup No.	Name I	Page No
	1 .	MAIN FRAME ASSEMBLIES	21
	1-1	Frame Assembly - Model 19-7 (Prior)	21
	1-1A	Sub-Frame Assembly	21
	1-1B	Upright Posts and Attachments	22
	1-2	Frame Assembly for Model 19-8 (Prior)	24
	1-3	Frame Assembly for Model 19-8A (Prior)	25
	1-4	Frame Assembly for Models 19-21, 22, 23 (Prior) 59, 60	26
	1-5	Frame Assembly for Models 19-42 (Prior), 61 (Prior), 70, 7	1 27
	1-6	Frame Assembly for Models 19-29, 65	29
	2	LIFT ARM ASSEMBLIES	30
	2-1	Lift Arm Assembly - Model 19-7 (Prior)	30
	2-1A	Loading Arm Assembly	30
	2-1B	Leveling Rods and Hold-Down	31
	2-2	Lift Arm Assembly for Model 19-8 (Prior)	32
	2-3	Lift Arm Assembly for Model 19-8A (Prior)	33
	2-4	Lift Arm Assembly for Models 19-21, 22, 23, (Prior) 59, 60	34
	2-5	Lift Arm Assembly for Models 19-42 (Prior), 61 (Prior), 70, 71	35
	3	CYLINDER ASSEMBLIES, LIFT ARM	36
	3-1	Cylinder Assembly, Lift Arm for Model 19-7 (Prior)	36
	3-2	Cylinder Assembly, Lift Arm for Model 19-8 (Prior)	37
	3-3	Cylinder Assembly, Lift Arm for Model 19-8A (Prior)	38
	3-4	Cylinder Assembly, Lift Arm for Models 19-21, 22, 23 (Prior) 59, 60	39
	3-5	Cylinder Assembly, Lift Arm for Models 19-42 (Prior), 61 (Prior) 70, 71	40
	3-6	Hydraulic Booster Assemblies for Models 19-29, 65, 66	42
			College State Stat

GROUP INDEX (Cont'd)

roup No.	Name	Page No.
4	CYLINDER ASSEMBLIES, BUCKET CONTROL	45
4-1	Cylinder Assy. Bucket Control for Model 19-23 (Prior)	45
4-2	Cylinder Assy. Bucket Control for Models 19-42 (Prior), 61 (Prior), 70, 71	47
5	HYDRAULIC LINES AND ATTACHMENTS	48
5-1	Hydraulic Lines for Model 19-7 (Prior)	48
5-2	Hydraulic Attachments for Model 19-21	49
5-3	Hydraulic Lines for Model 19-59	50
5-4	Hydraulic Attachments for Models 19-22, 60	52,53
5-5	Hydraulic Attachments for Model 19-23 (Prior)	54,55
5-6	Hydraulic Lines for Models 19-42 (Prior), 61 (Prior), 70, 71	56
6	CONTROL VALVES AND ATTACHMENTS	59
6-1	Control Valve & Attachments for Models 19-8 (Prior) 8A (Prior)	59
6-2	Control Valve & Attachments for Models 19-22, 60	60
6-3	Control Valve for Modesl 19-23 (Prior), 42 (Prior), 61 (Prior), 70, 71	63
7	HYDRAULIC PUMP AND DRIVE PARTS	65
7-1	Hydraulic Pump and Drive Parts for Models 19-8 (Prior) 8A (Prior)	65
7-2	Hydraulic Pump and Drive Parts for Models 19-22, 23 (Prior), 42 (Prior), 60, 61 (Prior), 70, 71	67,68,69
8	BUCKET ASSEMBLIES, MATERIAL & FORK TYPES	70
8-1	Bucket for Model 19-7 (Prior)	70
8-2	Buckets, Models 19-9, 9A, 10, 10A for Models 19-8 8A (Prior)	71
8-3	Buckets, Models 19-31, 32 for Models 19-21, 22, 23 (Prio 59, 60	r) 72
8-3A	Bucket Release for Models 19-21, 22, 59, 60	73
8-4	Bucket and 19-41 Material Plate for Models 19-29, 65	74 .
8-5	Bucket, Model 19-43 & Dearborn Snow and Grain Bucket, Model 19-53 for Models 19-42 (Prior), 61 (Prior), 70, 73	1 75



GROUP INDEX (Cont'd)

Froup No.	Name	Page 1
8-6	Dearborn Manure Fork, Model 19-68 for Models 19-42 (Prior), 61 (Prior), 70, 71	76
9	CRANES AND ADAPTER UNIT ATTACHMENT	
9-1	Dearborn Crane Attachment, Model 19-33 for Models 19-21, 22, 23 (Prior), 59, 60	77
9-2	Dearborn Rear End Crane, Models 22-53 (Prior) and 19-52 for all Tractors	78
9-3	Attachment, Adapter Unit, Model 19-54 and Dearborn Crane Attachment, Model 19-69 for Models 19-42 (Prior), 61 (Prior), 70, 71	80
10	KITS	81
10-1	Standard to Heavy Duty Loader Conversion Kit, Model 19-26 for Model 19-21 to 19-22	81,82
10-2	Fender Bracket Kit for Models 19-42 (Prior), 61 (Prior), 70, 71	83
10-3	Kits for Conversion to NAA Tractor	85
	Standard Loader Conversion Kit, Model 19-62 for Model 19-21 to NAA Tractor	85
S	Heavy Duty Loader Conversion Kit, Model 19-63 for Model 19-22 to NAA Tractor	85
	Industrial Loader Conversion Kit, Model 19-64 for Models 19-42 (Prior), 70, to NAA Tractor	95

ILLUSTRATION INDEX

igure No.	Name	age No.
1	Dearborn Standard Manure & Material Loader, Model 19-7 (Prior)	13
2	Dearborn Heavy Duty Manure & Material Loader, Model 19-8 (Prior)	14
3.	Dearborn Heavy Duty Manure & Material Loader, Model 19-8A (Prior)	15
4	Dearborn Standard Loader, Models 19-21, 59	16
5	Dearborn Heavy Duty Loader, Models 19-22, 60	17
6	Dearborn Heavy Duty Loader, w/Hydraulic Bucket Control, Model 19-23 (Prior)	18
7	Dearborn Industrial Loader, Models 19-42(Prior), 61 (Prior), 70,	71 19
8	Dearborn Rear Mounted Loader, Models 19-29, 65	20
9	Sub-Frame Assembly	21
10	Upright Posts and Attachments	22
11	Frame Assembly for Model 19-8 (Prior)	24
12	Frame Assembly for Model 19-8A (Prior)	25
13	Frame Assembly for Models 19-21, 22, 23 (Prior) 59, & 60	26
14	Frame Assembly for Models 19-42 (Prior), 61 (Prior), 70,71	27
15	Frame Assembly for Models 19-29, 65	28
	Loading Arm Assembly for Model 19-7 (Prior)	30
16	Leveling Rods and Hold-down Assembly for Model 19-7 (Prior	31
17	Lift Arm Assembly for Model 19-8 (Prior)	32
18	Lift Arm Assembly for Model 19-8A (Prior)	33
19	Lift Arm Assembly for Models 19-21, 22, 23 (Prior) 59, & 60	34
20	Lift Arm Assembly for Model 19-42 (Prior), 61 (Prior), 70,	71 35
21	Cylinder Assembly, Lift Arm for Model 19-7 (Prior)	36
23	Cylinder Assembly, Lift Arm for Model 19-8 (Prior)	37
24	Cylinder Assembly, Lift Arm for Model 19-8A (Prior)	38
25	Cylinder Assembly, Lift Arm for Models 19-21, 22, 23 (Prior),59, & 60	39
26	Cylinder Assembly, Lift Arm for Models 19-42 (Prior), 61 (Prior), 70, 71	40
27	Hydraulic Booster Assemblies for Models 19-29, 65, 66	42 44
28	Cylinder Assembly, Bucket Control for Model 19-23 (Prior)	11
29	Cylinder Assembly, Bucket Control for Models 19-42 (Prior), 61 (Prior), 70, 71	46
30	Hydraulic Lines for Model 19-7 (Prior)	48
31	Hydraulic Attachments for Model 19-21	49
32	Hydraulic Lines for Model 19-59	50 52
33	Hydraulic Attachments for Models 19-22, 60	32

ILLUSTRATION INDEX (Cont'd)

Figure No.	Name	Page No
34	Hydraulic Attachments for Model 19-23 (Prior)	54
² 35	Hydraulic Lines for Models 19-42 (Prior), 61 (Prior), 70,71	56
36	Control Valve & Attachment for Models 19-8 (Prior) 8A (Prior)	58
37	Control Valve and Attachments for Models 19-22, 60	60
38	Control Valve for Models 19-23 (Prior), 42 (Prior), 61 (Prior), 70, 71	62
39	Hydraulic Pump and Drive Parts for Models 19-8 (Prior), 8A (Prior)	64
40	Hydraulic Pump and Drive Parts for Models 19-22, 23 (Prior), 42 (Prior), 60, 61 (Prior), 70, 71	66
41	Bucket for Model 19-7 (Prior)	70
42	Buckets, Models 19-9, 9A, 10, 10A for Models 19-8 (Prior), 8A (Prior)	71
43	Buckets, Models 19-31, 32 for Models 19-21, 22, 23 (Prior), 59, 60	72
44	Bucket Release for Models 19-21, 22, 59, 60	73
45	Bucket for Models 19-29, 65	74
46	Bucket, Model 19-43 and Dearborn Snow Bucket, Model 19-53 for Models 19-42 (Prior), 61 (Prior), 70.71	75
47	Dearborn Manure Fork, Model 19-68 for Models 19-42 (Prior) 61 (Prior), 70, 71	, 76
48	Dearborn Crane Attachment Model 19-33	77
49	Dearborn Rear End Crane, Models 22-53 (Prior) and 19-52	78
50	Attachment, Adapter Unit, Model 19-54 and Dearborn Crane Attachment, Model 19-69	79
51	Standard to Heavy Duty Loader Conversion Kit, Model 19-26	80
52	Fender Bracket Kit	83
53	Loader Conversion Kits	84

ALPHABETHICAL INDEX (Cont'd)

DADE MANE	GROUP NO.	PART NAME GRO	UP NO.
PART NAME			1-1B
ADAPTER, Hydraulic Hose	1-2,3; 3-6; 4-1,2;	CLAMP, Cable 5 4 6 6 1 7 1	
	5; 7-1,2; 10-1,3A	CLAMP, Hose w/Screw 5-4, 6; 6-1;7-	2.10 34
ANGLE, Pump Mounting	7-2, 10-1	CLAMP, Pipe5-	1 1 D
ARM ASSEMBLY, Loader		CLEVIS, Chain to Control Lever	1-1B
ARM ASSEMBLY, Upper Control		CLIP, Tube	3-6
ARM, Height Adjusting		COLLAR, Trunnion Shaft	2-4
ARM, Lift	9-2	CONNECTOR, Oil Line 3	
ARM, Loader		COUPLING ASSEMBLY	7-1, 2
ARM, Lower Control	1-6	COUPLING, Reducing	., 2; 5-6
ATTACHMENT, Adapter Unit	9-3	COUPLING, Straight	3-6
		COVER, Pump	-7-2
-B-	Bell Block C.	CRADLE, Bucket	1-6
-D-		CROSSMEMBER, Nose	1-1A
BALL, Steel, Detent	10-3A	CUP, Piston	4-1, 2
BAR, Bucket Return	8-1	CYLINDER ASSEMBLY, Bucket Control .	4-1, 2
BAR, Latch Control	2-2,3;8-3A	CYLINDER ASSEMBLY, Hydraulic Booster	3-6
BARREL & PISTON ASSEMBLY	6-3	CYLINDER ASSEMBLY, Hydraulic Hoist .	3-3, 4, 5
BEARING, Drive Shaft		CYLINDER, Bucket Control	4-1, 2
BLOCK, Drive Shaft		CYLINDER, Hydraulic Hoist 3-1, 2	2, 3, 4, 5
BLOCK, Rubber			
BODY, Pump		-D-	
BOLT, Cylinder	3-3		
BOLT, Drive Sheave		DECAL, Implement 2-	5; 9-2, 3
BOLT, Hub to Sheave			
BOLT, Sheave to Crankshaft		a second and second sec	
BOLT, Valve to Mounting Plate		-E-	1551
BONNET, Spring	6-3	ELBOW, Pipe 5-6; 7	-2; 10-1
BOOM, Crane	9-1,2	ELL Street 3-6; 5-	3, 4, 5, 6
BOX, Stuffing		6-1; 7-1	, 2; 10-1
BRACE, Cross		And the state of t	
BRACE, Lifting Strut Cross			17 9
BRACE, Post and Base		-F-	
BRACKET, Axle Mounting		FITTING, "Y"	5-1; 7-1
BRACKET, Cylinder	3-6	FLANGE ASSEMBLY	7-1, 2
BRACKET, Cylinder Mounting	4-1	FLANGE, Coupling	7-1
BRACKET, Keeper	5-2	FOLLOWER & BALL ASSEMBLY	6-2
		FOLLOWER, Piston	6-3
BRACKET, Lever		FRAME ASSEMBLY, Upper Link	1-6
BRACKET, Lever Mounting		FRAME, Main	1-4, 5
BRACKET, Pipe to Tractor		FRAME WITH LOADER ARM ASSEMBLY	
BRACKET, Stabilizer	8-1 2 3 4 5		
BUCKET ASSEMBLY	1.4 5.10.1		
BUMPER, Loader	7-2	-G-	
BUSHING, Block	5 1 6.7 1 2.10 1	GASKET, Adapter	3-6, 6-3
BUSHING, Reducing	0-1, 0;1-1,2;10-1	GASKET, Cap	6-2, 3
		GASKET, Valve Cup	6-1
-C-		GLAND, Packing Aluminum	4-1, 2
	1.15	GLAND, Packing Nut Wiper	
CABLE, Trip Lever to Handle		GLAND, Packing Nut Wiper	-, ,
CAP, Air Filter	1-5		
CAP, Pipe		-H-	
CAP, Relief Valve			12.
CAP, Spool	6-2	HANDLE Trip	1-1H
CAP, Valve	6-1,3	HANDLE, Trip	3-0
CAPSCREW, Pump		HANGER, Main Pipe	
CAPSCREW, Sheave	7-2	HEAD, Ram	3-1,
CHAIN, Attaching Strap	3-6	HITCH, Implement Attaching	
CHAIN, Post and Base	1-1B		
		HOLDDOWN, Lift Link	2-11



ALPHABETHICAL INDEX (Cont'd)

_		
	PART NAME GROUP NO.	PART NAME GROUP NO.
	HOSE, Hydraulic 1-2,3;3-6;4-2;5-1,2,3,4,5,6; 7-1,2;10-1,3A	PIN, Cylinder Bracket
	HOSE, Outlet 5-4,5,6; 6-1; 7-1,2; 10-1	PIN, Dowel, Wear Plate 7-1, 2
ŀ	HOSE, Return	PIN, Frame to Tractor
	HOUSING AND BUSHING ASSEMBLY 3-1	PIN, Lever Link 6-3
	HOUSING, Rotor 7-2	PIN, Linch
	HUB ASSEMBLY 7-2, 10-1, 3B, 3C	PIN, Link
	HUB, Coupling	PIN, Pivot 2-5;4-1,2;5-4;6-3;10-1
	HUB, w/Pins Assembly 7-1	PIN, Pump
		PIN, Rivet
	C-8,5-Land and Land Land Land Land	PIN, Rod
		PIPE, Assembly 3-6
	INSERT, Rubber Block 7-2; 10-3B, 3C	PIPE, Bucket Cylinder 4-1, 2; 5-6
		PIPE, Bucket Cylinder Feedline 4-1, 5-3, 5
	-K-	PIPE, Elbow to Connection 5-2
		PIPE, Equalizer 5-4,5;10-1
	KIT, Fender Bracket 10-1	PIPE, Extension 5-4,5;10-1
	KNOB, Control	PIPE, Frame
	KNOB, Control Lever, Plastic 5-4, 6-1, 10-1	PIPE, Frame to Hose 5-4,5;10-1
	KNOB, Trip Handle 1-1B	PIPE, Frame to Pump 7-2;10-1
		PIPE, High Pressure Feed Line 5-4,5;10-1
	-L-	PIPE, Hose to Tee
	LEVER ASSEMBLY, Release 2-2	PIPE, Lift Arm 5-6 PIPE, Main 3-6
	LEVER, Control Valve 5-4; 6-1, 3; 10-1	PIPE, Main
	LEVER, Release 8-3A	PIPE, "U" Shape
	LINK, Chain Attaching 1-6	PIPE, Valve to Frame 5-6
	LINK, Control Valve to Lever 5-4; 10-1	PIPE, Valve to Hose
	LINK, Latch 2-3; 8-3A	PIPE, Valve Inlet 5-5
	LINK, Lever to Spool 6-3	PIPE, Valve to Tee 5-2
	LINK, Lever & Valve 6-1	PLATE ASSEMBLY, Material 8-4
	LINK, Locking 1-6	PLATE, Attachment 1-1A
	LIP, Cutting 8-5	PLATE, Dirt 8-1
	LOADER ARM WITH FRAME ASSEMBLY 2-2, 3	PLATE, Latch 8-4
	LUG, Mounting, Headlight 2-5	PLATE, Mounting, Valve5-4,5;10-1
		PLATE, Pressure 7-2
	-N-	PLATE, Suspension
		PLUG, Pipe
	NIDDI E Orifica	POST AND BASE
	NIPPLE, Orifice	PUMP ASSEMBLI
	NUT, Packing	
	2.0 2, 2	-R-
	-0-	RELEASE, Bucket 8-1
		RETAINER, "O" Ring 10-3A
	"O" RING 3-2,3,4,5,6;6-2,3,7-2;10-3A	RETAINER, Spring
		RING, Sealing 3-1,6-1,7-1,2
	-P-	RING, Snap
	PACKING, Cylinder 3-1,2,3,4,5,4-1,2	RING, Split
	PIN, Anchor	RING, Stop
	PIN ASSEMBLY, Adapter 9-3	ROD, Bucket Release 2-2,3
	PIN, Attaching, Cylinder 1-2; 2-2	ROD, Guide
	PIN, Axle	ROD, Leveling 2-1B
	PIN, Bucket	ROD, Release 8-3A
	PIN, Bucket Latch 8-1	ROD, Support
	PIN, Clevis 3-6	ROD, Tie
_	PIN AND CLIP 1-3,4;2-3,4	ROLLER, Latch Yoke 1-6



ALPHABETHICAL INDEX (Cont'd)

PART NAME	GROUP NO.	PART NAME GROUP NO.
ROTOR, Pump	7-2	TEE, Tubing
	William Killiam	TINE, Bucket 8-4
-s-	In A Late of the late	TINE, Manure Fork 8-6
		TUBE ASSEMBLY 3-6
SCREEN, Strainer		
SEAL ASSEMBLY, Oil	6-3	-U-
SEAL, Drive Shaft Bearing	7-2	
SEAL, Oil 6-2		U-BOLT, Bumper 1-4,5;10-1
SELEC-TROL, Valve		U-BOLT, Mounting Plate 5-4,5
SET SCREW, Coupling Flange		U-BOLT and PLATE ASSEMBLY 2-2
SHAFT, Cross		U-BOLT, Release Lever
SHAFT, Cylinder		UNION, Pipe 5-4,5,6;6-1;10-1
SHAFT, Drive	7-1,2;10-1,3C	
SHAFT and LATCH, Trip	8-1	-V-
SHAFT, Piston	3-4, 5, 6; 4-1, 2	WALVE ACCEMBLY Control 5 5.6 1 2 3.10 1
SHAFT, Trunnion, Lift Arm		VALVE ASSEMBLY, Control 5-5;6-1,2,3;10-1 VALVE ASSEMBLY, Needle 5-1
SHEAVE, Drive		VALVE ASSEMBLY, Shut-Off 5-2
SIDE MEMBER and CROSS BRACE		VALVE, Pump
SLEEVE, Bucket		VALVE, Relief
SLEEVE, Detent Ball		VANE, Rotor
SLEEVE, Ram Head		VANE, ROLOI
SPACER, Pipe		
SPACER, Piston Cup		-W-
SPACER, Spool		WASHER, Back-Up 3-6
SPRING, Check Valve		WASHER, Piston Cup 4-1,2
SPRING, Control Valve		WASHER, Pump
SPRING, Latch Pin		WASHER, Shaft 2-4
SPRING, Latch & Trip Lever	8-1	WASHER, Sheave 7-1
SPRING, Pressure Plate		WASHER, Spool 6-2,3;10-3A
SPRING, Relief		WASHER, Tension 7-1,2
SPRING, Return		WIPER, Packing Nut 3-2,3,4,5,6;4-1,2
SPRING, Spool		WRENCH, Packing Nut 3-2
SPRING, Tension	10-3A	THE STREET HE WAS TOO TO STREET THE STREET OF THE STREET O
STOP, Shaft		-Y- Hand manufacture
STRAINER ASSEMBLY		
STRUT, Lifting	1-6	YOKE, Cylinder 4-1,2
	The second of the second	YOKE & GUSSET ASSEMBLY 8-3
-T-		YOKE, Latch
		YOKE, Rod End 2-1B
TEE, 3/8 Pipe 3-6,5-	2,3,4,5;6-1,10-1	

RN Loaders
MODEL 19-7 (Prior)


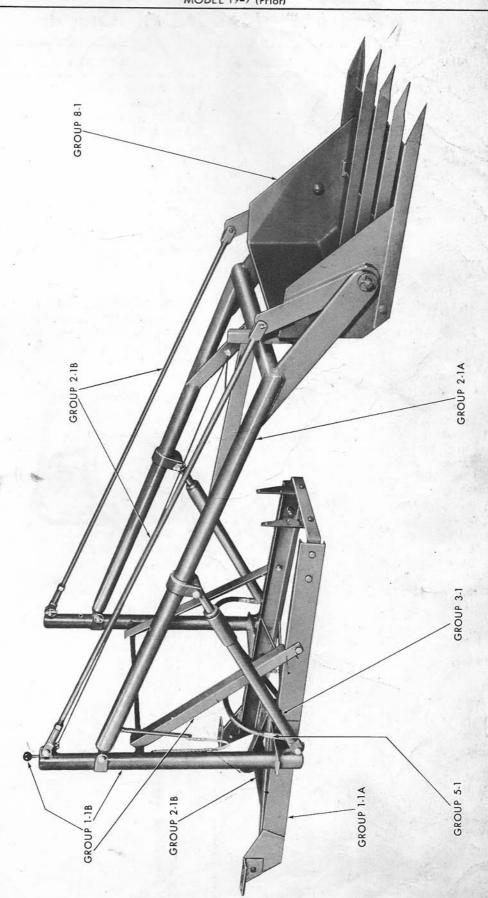



Figure 1 - Dearborn Standard Manure and Material Loader, Model 19-7 (Prior)

MODEL 19-8 (Prior)

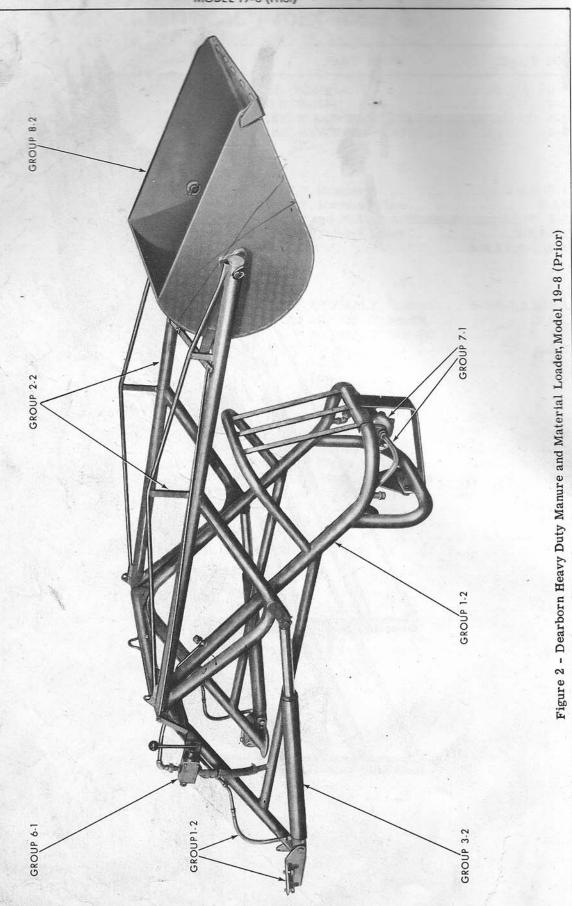

Loaders

MODEL 19-8A (Prior)

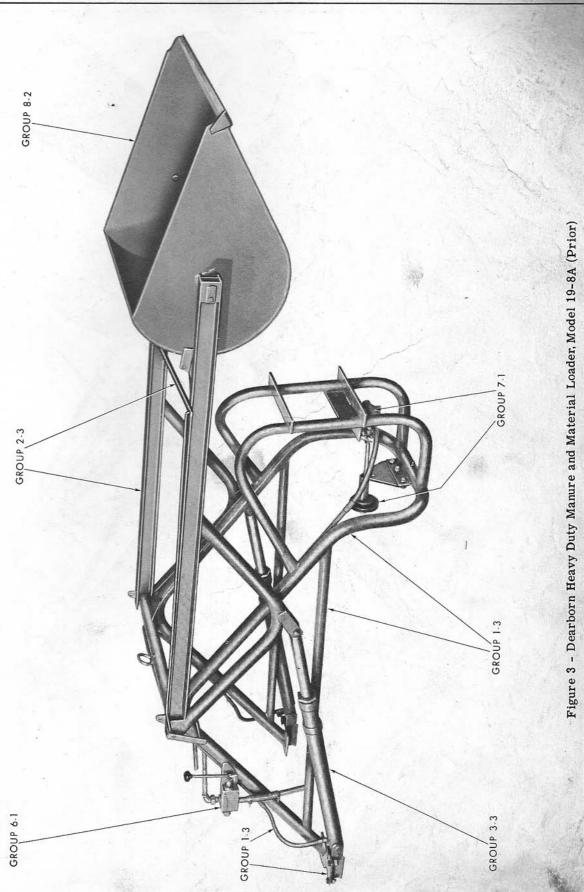


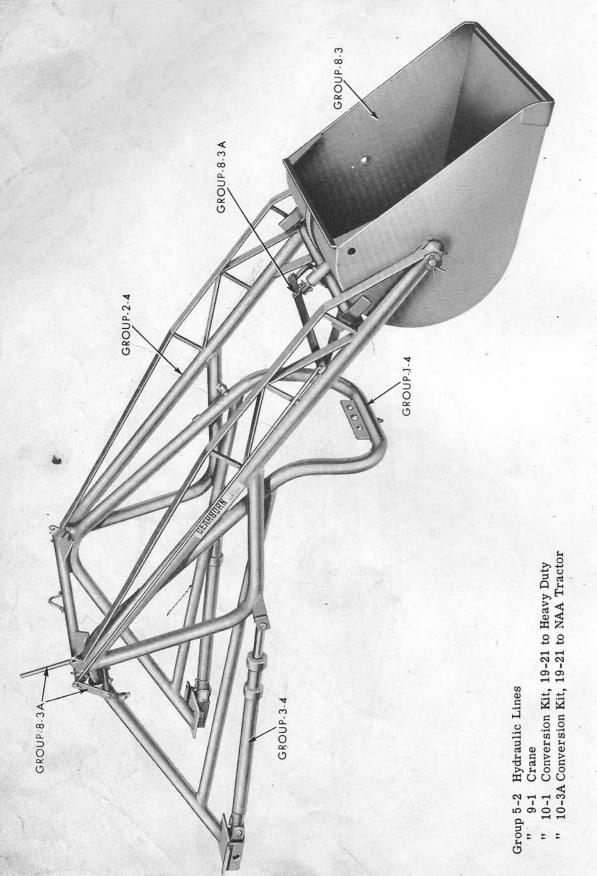


Figure 4 - Dearborn Standard Loader, Models 19-21, 59

oaders DEARBORN

MODELS 19-22, 60

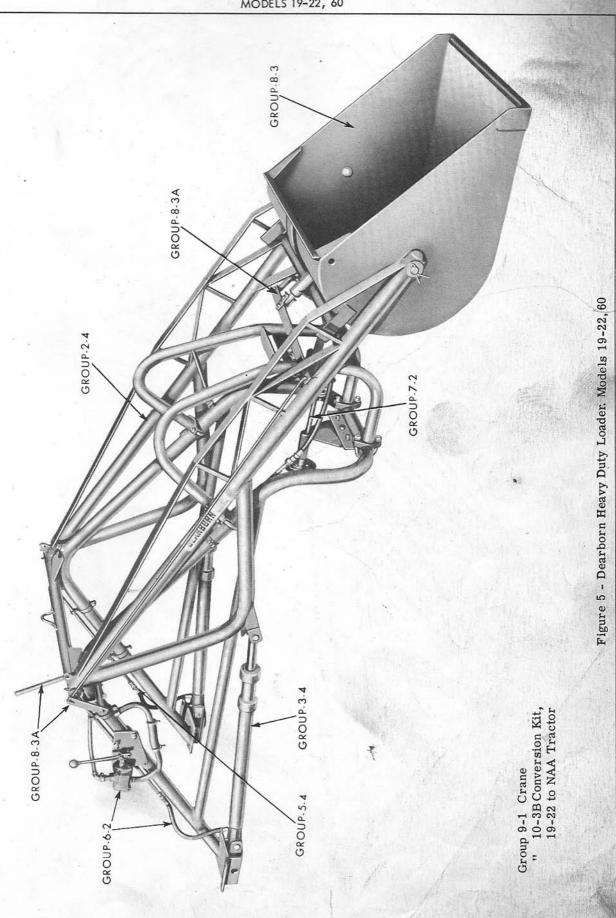

Loaders

MODEL 19-23 (Prior)

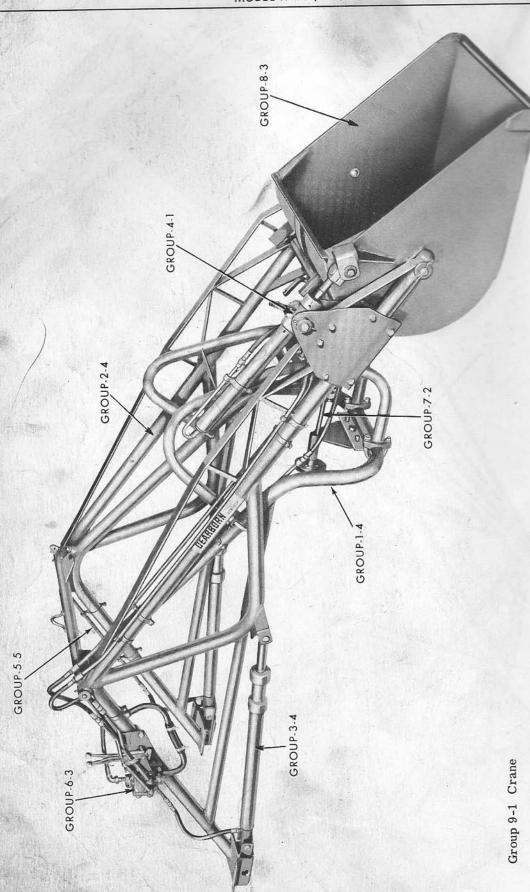


Figure 6 - Dearborn Heavy Duty Loader w/Hydraulic Bucket Control, Model 19-23 (Prior)

Loaders

MODELS 19-42 (Prior), 61 (Prior), 70, 71


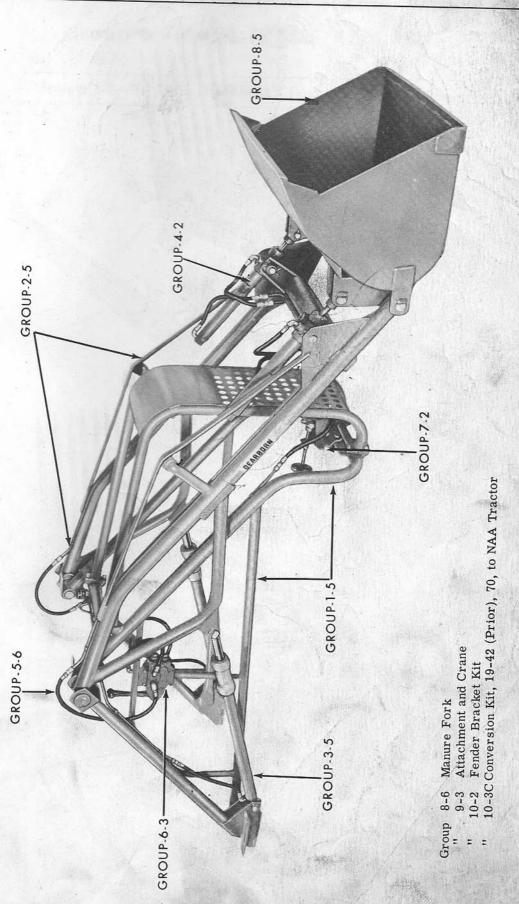


Figure 7 - Dearborn Industrial Loader, Models 19-42 (Prior), 61 (Prior), 70, 71 - (Model 19-71 Shown)

oaders DEARBORN

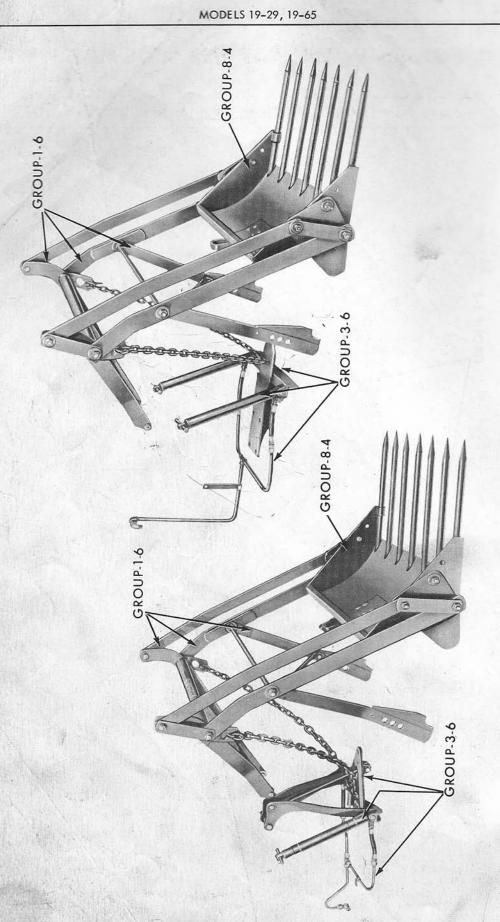

NEW

Figure 8 - Dearborn Rear Mounted Loader, Models 19-29, 19-65

OLD

Group 1-MAIN FRAME ASSEMBLIES

Group 1-1—FRAME ASSEMBLY For Model 19-7 (Prior)

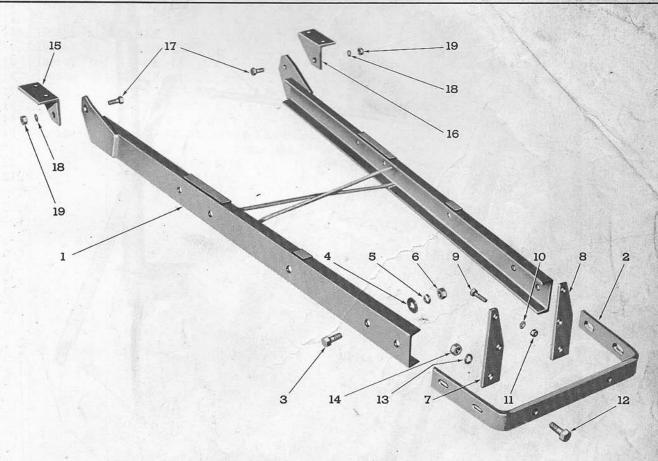


Figure 9 - Sub - Frame Assembly

FIG.	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 1-1A—SUB-FRAME ASSEMBLY	1
1 2 3 4 5 6	190541 190550	SIDE MEMBER and CROSS BRACE (Welded Assembly) CROSSMEMBER, Nose BOLT, 5/8 - 18 x 1-1/2 Hex. Hd. WASHER, 5/8 Plain LOCKWASHER, 5/8 Nose Member to Side Member	. 1
6 7 8 9 10	190551 190552	NUT, 5/8 - 18 Hex PLATE, Attachment, RH PLATE, Attachment, LH BOLT, 7/16 - 20 x 1-3/4 Hex. Hd. LOCKWASHER, 7/16 NUT, 7/16 - 20 Hex. Plate to Tractor	
12 13 14 15	190693	BOLT, 5/8 - 18 x 1-5/8 Hex. Hd. LOCKWASHER, 5/8 Plate to Nose Member NUT, 5/8 - 18 Hex. BRACKET, Stabilizer, RH	. 1/
16 17 18 19	190694	BRACKET, Stabilizer, LH BOLT, 5/8 - 18 x 1-5/8 Hex. Hd. LOCKWASHER, 5/8 NUT, 5/8 - 18 Hex. Bracket to Side Member	. 1

Coaders

MODEL 19-7 (Prior)

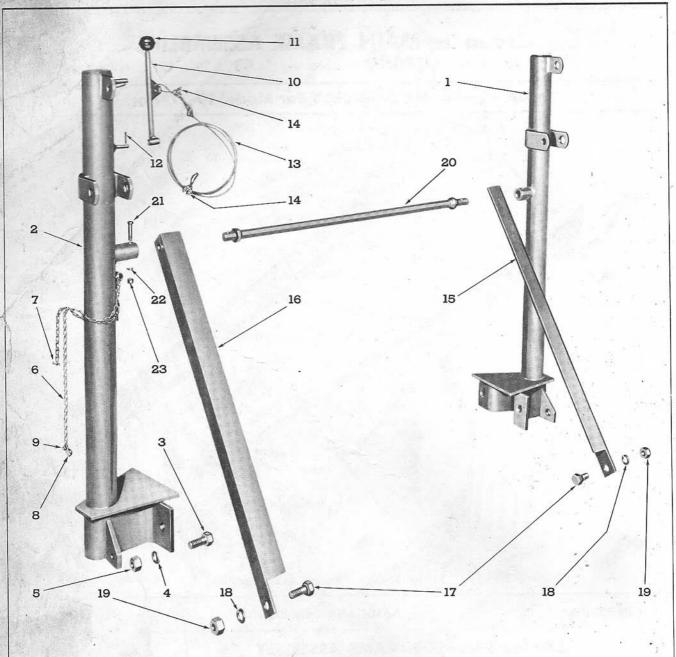


Figure 10 - Upright Posts and Attachments

FIG. 10	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 1-18—UPRIGHT POSTS AND ATTACHMENTS	-
1	190668	POST and BASE (Welded Assembly) LH	1
2	190669	POST and BASE (Welded Assembly) RH	
3		BOLT, 5/8 - 18 x 1-1/2 Hex. Hd.	
4		LOCKWASHER, 5/8 Post to Side Member	4
5		NUT, 5/8 - 18 Hex.	1
6	190672	CHAIN	1
7		COTTER PIN, 1/8 x 1-1/2 - Chain	1
8	190673	CLEVIS, Chain to Hydraulic Control Lever	
9		BOLT, 1/8 - 40 x 1/2 Sq. Hd. Clevis to Chain	1

FIG.	2122	MODEL 19-7 (Prior)	Omv
10	PART NO.	NAME AND DESCRIPTION	QTY REQ
10 11 11 12	190952 190708 190657	Group 1-1B—UPRIGHT POSTS AND ATTACHMENTS (Cont'd) HANDLE, Trip (Welded Assembly) 1/2 - 16 x 9. KNOB, Trip Handle, 1/2 - 16 Thd. (Used with Trip Handle with 16 Thd.) KNOB, Trip Handle, 1/2 - 24 Thd. (Used with Trip Handle with 24 Thd.) COTTER PIN, 1/8 x 1 - Handle to Post.	1 1 1 1
13 14 15 16 17 18 19 20 21 22 23	190651 190950 190571 190572	CABLE, Trip Lever to Handle CLAMP, Cable, 1/8 BRACE, LH. BRACE, RH. BOLT, 5/8 - 18 x 1-3/8 Hex. Hd. LOCKWASHER, 5/8 NUT, 5/8 - 18 Hex. CROSS BRACE (Welded Assembly) BOLT, 5/16 - 24 x 2 Hex. Hd. LOCKWASHER, 5/16 NUT, 5/16 - 24 Hex. Cross Brace to Post NUT, 5/16 - 24 Hex.	1 2 1 1 2 1 2
•			
			i i

MODEL 19-8 (Prior)

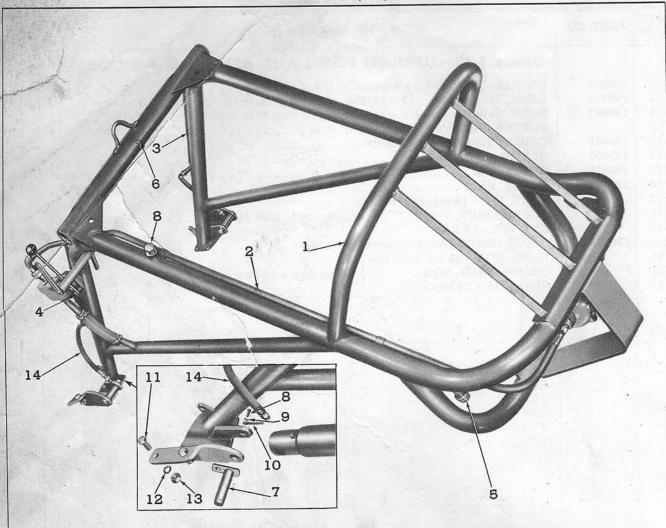


FIG. 11	PART NO.	NAME AND DESCRIPTION	QTY REQ
1 2	190270	Group 1-2—FRAME ASSEMBLY For Model 19-8 (Prior) FRAME, Main (Welded Assembly) Consists of Welded Frame which is not recommended for service. PIPE, Pump to Valve, 1/2 x 69	
3	190270	PIPE, U Shape, 3/8 x 77-1/2	. 1
4	190267	PIPE. Straight, 3/8 x 9-1/2	. 1
5	190276	CAP. Pipe - Oil Filler and Outlet	. 2
6		FITTING, Lube, 1/8 x 3/4 - Trunnion Pivot Tube	
7	190377	PIN and CLIP, Cylinder attaching	. 4
8		BOLT, 5/16 - 18 x 3/4 Hex. Hd. LOCKWASHER, 5/16 Pin to Cylinder to Frame	4
9			
10	**	COTTER PIN, 5/16 x 2	
11	W. S. S. Market	BOLT, 5/8 - 11 x 1-3/4 Hex. Hd. LOCKWASHER, 5/8 Fender to Mtg. Bracket	. 4
12			
13		NUT, 5/8 - 11 Hex.	. 2
14	192114	HOSE, Hydraulic, 3/8 x 18 (Equalizer Pipe to Cylinder)	T
	192115	ADAPTER, Hose Equalizer Pipe to Cylinder	

MODEL 19-8A (Prior)

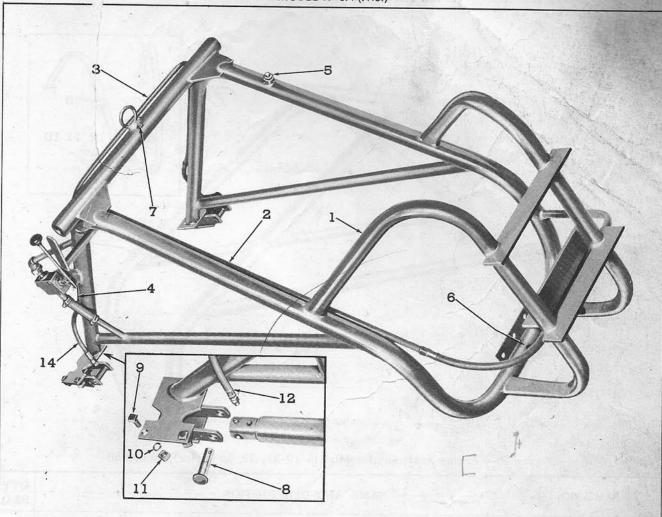


Figure 12 - Frame Assembly for Model 19-8A (Prior)

FIG. 12	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
•		Group 1-3—FRAME ASSEMBLY For Model 19-8A (Prior)	
1		FRAME, Main, (Welded Assembly)	1,
2	190388	PIPE, Pump to Valve, 1/2 x 66	1
3	190391	PIPE, U Shape, 3/8 x 73-3/4	1
4	304378	PIPE, Straight, 3/8 x 10	1
5		PLUG, Pipe, 3/4, Sq. Hd Oil Filler	1
6	358039-S	PLUG, Pipe, 3/8, Sq. Hd Drain	1
-	190488	PLUG, Pipe, 1/8, Sq. Hd Air Vent	1
7		FITTING, Lube, 1/8 x 3/4 - Trunnion Pivot Tube	
8	192544	PIN, Rivet, 1 x 4-1/2 - Cylinder Attaching	1 2
-	MARK NO.	WASHER, Flat	10000000
-		COTTER PIN, 5/16 x 2 Pin to Cylinder to Frame	2
9		BOLT, 5/8 - 11 x 1-1/2 Sq. Hd.	0.74
10		LOCKWASHER, 5/8 Fender to Mtg. Bracket	4
11		NUT, 5/8 - 11 Sq	
12	192114	HOSE, Hydraulic, 3/8 x 18 (With Couplings) Equalizer Pipe to Cylinder	2
-	192115	ADAPTER, Hose, Equalizer Pipe to Cylinder	2
			1
000	TA IT IS		

Loaders

MODELS 19-21, 22, 23 (Prior), 59 and 60

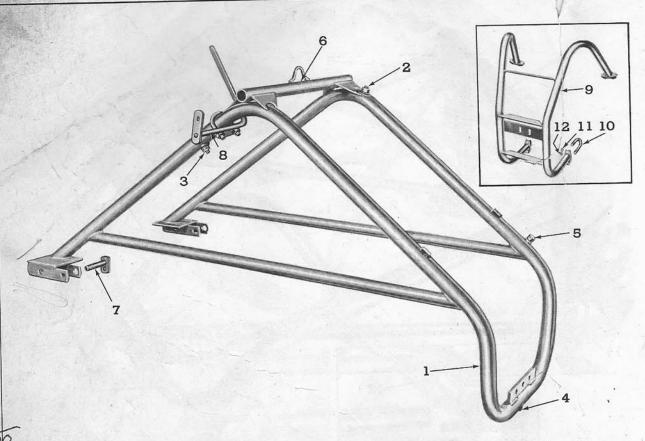


Figure 13 - Frame Assembly for Models 19-21, 22, 23 (Prior), 59, and 60

FIG.	PART NO.	NAME AND DESCRIPTION	QTY REQ
		Group 1-4—FRAME ASSEMBLY For Models 19-21, 22, 23 (Prior), 59 and 60	
1 - 2 3 4 5 6	193603 190488 190487 358039-S 192521	FRAME, Main (Welded Assembly). PLUG, Pipe, 1/8 - 27 Sq. Hd Air Vent. PLUG, Pipe, 3/4 - 14 Sq. Hd Oil Filler PLUG, Pipe, 3/4 - 14 Sq. Hd Oil Inlet (Model 19-21 Only) PLUG, Pipe, 3/8 - 18 Sq. Hd Oil Drain. CAP, Pipe, 3/4 - 14 Sq. Hd Oil Return (Model 19-21 Only). FITTING, Lube, 1/8 - 27 Str Lift Arm Trunnion	1 1 1 1
7 - 8 9 10 11 12	190377	PIN and CLIP, Anchor (Staked Assembly), 3-3/4 Pin Length BOLT, 5/16 - 18 x 1/2 Hex. Anchor Pin LOCKWASHER, 5/16 See Figure 44, Page 73 - Release Assy. BUMPER, Loader (Welded Assembly) for Models 19-22, 23 (Prior), and 60 U-BOLT, 1/2 - 13 LOCKWASHER, 1/2 NUT, 1/2 - 13, Hex. Bumper to Frame	1 4 8
	194369 194370 191338 192153 194365 194241	BRACKET, Mounting, Axle RH. For Models 19-59, 60 BRACKET, Mounting, Axle, for Models 19-21,22,23 (Prior). BOLT, 5/8 - 11 x 1-1/2 Sq. Hd. LOCKWASHER, 5/8 NUT, 5/8 - 11 Sq. Hd. PLATE, Suspension (Welded Assembly) For Models 19-21, 22, 23 (Prior) PLATE, Suspension (Welded Assembly) For Model 19-59 PLATE, Suspension (Welded Assembly) For Model 19-60	4 1 1

MODELS 19-42 (Prior), 61 (Prior), 70, 71

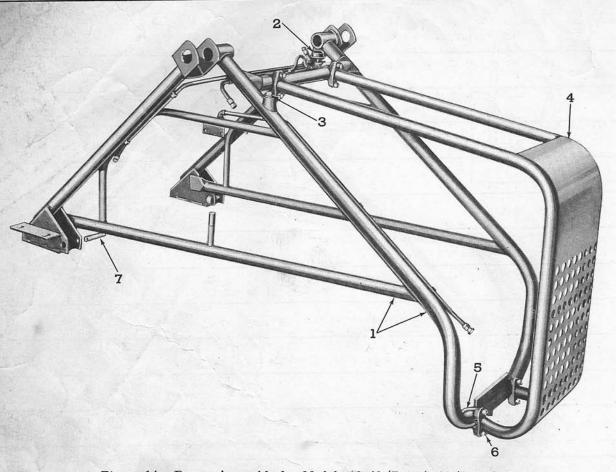


Figure 14 - Frame Assembly for Models 19-42 (Prior), 61 (Prior), 70, 71


FIG. 14	PART NO.	NAME AND DESCRIPTION		ΓY. ΞQ.
		Group 1-5—FRAME ASSEMBLY For Models 19-42 (Prior), 61 (Prior), 70 & 71	9-42,61	9-70,71
1 1	194496 192846	FRAME, Main (Welded Assembly) Less Hydraulic Lines	4	1 - 4
3 - 4 5 - 6	193963 193908 191475	PLUG, Pipe, 1-11 Sq. Hd Oil Filler PLUG, Pipe, 3/8 - 18 Sq. Hd Oil Drain PLUG, Pipe 1/2 Extend Hd Oil Drain BUMPER, Loader (Welded Assembly) U-BOLT, 1/2 - 13 LOCKWASHER NUT 1/2 - 13 Hex	1 1 4 8 8	1 1 1 4 8
7	193916	PIN, Pivot, $1 \times 3-7/16$ COTTER PIN, $1/4 \times 1-1/2$ Frame to Cylinder to Lift Arm	2	2

NOTE:

For maximum strength, there will be shipped with each Model 19-70,71 Loader, four (4) each of the following standard parts to be used instead of the regular Ford fender bolt set.

300385 Bolt, 5/8-11x6-1/2Carr. Heat Treated
Lockwasher, 5/8
Nut, 5/8-11 Hex

194387

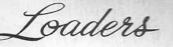

MAIN FRAME REPLACEMENT

To replace the frame on a Model 19-42 or 61 Loader with the new frames used on Model 19-70 and 71 Loaders, it will be necessary to furnish the following parts:

Part No.	Description Qty	7.
194496	Main Frame 1	
194153	Pipe, Pump to Valve 1	
194383	Hose, $1 \times 8-1/2$ - Valve to Frame 1	
192846	Cap, Air Filter 1	
194142	Nipple Pipe, 1x3 (Frame to Hose) 1	
194147	Pipe, Pump, 1x8(Formed) 1	
194145	Hose, $1-1/4 \times 4-1/4 \dots 1$	
8CM-8287	Clamp, Hose	

The additional parts that follow are required for Loaders with Serial Numbers as listed:

	Serial No. 4042, on Model 19-42 Serial No. 4042, on Model 19-61	
194478	Pipe, U-Shape (Equalizer)	1
194476	Pipe, Valve to Lift Arm	
194480	Hose, Hydraulic 3/8 x 32 - Valve to Arm Pipe	
		400000

Hose, Hydraulic 3/8 x 22 - Pipe to Lift Arm Pipe.

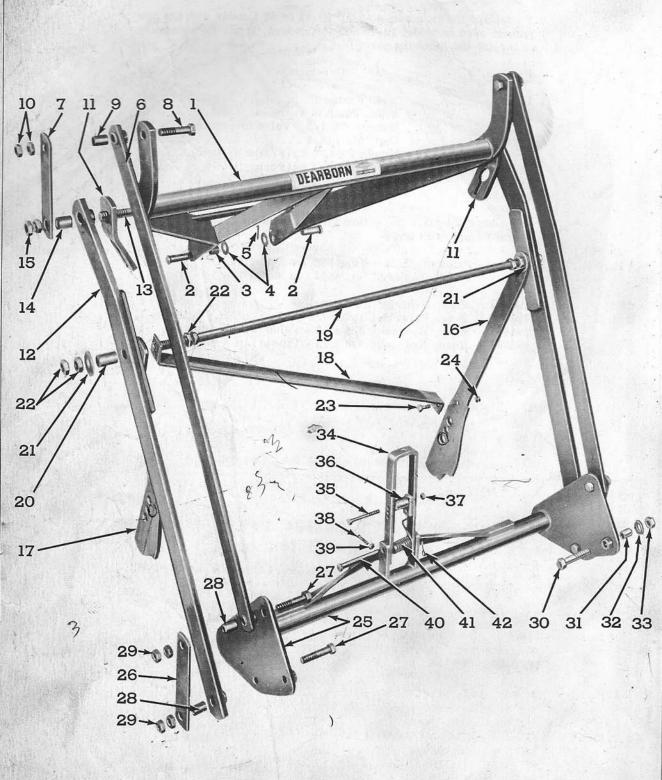


Figure 15 - Frame Assembly for Models 19-29, 65

		MODELS 19-29, 65	
FIG. 15	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 1-6—FRAME ASSEMBLY For Models 19-29, 65	
1 2 3 4 5	192410 194009 192429	FRAME ASSEMBLY, Upper Link (Welded Assembly). PIN, 3/4 x 2-9/16 Str. SPACER, 3/4 ID x 1 OD x 3/4 WASHER, 3/4 Flat COTTER PIN, 1/4 x 1-1/2 Frame to Tractor.	1 2 1 2 2
- 6 7 8 9	192390 192385 192391 192426	ARM ASSEMBLY, Upper Control, R.H. ARM ASSEMBLY, Upper Control, L.H. LINK, Upper Locking BOLT, 5/8 - 11 x 2-3/4 Hex. Hd. SPACER, 5/8 ID x 13/16 OD x 1.067 NUT, 5/8 - 11 Hex. Jam Frame to Arm to Upper Link	1 1 2 2 2 2 4
11 12	192424 192380 192370	LINK, Chain Attaching	2 1 1
13 14 15	192430 192427	RED, Tie, Upper Link Frame SPACER, 3/4 ID x 1 OD x 1.067 NUT, 3/4 - 10 Hex. Jam Frame to Link to Lower Arm	1 2 4
16 17 18	192400 192395 192402	STRUT, Lifting, R.H. (Welded Assembly) STRUT, Lifting, L.H. (Welded Assembly) BRACE, Lifting Strut Cross	1 1 1
19 20 21 22	192430 192405	ROD, Tie, Lifting Struts and Brace	1 2 3 8
23 24		BOLT, 7/16 - 14 x 1-1/4 Hex. Hd. NUT, 7/16 - 14 Hex. Cross Brace to R.H. Lifting Strut	1
25	192350	CRADLE, Bucket (Welded Assembly)	1
26 27 28 29	192392 192426	LINK, Lower Locking	2 4 4 8
30 31 32 33	192428	BOLT, 5/8 - 11 x 2-1/4 Hex. Hd. SPACER, 5/8 ID x 13/16 OD x 7/8 WASHER, 5/8 Flat NUT, 5/8 - 11 Hex. Jam Cradle to Bucket Assembly	2 2 2 4
34 35 36	192361 192363	YOKE, Latch (Welded Assembly) BOLT, 3/8 - 16 x 3-1/4 Hex. Hd. ROLLER, Latch Yoke	1
37 38 39	192366	SPACER, 3/8 ID x 9/16 OD x 1-1/4 Roller to Yoke NUT, 3/8 - 16 Hex. SET SCREW, 5/16 - 18 x 1-1/8 Sq. Hd. NUT, 5/16 - 18 Hex. Jam Roller to Yoke Latch Angle Control	1
40 41 42	193976 192364	PIN, 1/2 x 4 Clevis SPRING, Return, Latch Yoke COTTER PIN, 1/8 x 1	1

MODEL 19-7 (Prior)

Group 2-LIFT ARM ASSEMBLIES

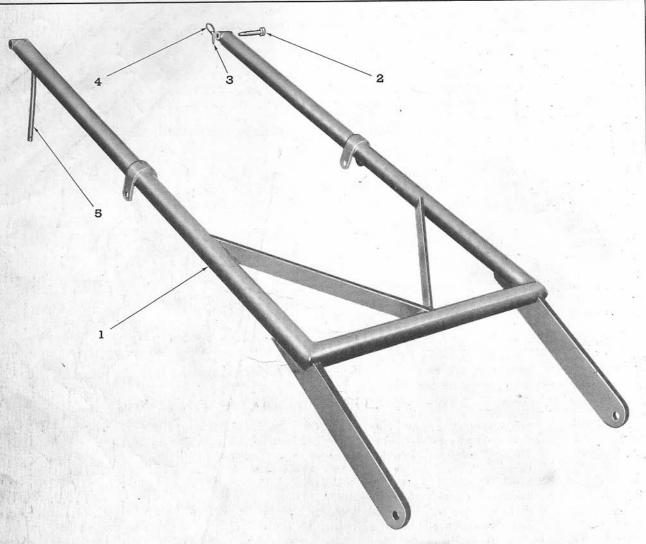


Figure 16 - Loading Arm Assembly for Model 19-7 (Prior)

FIG. 16	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
1	190573	Group 2-1—LIFT ARM ASSEMBLY For Model 19-7 (Prior) Group 2-1A LOADING ARM ASSEMBLY ARM, Loader (Welded Assembly)	1
2	190677 2 N-574	PIN, Attaching, 3/4 x 5-7/16	4
4 5	2 N-575 190577	RING, Snap	4

Loaders

MODEL 19-7 (Prior)

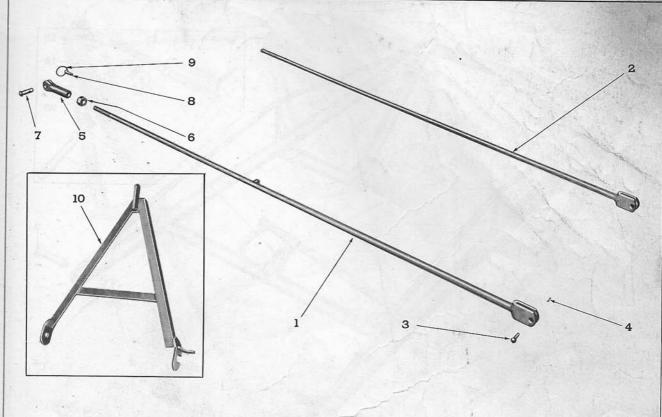


Figure 17 - Leveling Rods and Holddown Assembly for Model 19-7 (Prior)

FIG. 17	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
1 2 3 3 4 5 6 7 8 9 10	190953 190954 192075 300082 191140 190678 2 N-574 2 N-575 190658	Group 2-1B—LEVELING RODS AND HOLD-DOWN ROD, Leveling (Welded Assembly) R.H. ROD, Leveling (Welded Assembly) L.H. PIN, 3/8 x 1-1/4 (Drilled Rivet) (Used with Rod with 7/16 Hole). PIN, 1/2 x 1-5/8 (Drilled Rivet) (Used with Rod with 9/16 Hole). COTTER PIN, 1/8 x 1 - Rod to Bucket YOKE, Rod End (Welded Assembly). NUT, 7/8 - 9 Hex Yoke to Rod. PIN, Attaching, 3/4 x 3-1/4 PIN, Linch RING, Snap HOLDDOWN (Welded Assembly) (For Lift Links on Tractor).	1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 1
			1 1 1 1 1 1 1

MODEL 19-8 (Prior)

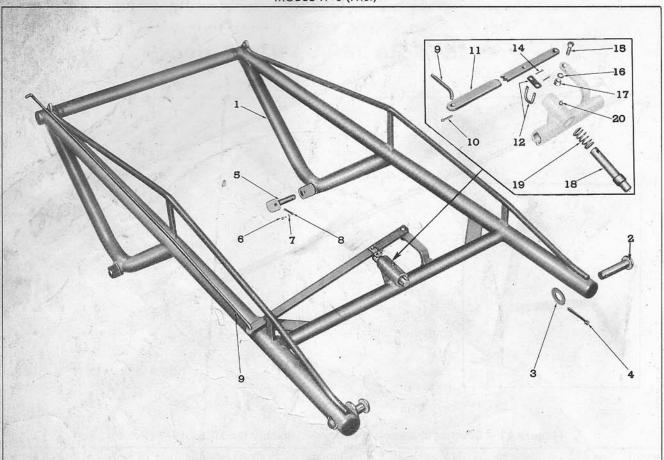


Figure 18 - Lift Arm Assembly for Model 19-8 (Prior)

FIG. 18	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 2-2—LIFT ARM ASSEMBLY	
1	A SERVE	ARM, Loader (Welded Assembly) PIN, Attaching, Bucket, 1 x 4-1/2	1
2	192544	PIN, Attaching, Bucket, 1 x 4-1/2	2 2
3		WASHER, 1 Flat	2
4		COTTER PIN. 1/4 x 2 Pin to Bucket	4
5	190377	PIN and CLIP, Cylinder attaching	4
6		BOLT, 5/16 - 18 x 3/4 Hex. Hd.	
7		LOCKWASHER, 5/16 Pin to Cylinder	4
8		COTTER PIN, 5/16 x 2	100
9	190310	ROD, Release, Bucket	1
10	100010	COTTER PIN, 1/8 x 1 - Release Rod	2
11	190331	BAR, Latch Control	1
12	90338	- N. Tand DIATE ASSEMBLY - Latch Bar to Latch Din	1
	00000	Ground PLATE ASSEMBLY - Latch Bar to Latch Pin	2
		10 11 1/2 - 0 - Dott	
APP.		Group /2 - 13 x 1-3/4 Hex. Hd. Bar to Pivot Bar	1
1	190573	ARM, Load 13 Hex.	1.
2	190677	PIN, Attach, (Welded Assembly)	1
3	2 N-574	PIN Lines and Disch Bis	1
4	2 N-575	PIN, Line Latch Pin RING Sna Lube 1/0 - 2/4 Latel Warring	1
5	190577	RING, Sna Lube, 1/8 x 3/4 - Latch Housing	1
	130011	ARM, Heigelease (Welded Assembly)	1
		Release Lever	1.
OF THE	MAN BELLEVILLE		
The Street			
			0/8
100 C 10 T			

MODEL 19-8A (Prior)

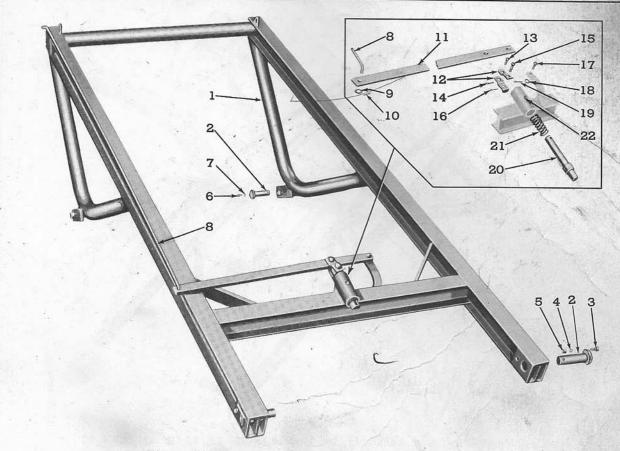


Figure 19 - Lift Arm Assembly for Model 19-8A (Prior)

FIG.	PART NO.	NAME AND DESCRIPTION	QTY.
		Group 2-3—LIFT ARM ASSEMBLY	
-1		ARM, Loader (Welded Assembly)	
2	192544	PIN, Rivet, 1 x 4 1/2 - Attaching	1 4
3		BOLT, 5/16 - 18 x 3/4 Sq. Hd.	7
4		LOCKWASHER, 5/16 Pin to Lift Arm to Bucket (Old Pin & Clip)	2
5		NUT 5/16 - 18 Sq	
6		BOLT, 5/16 - 18 x 1/2 Hex. Hd. LOCKWASHER, 5/16 - 18 Pin to Lift Arm to Cylinder (Old Pin & Clip)	0
7 8	190351	DOD Below B. 18 James But At III to Cymider (Old Pin & Clip)	2
9	190991	ROD, Release, Bucket	1
10		WASHER, 3/8 Plain COTTER PIN, 1/8 x 3/4 Release Rod	2
11	190331	BAR Latch Control	CATALOG SERVICE
12	190353	BAR, Latch Control	1
13	300115	LINK, Latch	2
14		PIN, 3/8 x 1-1/2 (Drilled Rivet) COTTER PIN, 1/8 x 3/4 Link to Bar	1
15	300095	PIN. 3/8 x 1-1/4 (Drilled Rivet) 1	
16		COTTER PIN, 1/8 x 3/4 Link to Latch Pin	1
17	300116	PIN, 3/8 x 1 (Drilled Rivet)	4
18		COTTER PIN, 1/8 x 3/4 Bar to Pivot Bar	1
19		WASHER, 3/8 Plain	
20	190359	PIN, Latch (Welded Assembly)	1
21	190339	SPRING, Latch Pin	i
22		FITTING, Lube, 1/8 x 3/4 - Latch Housing	1
			7 2
	The state of the s		2345
10000			Carlot Land

DEARBORN Loaa

MODELS 19-21, 22 and 23 (Prior), 59 & 60

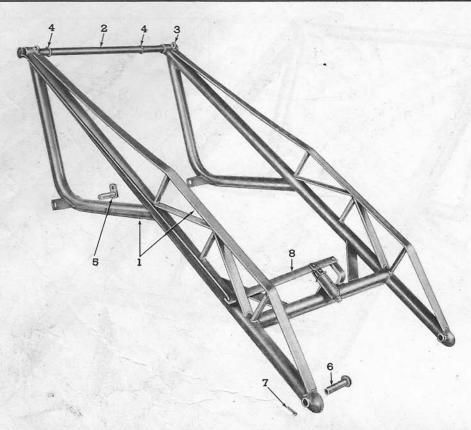


Figure 20 - Lift Arm Assembly, for Models 19-21, 22, 23 (Prior), 59 & 60

STELLING!			
FIG. 20	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 2-4—LIFT ARM ASSEMBLY For Models 19-21, 22, 23 (Prior), 59 and 60	
1 - 2 3 4 -	191463 192580 * 192583 192251	ARM ASSEMBLY, Loader	1 1
5 -	191360	PIN & CLIP, Anchor (Welded Assembly) (Pin Lgth. 2-7/8) BOLT, 5/16 - 18 x 1/2 Hex. Hd. Anchor Pin	74 5 6 6
6 - 7 8 -	192544	PIN, Anchor, Bucket (Rivet 1 x 4-1/2 Rd. Hd. Drld.) WASHER, 1 Flat. COTTER PIN, 1/4 x 1-1/2 - Anchor Pin. RELEASE ASSEMBLY (See Figure 44)	2 2 2
		e on Model 19-21 Serial #3095, Model 19-22 Serial #12467, and Model 19-23 Serial Prior to the above, the following Trunnion Shaft was used:	-
4 4	190495	SHAFT, Trunnion, Lift Arm - 1-1/2 x 39	1

Loaders

MODELS 19-42 (Prior), 61 (Prior), 70, 71

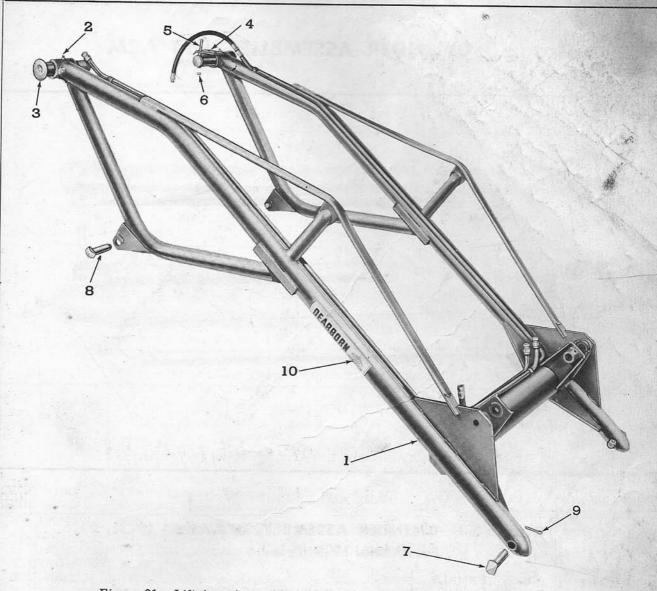


Figure 21 - Lift Arm Assembly for Models 19-42 (Prior), 61 (Prior), 70, 71

FIG. 21	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 2-5—LIFT ARM ASSEMBLY For Models 19-42 (Prior), 61 (Prior), 70 & 71	
1 - 2	194568 194497	ARM, Loader (Welded Assembly) (Model 19-70, 71) (Less Pipes)	1 1 2
3 4 5 6	193888 193991	PIN, Pivot, Arm LUG, Mounting, Headlight BOLT, 3/8 - 16 x 3-1/2 Hex. Hd. NUT, 3/8 - 16 Hex. Lug and Pin to Frame	2 2 2
7 8 9	193915 193916	PIN, Pivot, 1 x 4-5/16 - Bucket to Lift Arm PIN, Pivot, 1 x 3-7/16 - Cylinder to Lift Arm and Frame. COTTER PIN, 1/4 x 1-1/2 - Pivot Pin	2 4 6
10	112220	DECAL, 2-1/8 x 11 (Dearborn Equipment)	1

Group 3 CYLINDER ASSEMBLIES, LIFT ARM

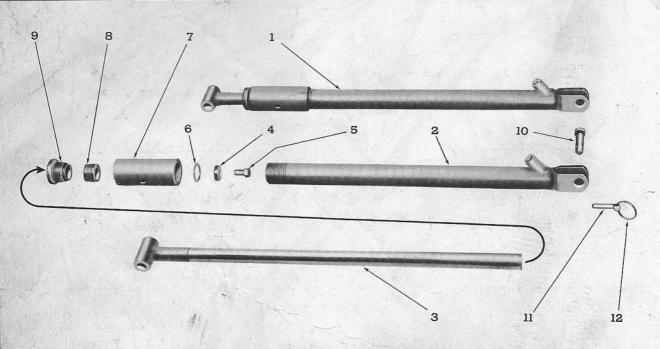


Figure 22 - Cylinder Assembly, Lift Arm, for Model 19-7 (Prior)

G.	PART NO.	NAME AND DESCRIPTION	QT RE
		Group 3-1—CYLINDER ASSEMBLY, LIFT ARM	
		For Model 19-7 (Prior)	
	100500	HOIST ASSEMBLY	2
	190583	Consists of:	4
	190584	CYLINDER, (Welded Assembly)	2
90	190589	SHAFT, (Welded Assembly)	1
2	190591	RING, Stop, Cylinder Shaft	2
CO.	NATE OF	BOLT, 5/8 - 18 x 1 Hex. Hd Ring to Cylinder Shaft	
10000	190592 190951	RING, Seal	
	190951	PACKING, (Set of 1 Solid Ring and 10 Packings 1-3/8 I.D.)	
1	190597	NUT, Packing	
	190679	PIN, Attaching, 3/4 x 2-13/16	
1	2 N-574	PIN, Linch	
	2 N-575	RING, Snap	1
1			1886
4			1
1	KI WALLEY		13
1			
	建建设层头似		

MODEL 19-8 (Prior)

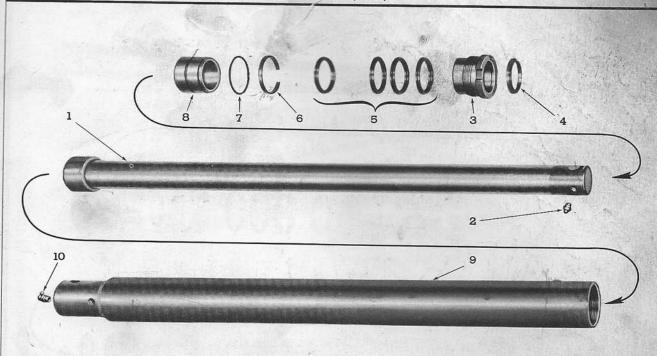


Figure 23 - Cylinder Assembly, for Model 19-8 (Prior)

FIG. 23	PART NO.	NAME AND DESCRIPTION	QTY
1 2 3 4 5 6 7 8 9 10 	190741 190417 190418 190747 190742 190743 190416 190740	Group 3-2—CYLINDER ASSEMBLY For Model 19-8 (Prior) NOTE: When replacing complete Hoist Assembly, use Part No. 190459, listed on page 38. SHAFT (Welded Assembly) FITTING, Lube, 1/8 - 27 Str Shaft NUT, Packing WIPER, Packing Nut PACKING (Complete Set of 4). RING, Split (Steel) "O' RING (Rubber) RING, Stop (Steel) CYLINDER (Welded Assembly) FITTING, Lube, 1/8 - 27 Str Cylinder WRENCH, Packing Nut (For Item No. 3)	2 2 2 2 2 2 2 2 2 2 2 2 1

Loaders

MODEL 19-8A (Prior)

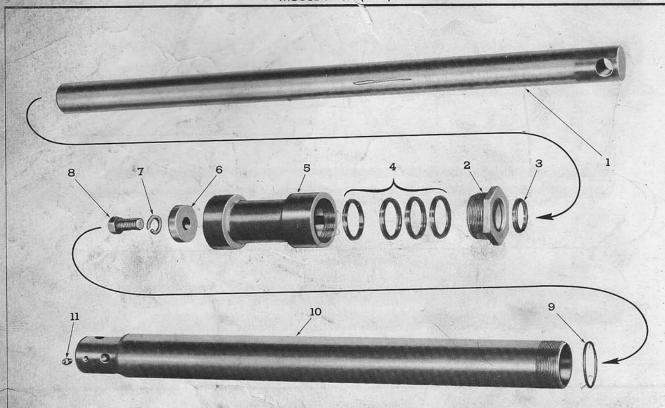


Figure 24 - Cylinder Assembly, Lift Arm, for Model 19-8A (Prior)

FIG.	PART NO.	NAME AND DESCRIPTION	QTY. REQ
#8575CSGF-8	190459 190463 190469 190471 190747 190467 190466 190465 190470 190460	Group 3-3—CYLINDER ASSEMBLY, LIFT ARM For Model 19-8A (Prior) CYLINDER ASSEMBLY, Hydraulic Hoist Consists of: SHAFT, Piston. NUT, Packing WIPER, Packing Nut PACKING (Complete Set of 4) BOX, Stuffing STOP, Shaft LOCKWASHER, 3/4 BOLT, 3/4 - 16 x 1-1/2 Hex. Hd. "O'" RING (Rubber) CYLINDER (Welded Assembly) FITTING, Lube, 1/8 - 27 Str Cylinder and Shaft	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2

Loaders

MODELS 19-21, 22, 23 (Prior), 59 & 60

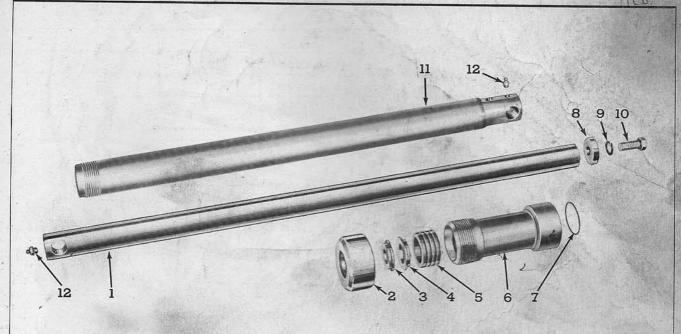


Figure 25 - Cylinder Assembly, Lift Arm, for Models 19-21, 22, 23 (Prior), 59, & 60

FIG. 25	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 3-4—CYLINDER ASSEMBLY, LIFT ARM For Models 19-21, 22, 23 (Prior), 59 and 60	
	100000		
770	192088	CYLINDER ASSEMBLY, Hydraulic Hoist	2
1 *	192125	SHAFT, Piston	2
2	192132	NUT, Packing	2
3	192130	WIPER, Packing Nut (Leather)	2
4	192129	GLAND, Packing Nut Wiper	2
5	192150	PACKING, (Complete Set of 4)	2
6 7	192127 192131	BOX, Stuffing	2
8	192126	"O" RING	2
9	102120	STOP, Shaft	2 2
10		BOLT, 5/8 - 18 x 1-1/2 Hex. Hd.	2 2
11	192122	CYLINDER (Welded Assembly)	2
10			
12		FITTING, Lube, 1/8 - 27 Str Cylinder and Shaft	4
		(21 21 A)	1.00
		CONN31717A	1
		7	1
		3	10
	*		10
		2/14	100
			100
			1

Loaders

MODELS 19-42, (Prior), 61 (Prior), 70, 71


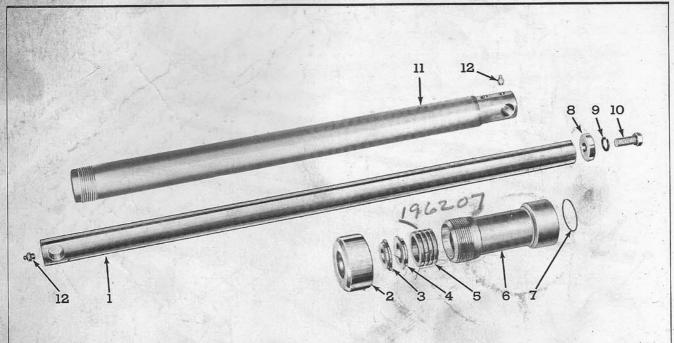


Figure 26 - Cylinder Assembly, Lift Arm, for Models 19-42 (Prior), 61 (Prior), 70, 71

FIG. 26	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 3-5—CYLINDER ASSEMBLY, LIFT ARM For Models	
	E CONTRACTOR	19-42 (Prior), 61 (Prior), 70 & 71	
-	193946	CYLINDER ASSEMBLY, Hydraulic Hoist	2
1.	193949	SHAFT, Piston 1-3/4 x 38-7/8	2
2 3	193953	NUT, Packing	2
4	193957	GLAND, Packing Nut Wiper	2
5	193954	PACKING (Complete Set of 4)	2 2 2 2 2 2 2
6	193952	BOX, Stuffing	2
7	192131	"O" RING	2
8 9	192126	LOCKWASHER, 5/8	2
10		BOLT, 5/8 - 18 x 1-1/2 Hex. Hd	2
11	193947	CYLINDER (Welded Assembly)	2
12		FITTING, Lube, 1/8 - 27 Str Cylinder and Shaft	4
1			
	A X MAN		
			1
			FR

Coaders

MODELS 19-29, 65

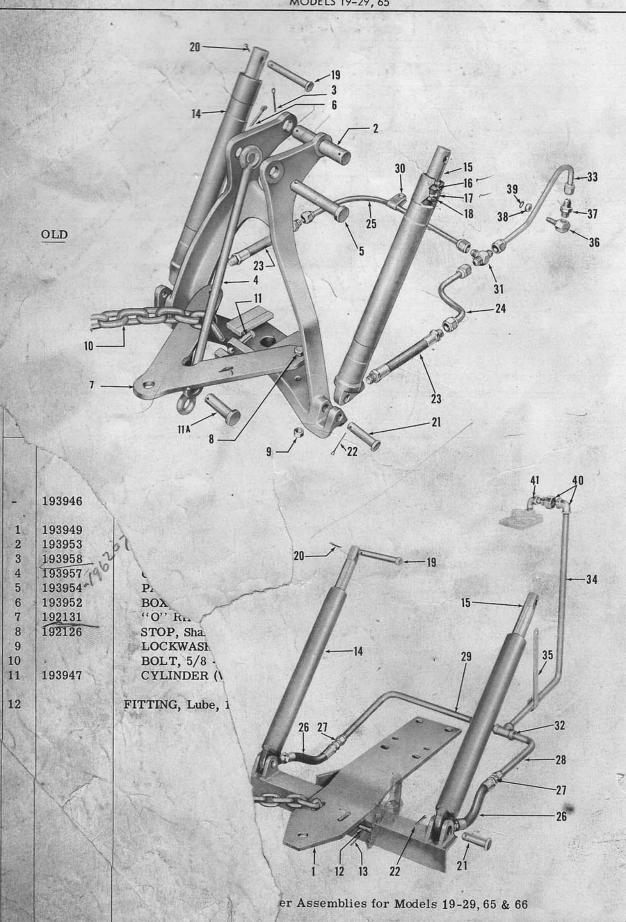


Loaders

PART NO. NAME AND DESCRIPTION REQ.		MODELS 19-29, 65,&66				
For Models 19-29, 65 and 66	FIG. 27	PART NO.	NAME AND DESCRIPTION	70 to 50 to	## 1000 PM	
1 194434 BRACKET, Cylinder (Welded Assembly)			Group 3-6—HYDRAULIC BOOSTER ASSEMBLIES For Models 19-29, 65 and 66	9-65	99-6	
2 192466 PIN, 1 x 4 - 3/4 Drild, Headless COTTER PIN, 1/8 x 1 - 1/2 Rod to Bracket to Tractor 1 1 1 1 1 1 1 1 1	1	194434	BRACKET, Cylinder (Welded Assembly)		1	
4 192470 ROD, Support 1 5 193831 PIN, 3/4 x 4-1/2 Clevis COTTER PIN, 5/32 x 1-1/2 Rod to Bracket 1 1 1 1 1 1 1 1 1	111243	A CARLES AND SALES	PIN, 1 x 4-3/4 Drld. Headless Reacket to Tractor	1	1	
5	1000	100470	COTTER PIN, 1/8 x 1-1/2 Bracket to Fractor			
COTTER PIN, 5/32 x 1-1/2 Rod to Bracket 1 1 1 1 1 1 1 1 1	() () () () () () () ()	Control of the Contro				
192465	30.00	193031				
BOLT, 1/2 - 13 x 1-1/2 Hex. Hd. Hitch to Bracket 2 10 193990 CHAIN, 5/16 x 37-1/2 - Attaching Strap Link 2 2 2 2 2 2 2 2 2	100.000	192465	HITCH, Implement Attaching (Prior to Serial #5202)			
193990	8		BOLT, 1/2 - 13 x 1-1/2 Hex. Hd.]			
PIN, 7/16 x 2-5/8 Clevis COTTER PIN, 1/8 x 1 PIN, 3/4 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN, 3/8 x 4 COTTER PIN, 1/8 x 1/2 Chain to Cylinder Bracket 1 COTTER PIN, 1/8 x 1/2 Chain to Cylinder Bracket 1 COTTER PIN, 3/8 x 4 COTTER PIN, 1/8 x 1/2 Chain to Cylinder Bracket 1 COTTER PIN, 1/8 x 1/2 Chain to Cylinder Bracket 1 COTTER PIN, 1/8 x 1/2 Chain to Cylinder Bracket 2 CONSISTS of Body which is not serviced separately plus items listed below: SHAFT, Piston 2 2 CONSISTS of Body which is not serviced separately plus items listed below: SHAFT, Piston 2 2 2 CONSISTS of BODY which is not serviced separately plus items listed below: SHAFT, Piston 2 2 2 COTTER PIN, 1/8 x 1 PIN, 5/8 x 4-33/64 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 4-33/64 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN		3 3	NUT, 1/2 - 13 Hex. Hitch to Bracket 2			
11A 193830 PIN, 3/4 x 2-1/2 Clevis COTTER PIN, 5/32 x1-1/2 Hitch to Rod 1 1 194093 PIN, 3/8 x 4 COTTER PIN, 1/8 x 1/2 Chain to Cylinder Bracket 1 2 2 2 2 2 2 2 2 2	10	193990	CHAIN, 5/16 x 37-1/2 - Attaching Strap Link	2		
11A 193830 PIN, 3/4 x 2-1/2 Clevis COTTER PIN, 5/32 x1-1/2 Hitch to Rod 1 1 194093 PIN, 3/8 x 4 COTTER PIN, 1/8 x 1/2 Chain to Cylinder Bracket 1 2 2 2 2 2 2 2 2 2	11		PIN, 7/16 x 2-5/8 Clevis Chain to Cylinder Bracket	1		
COTTER PIN, 5/32x1-1/2 Hitch to Rod 1	Calle	102020				
194093		193030	COTTER DIN 5/22 v 1 1/2 Hitch to Rod			
COTTER PIN, 1/8 x 1/2 } Chain to Cylinder Bracket	12	194093		1		
192456	13		COTTER PIN, 1/8 x 1/2 Chain to Cylinder Bracket	5195411		
Consists of Body which is not serviced separately plus items listed below: SHAFT, Piston 2 2 2 1 192461 SHAFT, Piston 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2						
192461 192463	14	192456-	CYLINDER ASSEMBLY, Hydraulic Booster	2		
192461 192463 SHAFT, Piston						
192463	15	100461				
192463		Out to the second second				
192462	17		WASHER Back-Up (Leather)			
192473	18		"O" RING (Rubber)	N. 3555		
WASHER, 5/8 Flat COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1 PIN ASSEMBLY, R.H. TUBE ASSEMBLY, R.H. Toe to Cylinder Hose 1 PIN ADAPTER, Hose, 3/8 2 2 2 2 2 2 2 2 2						
COTTER PIN, 1/8 x 1	19	192473				
PIN, 5/8 x 2-1/2 Clevis COTTER PIN, 1/8 x 1				2	#	
COTTER PIN, 1/8 x 1 Cylinder to Bracket 2 2 2 2 2 2 2 2 2				4		
192484	22			2		
192479	23	192484	HOSE, Hydraulic, 3/8 x 8 (w/Couplings)			
192481 TUBE ASSEMBLY, L.H. Tee to Cylinder Hose 1	24	192479	MIDE AGGREDITE DIT	100		
ADAPTER, Hose, 3/8 194450 194451 194451 192474 CLIP, Tube 11 11 12 13 192483 192483 192478 TEE, Tubing, 3/4 x 16 192478 TUBE ASSEMBLY, Main 192478 194453 194453 194453 194453 194453 194453 194454 194453 194454 194454 194454 194454 COUPLING, Straight Male NUT, 1/2 - 20 Hex. Jam (Connector) GASKET, Adapter 191164 UNION, Ell, 3/8 (Main Pipe) ELL, Street, 3/8 (Tractor to Union) am Head	25	192481	TUBE ASSEMBLY, L.H. 1ee to Cylinder Hose			
194450	26	TO THE RESERVE THE PARTY OF THE	HOSE, Hydraulic, 3/8 x 9-1/4 Anchor	2		
192474 CLIP, Tube			ADAPTER, Hose, 3/8	2	2	
192474 CLIP, Tube	SCHOOL SECTION	THE PARTY OF THE PROPERTY OF THE PARTY OF TH	PIPE ASSEMBLY, R.H. Tee to Cylinder Hose	1	1	
193658 192478 194453 194453 194396 190600 194284 CONNECTOR, Oil Line COUPLING, Straight Male NUT, 1/2 - 20 Hex. Jam (Connector) GASKET, Adapter UNION, Ell, 3/8 (Main Pipe) ELL, Street, 3/8 (Tractor to Union) TEE, 3/8 Pipe TUBE ASSEMBLY, Main 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	30	CASSASSASSASSASSASSASSASSASSASSASSASSASS	CLID Tube	T.		
193658 192478 194453 194453 194396 190600 194284 CONNECTOR, Oil Line COUPLING, Straight Male NUT, 1/2 - 20 Hex. Jam (Connector) GASKET, Adapter UNION, Ell, 3/8 (Main Pipe) ELL, Street, 3/8 (Tractor to Union) TEE, 3/8 Pipe TUBE ASSEMBLY, Main 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	31	LUCKS & Section 2000 Committee Commi	TEE Tubing 3/4 x 16			
192478 192478 194453 194453 194396 HANGER, Main Pipe CONNECTOR, Oil Line COUPLING, Straight Male NUT, 1/2 - 20 Hex. Jam (Connector) GASKET, Adapter UNION, Ell, 3/8 (Main Pipe) ELL, Street, 3/8 (Tractor to Union) am Head	32	TACCATE OF STREET	TEE, 3/8 Pipe	1	1	
194453	33	192478				
194396 HANGER, Main Pipe CONNECTOR, Oil Line COUPLING, Straight Male NUT, 1/2 - 20 Hex. Jam (Connector) GASKET, Adapter UNION, Ell, 3/8 (Main Pipe) ELL, Street, 3/8 (Tractor to Union) am Head	34		PIPE, Main	1	2	
COUPLING, Straight Male NUT, 1/2 - 20 Hex. Jam (Connector) GASKET, Adapter UNION, Ell, 3/8 (Main Pipe) ELL, Street, 3/8 (Tractor to Union) am Head	35	194396		1	1	
COUPLING, Straight Male NUT, 1/2 - 20 Hex. Jam (Connector) GASKET, Adapter UNION, Ell, 3/8 (Main Pipe) ELL, Street, 3/8 (Tractor to Union) am Head	36	100600	CONNECTOR Oil Line	!	5	
NUT, 1/2 - 20 Hex. Jam (Connector). GASKET, Adapter UNION, Ell, 3/8 (Main Pipe). ELL, Street, 3/8 (Tractor to Union). am Head	37		COURT ING Straight Male			
GASKET, Adapter UNION, Ell, 3/8 (Main Pipe). ELL, Street, 3/8 (Tractor to Union) am Head	38	134204	NUT 1/2 - 20 Hex Jam (Connector)	1		
ELL, Street, 3/8 (Tractor to Union)	39	9N-614	GASKET, Adapter			
am Head	40	ALLEGATION OF THE PROPERTY OF	UNION, Ell, 3/8 (Main Pipe)	•		
am Head	41		ELL, Street, 3/8 (Tractor to Union)		1	
	1					
10 x 3/0					THE STATE OF THE S	
	M. T		10 x 3/0			
				-		

Loaders

MODEL 19-23 (Prior)

Group 4—CYLINDER ASSEMBLIES, BUCKET CONTROL

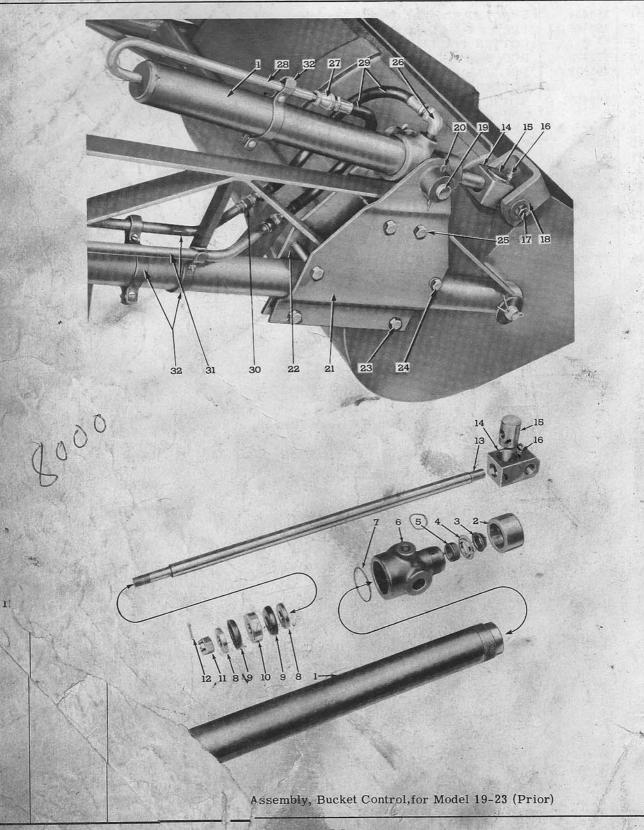

MODEL 19-23 (Prior)

FIG.	PART NO.	NAME AND DESCRIPTION
20		Group 4-1—CYLINDER ASSEMBLY, For Model 19-23 (Prior)
_	192039	CYLINDER ASSEMBLY, Hydraulic Bucket Control
		Consists of:
1	192137	CYLINDER (Welded Assembly) 1
2	192147 1	NUT Packing 1
3	192149 -	WIPER, Packing Nut
4	192146	GLAND, Packing, Aluminum
5	192128	PACKING (Complete Set) (Includes 5 Rings)
6	192145	YOKE, Cylinder 1
7	192131	"O" RING 1
8	193961	WASHER, Piston Cup
9	192142	CUP, PISLUR
10	192143	Bracen, Fiston Cup
11		NUT, 3/4 - 16 Hex. Slotted Piston Shaft
12		COTTER PIN, 1/8 x 1-1/4 Piston Shart
13	192140	SHAFT, Piston
4.4	104404 *	HEAD, Ram
14	194491*	DIN Divot Ram (Use With Old Ram Head)
15	193855	PIN, Pivot, Ram (Use With Old Ram Head)
16		FTITING, Lube, 1/8 - 21 Str Ram Head
	100551	SLEEVE, Ram Head 1
177	192551	BOLT, 5/8 - 11 x 5 Hex. Hd.
17		
18		WASHER, 5/8 Flat LOCKWASHER, 5/8 Sleeve to Ram Head to Bucket
		NUT, 5/8 -\11 Hex.
-	Migayoria	101, 5/6 - 11 liex.
19	192034	PIN, Pivot, Cylinder
20	132031	COTTER PIN, 1/4 x 2-3/4 - Pin to Bracket
20		
21	192025	BRACKET, Mounting, Cylinder, Outer (Welded Assembly) 1
22	192026	BRACKET Mounting, Cylinder, Inner (Welded Assembly)
23		BOLT 1/2 - 13 x 1-1/2 Hex. Hd.
24		BOLT, 1/2 - 13 x 2-3/4 Hex. Hd.
25		BOLT, 1/2 - 13 x 3-1/2 Hex. Hd. Outer and Inner Bracket to Frame 3
		LOCKWASHER, 1/2
		NUT, 1/2 - 13 Hex.
		FIL Street 3/8 Cylinder
26	304503	Print Silver, a/O = Cvimuci
27	192103	COUPLING, Reducing, 3/8 to 1/4 - Pipe
28	192038	PIPE, Bucket Cylinder
000	100114	HOSE, Hydraulic, w/Male Couplings, 3/82
29	192114	ADAPTER, Hydraulic Hose, Female, 3/8
30	192119	
31	192040	PIPE, Bucket Cylinder Feedline, 3/8 x 61
21		FIFE, Ducket Cylinder recuirie, o, o a oz
32	191471	CLAMP ASSEMBLY 5
34	131411	Consists of Two Half Clamps which are not serviced separately, plus
		items listed below:
		BOLT. 1/4 - 20 x 1 Rd. Hd. Stove 10
		LOCKWASHER 1/4
		NUT, 1/4 - 20 Sq
1		
		* Pivot Pin #193855 is not needed with Ram Head
400		#194491 — Use (1) Set Screw, 3/8 - 16 x 5/8
1		#194491 — 0se (1) Set Screw, 5/0 - 10 x 5/0 Socket Head.
103		
E-01/8		

Loaders

MODELS 19-42 (Prior), 61 (Prior), 70, 71

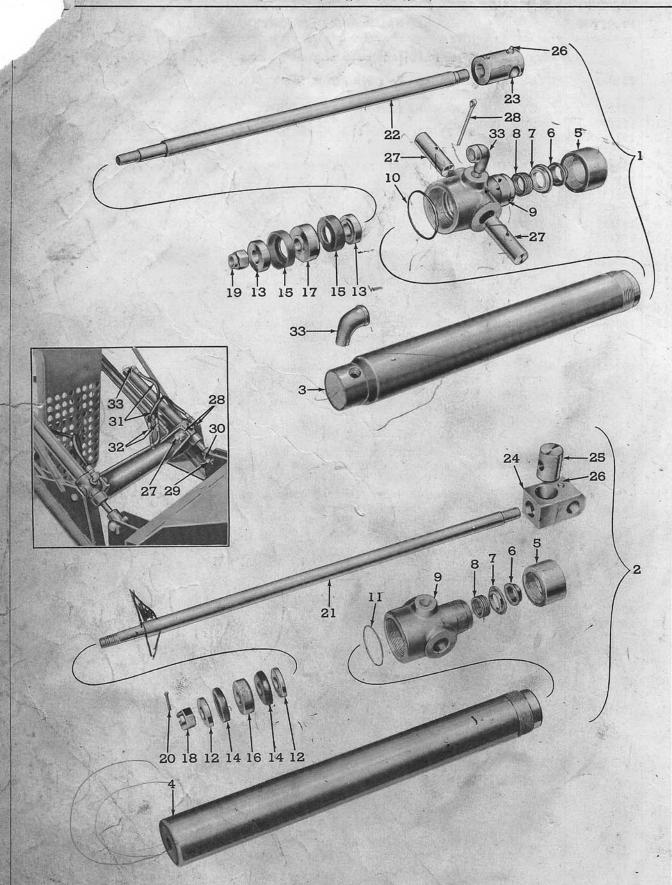


Figure 29 - Cylinder Assembly, Bucket Control, for Models 19-42 (Prior), 61 (Prior), 70, 71

Loaders

MODELS 19-42 (Prior), 61 (Prior), 70, 71

FIG. 29	PART NO.	NAME AND DESCRIPTION	h.
		Group 4-2—CYLINDER ASSEMBLY, For Models 19-42(Prior),	8
			-42,8
		61 (Prior), 70 & 71	19-4
1	194481	CYLINDER ASSEMBLY, Hydraulic Bucket Control	
2	193960	CYLINDER ASSEMBLY, Hydraulic Bucket Control	2
3	194471	Consists of: CYLINDER (Welded Assembly)	
4	193923	CYLINDER (Welded Assembly)	
5	192147	NUT, Packing	
6	192149	WIPER, Packing Nut.	
7	192146	GLAND, Packing Aluminum	2
8	192128	PACKING (Complete Set) (Included 5 Rings)	2
9	192145	YOKE, Cylinder	2
10	192273	"O" RING	14
11	192131	"O" RING	2
12	193961	WASHER, Piston Cup	4
13	194466	WASHER, Piston Cup	-
14	192142	CUP, Piston	4
15	194464	CUP, Piston	
16	192143		2
17	194467	SPACER, Piston Cup.	
18		NUT, 3/4 - 16 Hex. Slotted	2
19	•	NUT, 5/8 - 18 Lock Piston Shaft	
20	100054	COTTER PIN, 1/8 x 1-1/4	2
21	193854	SHAFT, Piston	2.
22	194482	SHAFT, Piston19.4.6.2.3	-
23	194491**	HEAD, Ram - Use 194491.	2
24	101101	HEAD, Ram -Use 194491	4
25	193855	PIN, Pivot Ram (Use With Old Ram Head)	2
	100000	SET SCREW, 1/4 - 20 x 3/8 Socket Hd Pivot Pin	2
	301475	SET SCREW, 3/8 - 16 x 5/8 Socket Head - Pivot Pin	4
26			2
27	193856		4
28		COTTER PIN, 1/4 x 2-3/4 - Pivot Pins	4
29	193916	PIN, Pivot, 1 x3-7/16 - Cylinder to Bucket	2
30		COTTER PIN, 1/4 x 1-1/2 - Pivot Pins	2
			-
31	192114	HOSE, Hydraulic, w/Male Couplings, 3/8	*
32	192115	ADAPTER, Hydraulic Hose, Female, 3/8	*
	193931	PIPE, Bucket Cylinder	*
	192103	COUPLING, Reducing, 3/8 to 1/4	*
	204500		
33	304503	ELL, Street, 3/8	*
		NOTE:	
		*See Hydraulic Lines Illustration for total quantities per unit.	
		**D: 4 D: #400055 : 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	
		**Pivot Pin #193855 is not needed with Ram Head #194491 — Use (1) Set Screw 3/8 - 16 x 5/8 Socket Head.	
2 4			
			190
	10 p. 15 miles		

MODEL 19-7 (Prior)

Group 5—HYDRAULIC LINES AND ATTACHMENTS

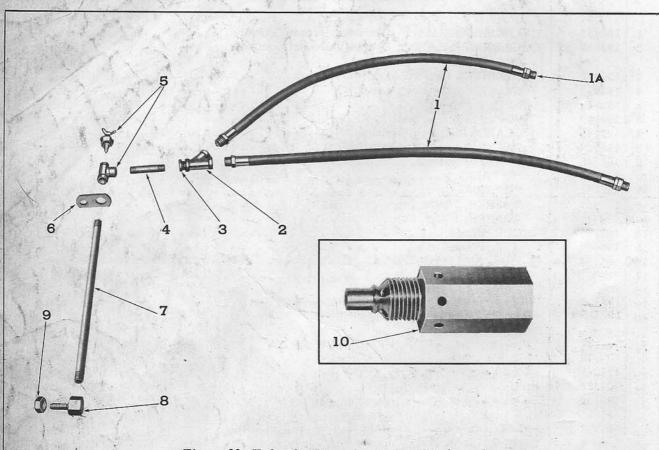


Figure 30 -Hydraulic Lines for Model 19-7 (Prior)

FIG.	PART NO.	NAME AND DESCRIPTION	REQ.
1		Group 5-1—HYDRAULIC LINES For Model 19-7 (Prior)	
1 1A 2 3 4 5 6 7 8 9 10	192010 192011 190608 190607 304062 190605 190603 190602 190600 8N-638*	HOSE, Hydraulic, 1/2 x 34-1/2. ADAPTER, Hose, 1/2 FITTING, 1/2 "Y". BUSHING, Reducing, 3/8 to 1/2 NIPPLE, Pipe, 3/8 x 3 VALVE ASSEMBLY, Needle BRACKET, Pipe to Tractor PIPE, 3/8 x 16. CONNECTION, Oil Line (Banjo Fitting) NUT, 1/2 - 20 Hex Connection to Tractor VALVE, Relief (Rear of Hydraulic Pump on Tractor) *Relief Valve No. 8N-638 is the Standard Valve used in the rear of Pump Housing on Tractor.	1 1 1 1 1 1

MODEL 19-21

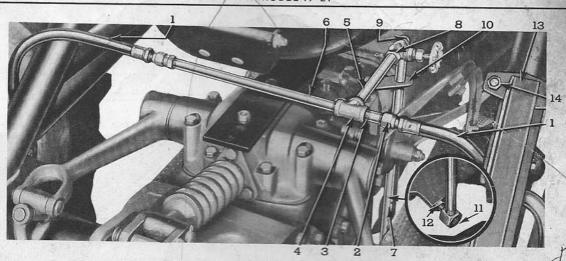


Figure 31 - Hydraulic Attachments for Model 19-21

FIG.	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 5-2—HYDRAULIC ATTACHMENTS For Model 19-21	
1 2	192114 192115	HOSE, Hydraulic, w/Male Couplings, 3/8	2
4	192115	ADAPTER, Hydraulic Hose, Female, 3/8	2
3	304237	NIPPLE, Pipe, 3/8 x 2 - Hose Adapter to Tee	1
4	193658	TEE, Pipe, 3/8	1
5	304071	PIPE, Valve to Tee, 3/8 x 8-1/2.	1
6	304382	FIFE, Hose to fee, 3/8 x 12	1 .
7	192121	PIPE, Elbow to Connection, 3/8 x 18-1/2	1
8	192116	VALVE ASSEMBLY, Shut-Off	
-	304008	NIPPLE, Close, 3/8 - Valve to Elbow	1
9	304540	ELBOW, Pipe, 3/8 - 90°	
10	190603	BRACKET, Pipe to Tractor	1
11	190600	CONNECTION, Oil Line (Banjo Fitting)	1
12		NUT, 1/2 - 20 Hex Connection to Tractor	1
13	192181	BRACKET, Keeper, Tractor Lift Arm (Welded Assembly)	1
14	191475	U-BOLT, 1/2 - 13	2
-		LOCKWASHER, 1/2 Bracket to Frame	4
-		NUT, 1/2 - 13 Hex.	
		BOLT, 5/8 - 18 x 2-1/4 Hex. Hd.	100
-		LOCKWASHER, 5/8 Lift Arm to Bracket	1
-		NUT, 5/8 - 18 Hex.	1
	0.37.000		és a la
-	8 N-638	VALVE, Relief (Rear of Hydraulic Pump Housing on Tractor)	1
			TO THE
16.0			
4			
33			
6			Trace of
10			
I SALVE			(C) (F) (C) (C)

MODEL 19-59

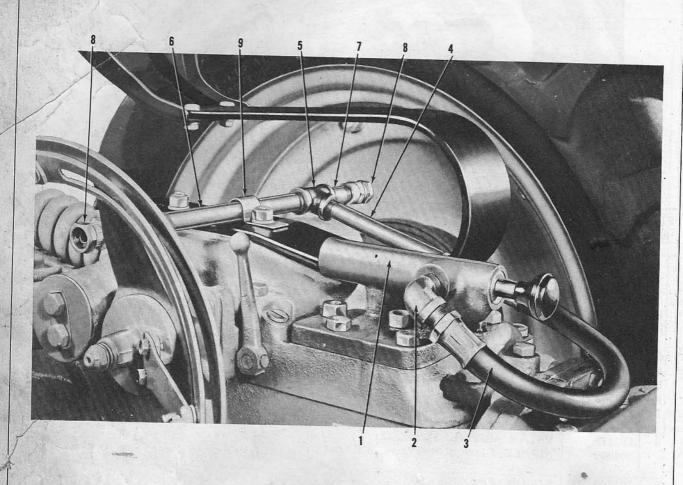


Figure 32 - Hydraulic Lines for Model 19 50

FIG.	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
1 2 3 - 4	23-10 304503 192114 192115 304071	Group 5-3—HYDRAULIC LINES For Model 19-59 SELEC-TROL VALVE (See Page 85 for Components) ELL, Street, 3/8 x 90° (Valve to Hose). HOSE, Hydraulic, w/Male Couplings, 3/8. ADAPTER, Hydraulic, Hose, Female, 3/8 NIPPLE, Pipe, 3/8 x 7-1/2 - Hose to Tee	1 1
5 6 7 8 9	193658 304382 304237 192115 194404	TEE, Pipe, 3/8 x 3/8 x 3/8 - Selec-Trol to Cross Line. PIPE, 3/8 x 12 - Cylinder Hose to Tee NIPPLE, Pipe, 3/8 x 2 - Base to Tee ADAPTER, Hydraulic Hose, 3/8 CLAMP, Pipe	1 1 1 2

Loaders

MODELS 19-22, 60

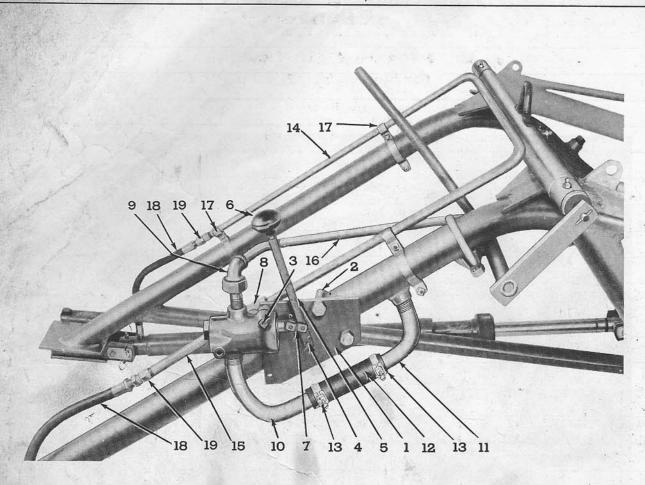


Figure 33 - Hydraulic Attachments for Models 19-22, 60

FIG.	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 5-4—HYDRAULIC ATTACHMENTS For Models 19-22, 60	
- 1 2 - -	191479 192046 191475	VALVE ASSEMBLY CONTROL (See Page 60 for details). PLATE, Mounting, Control Valve	1
3 -	300890	BOLT, 5/16 - 18 x 3 Hex. Hd. LOCKWASHER, 5/16 NUT, 5/16 - 18 Hex. Mounting Plate to Valve	1
4 -	190365	PIN, Pivot, Valve Lever NUT, 3/8 - 24 Hex. COTTER-PIN, 1/8 x 3/4 Pivot Pin	1
5 6 7 - -	191345 190369 191362 192171 192172	LEVER, Control Valve KNOB, Control Valve Lever LINK, Control Valve to Lever PIN, Link (Rivet, 5/16 x 3/4 Rd. Hd. Drld.) PIN, Link (Rivet, 5/16 x 1-1/4 Rd. Hd. Drld.) COTTER PIN, 1/8 x 3/4 - Link Pin	1 1 2 1 1 2

FIG. 33	PART NO.	NAME AND DESCRIPTION	QTY REQ
		Group 5-4—HYDRAULIC ATTACHMENTS	
		For Models 19-22, 60 (Cont'd)	
8 8 - 9	191364 193658 304503 191164	NIPPLE, Orifice, Control Valve Restrictor, 3/8 TEE, Pipe, 3/8 x 3/8 x 3/8 ELL, Street, 3/8 - Nipple to Tee (Not Shown) UNION, Pipe - Feed Line to Valve	1 1
10 11	192546 192547	PIPE, Valve to Hose	1
12 13	194383 190314	HOSE, Outlet, 1 x 8 1/2	1 2
14 15 16	192151 304378 191359	PIPE, Equalizer ("U" Shape). PIPE, Extension, 3/8 x 10. PIPE, High Pressure Feed Line, 3/8 x 69-1/4.	1
17	191471	CLAMP ASSEMBLY Consists of Two Half Clamps which are not serviced separately, plus items listed below:	
1-1-1		BOLT, 1/4 - 20 x 1 Rd. Hd. Stove LOCKWASHER, 1/4 NUT, 1/4 - 20 Sq.	10
18 19	192114 192115	HOSE, Hydraulic, w/Male Couplings, 3/8	
			-2
		2.71	
+	22	180 29.00	
		40	
		2, 221.00	
	*.,	5000	

MODEL 19-23 (Prior)

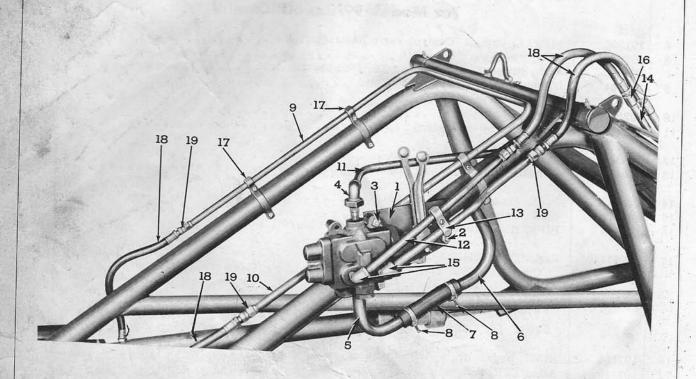


Figure 34 - Hydraulic Attachments for Model 19-23 (Prior)

FIG.	PART NO.	NAME AND DESCRIPTION	QTY
	E CONTRACTO	Group 5-5—HYDRAULIC ATTACHMENTS	REQ
		TIDRAGLIC ATTACHMENTS	
	194441	For Model 19-23 (Prior)	
1	192046	VALVE ASSEMBLY, Control (See Page 63 for Details)	1
2	191475	- Little, Widditting, Valve.	1
_	131413		1
		LOCKWASHER, 1/2 Mounting Plate to Frame	2
		No1, 1/2 - 15 Hex.	
3	National Trans	BOLT, 5/16 - 18 x 2-1/4 Sq. Hd.	
	10-1-	NUT, 5/16 - 18 Hex. Mounting Plate to Valve	2
	191364	NIPDI F Onifice Control V. 1 P	
	193658	NIPPLE, Orifice, Control Valve Restrictor, 3/8 - Valve to Equalizer Pipe	1 -
		TEE, Pipe, 3/8 x 3/8 x 3/8 - Valve to Equalizer Pipe	1
4	191164		
		UNION, Pipe - Feedline to Valve	1
5	192547		
\$500 DOM:	192548	PIPE, Valve to Hose	1
	100010	PIPE, Frame to Hose	1
7	194383		
263	190314	HOSE, Outlet, 1 x 8 1/2	1
	100014	CLAMP, Hose, w/Screw (Aircraft Type).	2

FIG.	PART NO.	MODEL 19-23 (Prior)	QTY
34	PART NO.	NAME AND DESCRIPTION	REQ
		Group 5-5—HYDRAULIC ATTACHMENTS	
		For Model 19-23 (Cont'd)	
9 10 11	192151 304378 191359 192109	PIPE, Equalizer ("U" Shape) PIPE, Extension, 3/8 x 10 PIPE, High Pressure Feed Line, 3/8 x 69-1/4 PIPE, Valve Inlet, 3/8 x 15-3/8	1 1 1 2
13	191357	CLAMP ASSEMBLY Consists of Two Half Clamps which are not serviced separately, plus items listed below: BOLT. 1/4 - 20 x 1 Rd Hd	1
		LOCKWASHER, 1/4 NUT, 1/4 - 20 Hex Clamp.	1
.4	192040	PIPE, Bucket Cylinder Feedline, 3/8 x 61	2
5	304503 192021	ELL, Street, 3/8 - Valve	2 2
7	191471	CLAMP ASSEMBLY, (Total per Unit 10)	5 10 10
- 18 19	192114 192115	NUT, 1/4 - 20 Sq	10 4 4
			1 7 1
7			
A PROPERTY OF			

MODELS 19-42 (Prior), 61 (Prior), 70 & 71

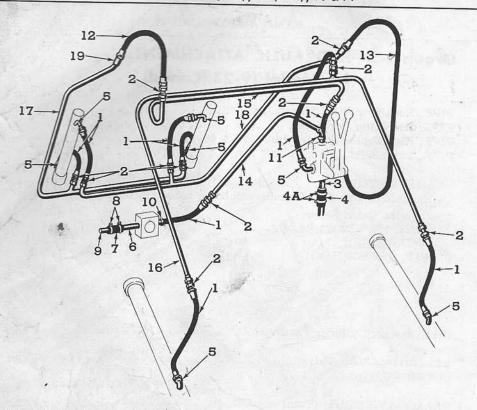


Figure 35 - Hydraulic Lines for Models 19-42 (Prior), 61 (Prior), 70 & 71

FIG.	grante a 1.	12 (21101), 01 (11101), 10 & 11			
35	PART NO.	NAME AND DESCRIPTION		TY. EQ.	
		Group 5-6—HYDRAULIC LINES	19-42,61	13	The second secon
1 2	192114 Y 192115	HOSE, Hydraulic, w/Male Couplings, 3/8 ADAPTER, Hydraulic Hose, Female, 3/8	8 11	9	
3 4 4A 5	190395 194383 190314 304503	NIPPLE, Pipe, 3/4 x 3, Valve Outlet HOSE, Rubber, 1 x 8-1/2 - Return CLAMP, Hose, w/Screw (Aircraft Type) 1"	1 2	1 1 2 9	STATE OF STREET
 6 7 8 9	304505 304578 193928 193929 194147 194145 8CM8287 194142	ELBOW, Pipe, 3/4. PIPE, Valve to Frame, 3/4 x 17-1/2 PIPE, Pump to Frame, 3/4 PIPE, Pump Inlet, 1 x 8 HOSE, Rubber, 1-1/4 I.D. x 4-1/2, Inlet. CLAMP, Hose, w/Screw (Aircraft type) 1-3/4"	1 1 1 1	1 1 2	A STATE OF THE PARTY OF THE PAR
10 10 11 11 12 13	193931 192103 304494 190607 191164 194387 194480 193930	COUPLING, Reducing, 3/8 x 1/4 ELL, Street, 3/8 x 45 ^o (Outlet Side of Pump). BUSHING, Reducing, 1/2 to 3/8 UNION, Pipe, 3/8 - 90 ^o (Ell Type). HOSE, Hydraulic, w/Male Couplings, 3/8 x 22 HOSE, Hydraulic, w/Male Couplings, 3/8 x 32 PIPE. Frame Valve to Pump	2 1 1 1 2 1	1 1 1 1	
15 16 17 18 19	194153 194476 194478 193942 193943 192021 192593	PIPE, Pump to Valve, 3/8. PIPE, Frame, Valve to Lift Arm PIPE, Frame, "U" Shape PIPE, Lift Arm, L. H. PIPE, Lift Arm, R. H. COUPLING, Pipe, 3/8 BUSHING, Reducing, 1 to 3/4.	1 1 1 1 1 1	1 1 1 1 1 1	

Loaders

MODELS 19-8 (Prior), 8A (Prior)


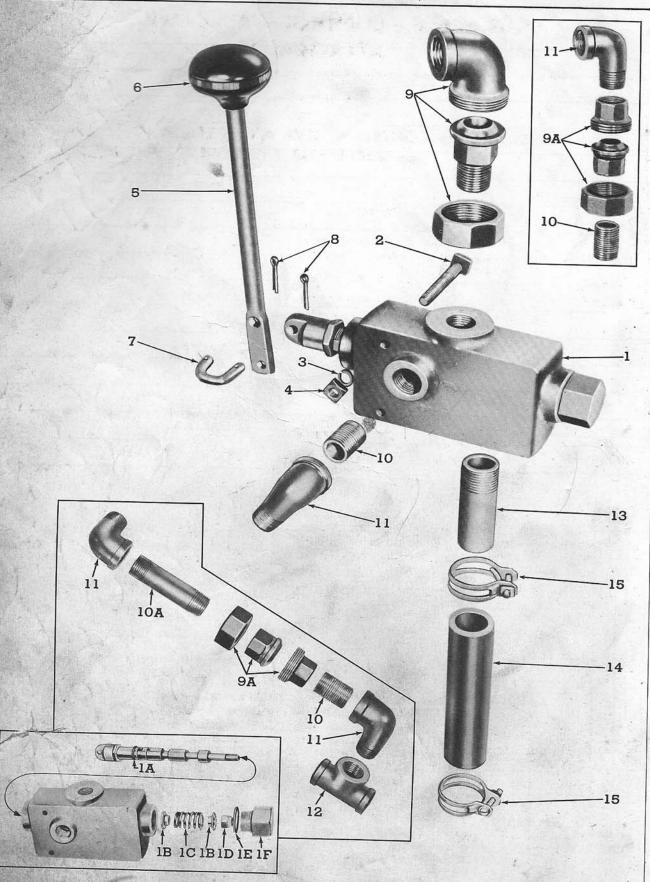


Figure 36 - Control Valve and Attachments for Models 19-8 (Prior) and 19-8A (Prior)

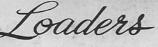

MODELS 19-8 (Prior) and 19-8A (Prior)

Group 6—CONTROL VALVE AND ATTACHMENTS

FIG.	PART NO.	NAME AND DESCRIPTION	250890	TY. EQ.
		Group 6-1—CONTROL VALVE AND ATTACHMENTS For Models 19-8 (Prior) and 19-8A (Prior)	19-8	19-8A
1 1A 1B 1C 1D 1E 1F 2 3 4 5 6 7 8 9 9A 10 10A 11 12 13 - 14 15	** 190813 190814 190815 190816 190817 190818 190368 190369 190342 190389 190273 304015 304072 304486 190268 190395 190312 194383 190314	VALVE ASSEMBLY, Control. Consists of Valve Body and Piston Assembly which are not serviced separately plus items listed below: RING, Sealing, Rubber RETAINER, Spring. SPRING. NUT, 3/8 - 24 Elastic Stop - Spring and Retainer to Piston. GASKET, Valve Cap. CAP, Valve. BOLT, 5/16 - 18 x 2-1/4 Sq. Hd. LOCKWASHER, 5/16 NUT, 5/16 - 18 Sq. Valve to Bracket NUT, 5/16 - 18 Sq. LEVER, Control, Valve KNOB, Control Lever, Plastic LINK, Lever and Valve COTTER PIN, 1/8 x 3/4 UNION, Pipe 1/2 x 90° Elbow - Feed Line to Valve(M and F Union) UNION, Pipe 1/2 x 90° Feed Line to Valve NIPPLE, Close, 1/2 x 1-1/2 NIPPLE, Pipe, 1/2 x 3 ELL, Street, 1/2 TEE, Pipe, 3/8 x 3/8 x 1/2 NIPPLE, Pipe, 3/4 x 3 Valve Outlet NIPPLE, Pipe, 3/4 x 5-1/4 Outlet Valve HOSE, Outlet, 1 x 8 1/2 CLAMP, Hose, 1	1 2 1 1 1 1 2 2 1 1 3 1 - 1	1 2 1 1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1
		*This Valve is replaced as a complete unit by Part #191743— Consists of Valve Body and Piston Assembly which are not serviced separately plus items listed below (Internal parts are identical to parts listed under Valve Assy. Part No. 191479 on Page 60): 191368 Link 2 192172 Pin 1 192191 Pin 1 Cotter Pin, 1/8 x 5/8 2		

Loaders

MODELS 19-22, 60


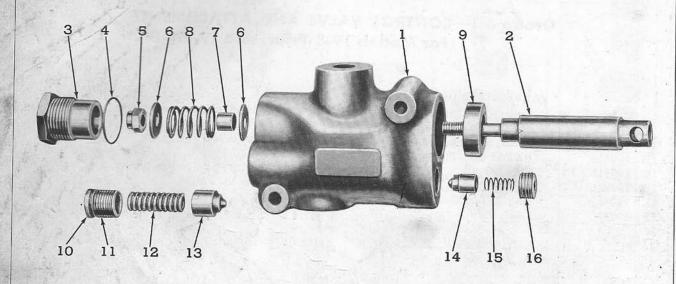


Figure 37 - Control Valve for Models 19-22, 60

FIG.	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 6-2—CONTROL VALVE For Models 19-22 and 60	TUDO
1	191479	VALVE ASSEMBLY, Control (Less Lever) Consists of Body and Spool which are not serviced separately, plus items listed below:	1.
2		SPOOL/	
3	192282	CAP, Spool	1
4	192281	Griditi 1, Cap	4
5		NUT, 3/8 - 24 Lock WASHER, Flat, 3/8, 1/16 Thick Spool	1 1
6	192207	WASHER, Flat, 3/8, 1/16 Thick Spool	0
7	192277	SPACER, 7/16 Long	2
8	192205	SPRING, Spool.	1
9	192269	SEAL, OII	14
10	192273	"O" RING, 9/16 ID x 3/4 OD	1.
-		1 EOG, 10/10 Expansion	1
11	192272	CAP, Relief Valve	1
12	192271	SPRING, Relief Valve	1
13	192270	SLIDE, Relief Valve	1 .
14	192264	FOLLOWER & BALL ASSEMBLY	1
15	192267	SPRING, Check valve	1
16		PLUG, Pipe, 3/8 Socket Hd.	1

Loaders

MODELS 19-23 (Prior), 1942 (Prior), 61 (Prior), 70 & 71

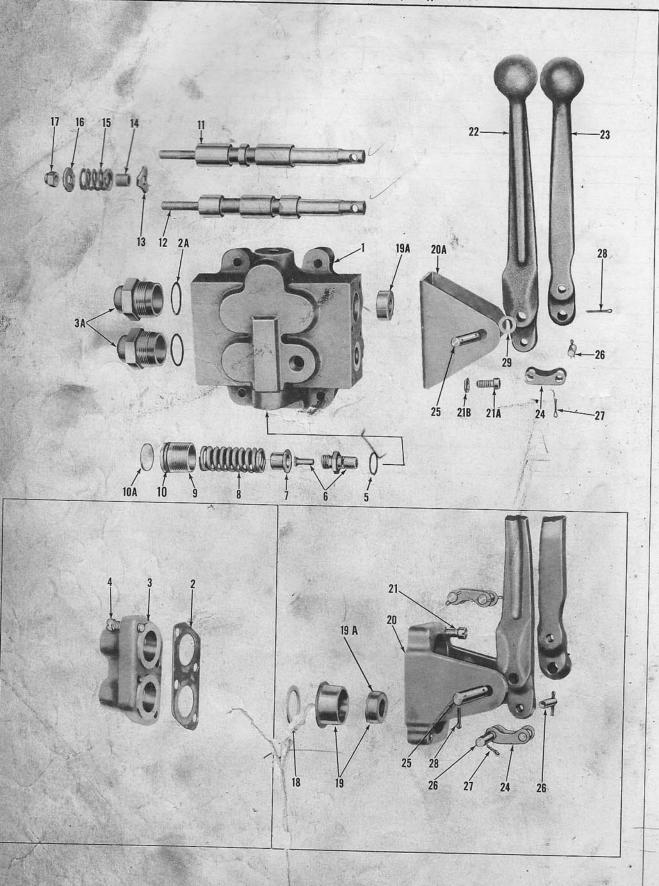

DEARBORN _


Loaders

MODELS 19-23 (Prior), 19-42 (Prior), 61 (Prior), 70 & 71

FIG.		MODELS 19-23 (Prior), 19-42 (Prior), 01 (Prior), 70 & 71	O	ry	REC	
38	PART NO.	NAME AND DESCRIPTION		100 to		
)	Group 6-3—CONTROL VALVE For Models 19-23	93896	192524	94349	194441
		(Prior), 19-42 (Prior), 61 (Prior), 70 & 71	93	92	94	194
			-	7		
	193996	VALVE ASSEMBLY, Control, Less Levers, For Model 19-42	1	A S		
-	192524	VALVE ASSEMBLY, Control, Less Levers, For Model 19-23	7.1	1		
		NOTE: Above valves have been superseded in production		がまり		
		by the following:	1	1	1	
1	194349	VALVE ASSEMBLY, Control, Less Levers, For Model 19-42,61,70,71	132		1	1
-	194441	VALVE ASSEMBLY, Control, Less Levers, For Model 19-23				1
		Consists of Body and Spools which are not serviced separately plus items listed below:			1	
	192223	GASKET, Cap	1	1		T
2 2A	194353	GASKET Can	18.73	The same	4	2
3	193647	CAP. Valve	1	1		
3A	194351	CAP Valve		2.19	2	2
4		SCREW, 5/16 - 18 x 1-1/4 Sl. Hd Cap to Body	4	1	1	1
5	192237	GASKET, Barrel	1	A		1
6	193662	BARREL and PISTON ASSEMBLY FOLLOWER, Piston	1	1	1	1
7	193650 192230	SPRING, Relief	1	1	1	1
8	192230		9 638	1 1357	1450	
9	193651	BONNET, Spring	. 1	1	(WS922)	1
10	193652	((O)) Ping 15/16 ID v 1-3/16 OD	. 1	1		1
10A		DITIC 1 2/9 Die Expansion	3 1	100	1	1 1
11		CDOOL A Way (Unner) (Not Serviced)		5 55 5	1155	1
12		SDOWN 3 Way [LOWAT] [NOI Service(I)	 3 (80 - 3) 	1500		1
13	192204	RETAINER, Spring	. 1		10 105/65/09	1
14	193636 192213	SDACER 1/2 Long For 3-Way Spool	. 1	1		1
15	192205	CODDING Cool	. 1 1	1		1
16	193637	WASHER, 3/8 Flat, 3/32 Thick	. 2	2 2	2 2	2 2
17		NUT, 3/8 - 24 Lock Spoot	. 2	2	2	2
	100011	GASKET, Adapter	2	2	2	2
18	193641	GASKET, Adapter	. 2	2		
19	193642	Consists of Retainer which is not serviced separately				66
		plus seal listed below:				100
19A	192218	SEAL Oil	. 2	111111111111111111111111111111111111111	ED 1990/90	2
20	193645	BRACKET, Mounting	. 1	1	1	1
20A	194350	BRACKET, Lever	. 4	4		1
21		SCREW, 5/16 - 18 x 1-1/4 Sl. Hd. SCREW, 5/16 - 18 x 5/8 Sl. Hd. Bracket to Body			4	4
21A 21B	THE RESERVE THE PARTY OF THE PA	LOCKWASHER, 5/16	. 4	4	4	4
210			14 18			
22	192522	LEVER, Control Valve, Long	. 1	. 1		1
23	192523	LEVER Control Valve, Short	. 1		BELL BON	1 4
24	192242	LINK, Lever to Spool	. 4	4	1907 180 170	1
25	192243	PIN, Pivot, Lever, Long	. 4	(SID 103)	STEP SHIP	F) 111122
26	192244	COTTER PIN, 1/16 x 1/2 - Link Pins	. 8	With the At	HEALTH WASH	
28		COTTER PIN, 1/16 x 1)	. 2	2 2	(San-12) (C)	All 1593/35P
29		COTTER PIN, 1/16 x 1 WASHER, 3/8 Flat Pin to Link		4	3	3
		BOLT 5/16 - 18 x 2-1/4 Sq. Hd				0
	- Company	LOCKWASHER, 5/16 Valve to Mounting Plate	. 2	4 2	2 2	2
	1	NUT, 5/16 - 18 Hex.	35	1	No. of Street, or other Parks	
			7	No.		
				1		
		- The state of the			1	1
	The second secon					

Loaders


MODELS 19-8 (Prior), 19-8A (Prior)

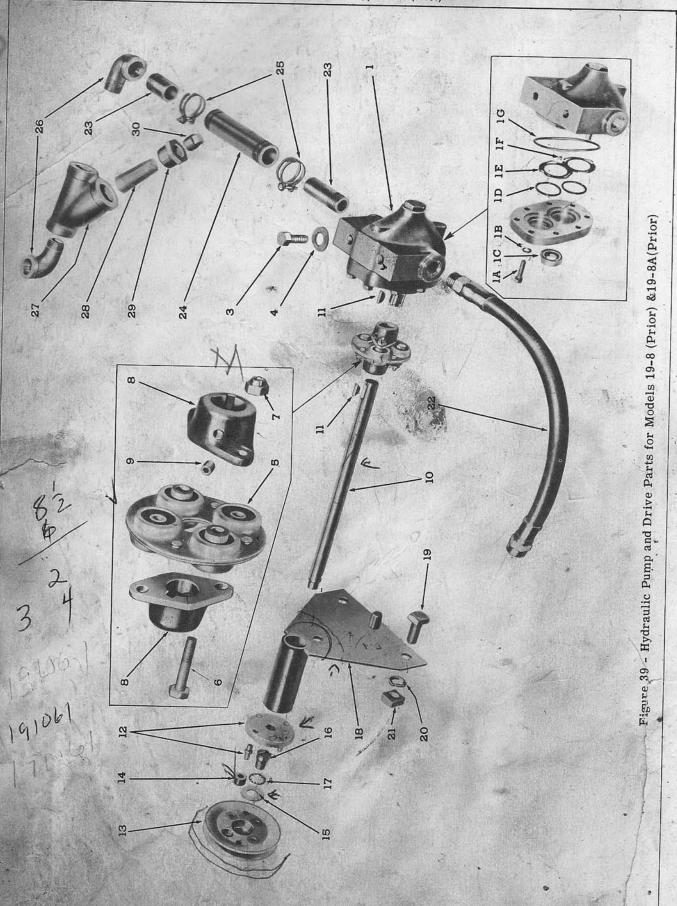

		MODELS 19–8 (Prior), 19–8A (Prior)		
FIG.	PART NO.	NAME AND DESCRIPTION	117970000	T) EQ
-		Group 7-1—HYDRAULIC PUMP AND DRIVE PARTS	8	3A
		For Models 19-8 (Prior) and 19-8A (Prior)	19-8	19-8A
1 .		PUMP ASSEMBLY, Hydraulic (Outlet and inlet on opposite sides.	-	I
		Part No. 190419 or 190444 was replaced as unit by #192504)	1	1
		Consists of Pump, Body, Poppet Assembly, Gear Shafts, Wear Plates		1
		and Cover which are not serviced separately plus items listed below:		
1A		BOIT 5/16 - 18 v 1 - 1/4 Hov Hd]	1	
1B		LOCKWASHER 5/16 Cover to Body	8	8
1C	190371	SEAL, Oil	1 2	1
1D	191181	RING, Sealing, Wear Plate		
1E	191182	WASHER, Tension	1	1
1F	191183	PIN, Dowel, Wear Plate	1	110000
1G	191184	RING, Sealing, Cover	1	1
3	A. A	BOLT, 1/2 - 13 x 1-1/4 Hex. Hd. Pump to Mtg. Bracket	2	2
5	191192			
	191192	COUPLING ASSEMBLY, Center	1	1
100		Consists of riveted Case with Rubber Blocks and Inserts, which is not serviced separately plus items listed below:		
6		POI T 1/4 20 - 1 1/4 H - H]		
7		NUT, 1/4 - 28 Hex. Lock Coupling to Flange	4	4
8	191061	FLANGE ASSEMBLY	2	2
154		Consists of Flange which is not serviced separately plus Set Screw listed		1
: The ser		below:		100
9	300353	SET SCREW, 1/4 - 20 x 1/4 Allen, Ctsk. Hd Coupling Flange	2	2
10	190760	SHAFT, Drive	1	1
11		KEY, 3/16 x 3/4 Woodruff (Shaft)	2	2
12	191196	HUB, With Pins Assembly	1	1
13 14	192152	SHEAVE, Drive (Includes 4 Rubber Blocks) BLOCK, Rubber, Drive Sheave	1	1320
15	190753 300122	WASHER, 41/64 Flat	13	4
16	192167		1	1
17	192101	BOLT, 5/8 - 18, Slotted Hd. (Special) \(\) Sheave to Engine \(\frac{1}{2} \). \(\)	1	1
	190771	PLATE, Suspension (Welded Assembly) (For Serial No. 9N-1 through 9N-167487) .		1
18	190770	PLATE, Suspension (Welded Assembly) (For Serial No. 9N-1 through 9N-167487)		
18	190382	PLATE, Suspension (Welded Assembly) (For Serial No. 9N-167488 onward)	1	1
19		BOLT, 5/8 - 11 x 1-1/2 Sq. Hd.		
20		LOCKWASHER, 5/8, Internal Tooth Plate to Frame	2	2
21		NUT, 5/8 - 11 Sq.		
22	190943	HOSE, Hydraulic, 1/2 x 18 (With Couplings) - Pump to Feed Line	1	1
	190944	ADAPTER, Hose, 1/2	1	1
23	190395	NIPPLE, Pipe, 3/4 x 3 Pump Return (Cut to suit)	2	2
24	194383	HOSE, Return, 1 x 8 1/2	1	1
25	190314	CLAMP, Hose, 1	2	2
26	304505	ELL, Street, 3/4	2	DIFFERENCE OF
	190318	STRAINER ASSEMBLY.	4	1
		Consists of:		
27	190736	FITTING, "Y", Strainer		1
28	190380	SCREEN, Strainer	1	1
29	190737	SCREEN, Strainer BUSHING, Reducing 1 x 1/2	1	1/2
30		PLUG, Pipe, 1/2 Sq. Hd	- 1	11
		NOTE: Service parts for the old style Loader are available as follows a	4	1
AVIE OIL		item numbers referred to are similarities only.		1
5	190751		1	1
1		COUPLING ASSEMBLY, Center	1	
		listed below:		
200	190753	BLOCK, Rubber, Coupling		
31	5007R2	FLANGE, Coupling (Less Set Screw) (2 Pin Type)		四 7
32	Y	HUB, With Pins Assembly (2 Pin Type)		
			K.	100

Loaders

MODELS 19-22, 19-23 (Prior), 19-42 (Prior), 60,61 (Prior), 70 & 71

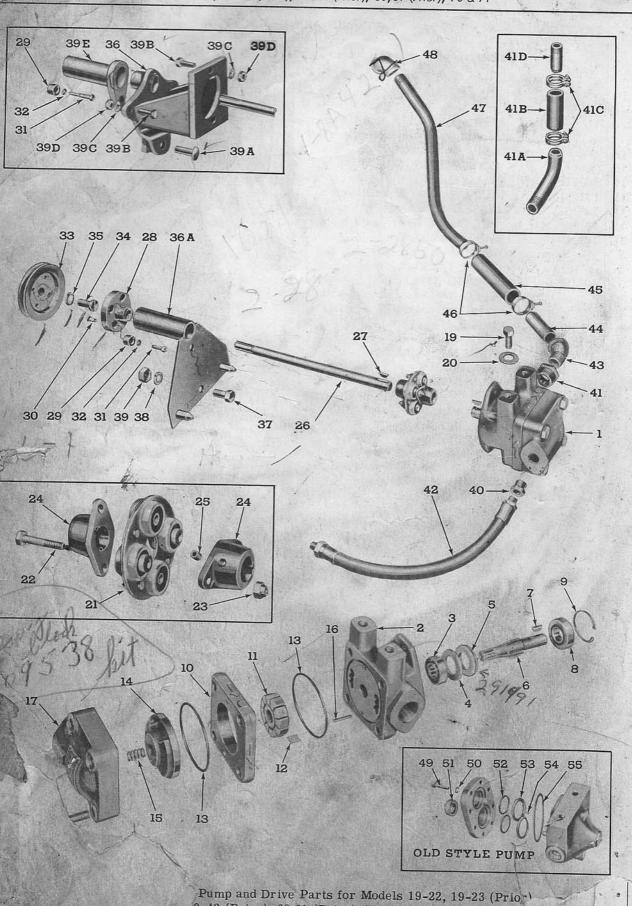

nww.niractorclub.com

9-42 (Prior), 60,61 (Prior), 70 & 71

Loaders

MODELS 19-22 and 23 (Prior), 19-42 (Prior), 60,61 (Prior), 70 & 71

	1	MODELS 19-22 and 23 (Prior), 19-42 (Prior), 60,61 (Prior), 70 & 71				
FIG.	PART NO.	NAME AND DESCRIPTION	CO	Y.	RE	EQ.
		Group 7-2-HYDRAULIC PUMP AND DRIVE PARTS	23			71
		For Models 19-22, 23 (Prior), 19-42 (Prior),	19-22,	19-42,	09	61,
(A) 74-8		60, 61 (Prior), 70 & 71	6	-6	19-	19-(
. 1	192504		1	10000	í	200
, ·	102001	PUMP ASSEMBLY, Hydraulic	1	1	1	1
2	192559	BODY, Pump	1	1	1	1
3	192568	BEARING, Drive Shaft	1	1	1	1
4	192558	WASHER, Spacer	1	1	1	1
5	192562	SEAL, Drive Shaft Bearing	1	1	1	1
6	192561	SHAFT, Drive	1	1	1	1
8	192569	KEY, Woodruff, 3/16 x 3/4	1	1	1	1
9	192589	BEARING, Drive Shaft	1	1 1	1	1
10	192563	HOUSING, Rotor	1	15350000	1	1
11	192564	ROTOR, Pump,	1	1	1	1
12	192565	VANE, Rotor	12	12	12	
13	192557	"O" Ring	2	2	- 2	2
14 15	192555 192556	PLATE, Pressure	1	1	1	1
16	192556	SPRING, Pressure Plate	1	1 2	1	$\begin{vmatrix} 1 \\ 2 \end{vmatrix}$
17	192560	COVER, Pump	1	1	2	1/
18	192592	CAPSCREW, 1/2 - 13 x 2-11/16 Hex. Hd. (Cover)	4	4	4	1
			- 10	200		7
	192043	ANGLE, Mounting, Pump (See Figure 53)				1
		BOLT, 1/2 - 13 x 1-1/2 Hex. Hd.)	2	519	1	
		WASHER, 1/2 Flat Angle to Bumper	4	1		1
19	. (NUT, 1/2 - 13 Hex. BOLT 1/2 - 13 y 1-1/4 Hey Hd 3	2	150	1	
20		BOLT, 1/2 - 13 x 1-1/4 Hex. Hd. Pump to Mounting Angle	2	1	10	1
21	192169			1		47
41	192109	COUPLING ASSEMBLY, Center (Riveted Assembly)	1	1	1	1
		separately.				Sec.
22	V	BOLT 5/16 24 v 1 5/9 How Hd			i ya	
23		NUT, 5/16 - 24 Lock Center Coupling to Flange	4	4	4	4
24	192199	FLANGE ASSEMBLY	2	2	2	2
4	102100	Consists of Flange which is not serviced separately, plus Set Screws	4	4	4	4
		listed below:		P. S.		
25	300353	SET SCREW, 1/4 - 20 x 1/2 Cup Point, Socket Hd	2	2	2	2
26	194355	SHAFT Drive 3/4 x.9-3/16		1	1	1
7	194354	SHAFT, Drive: 3/4 x 12-15/16	1	-		
27	193870	KEY, Woodruff, 3/16 x 3/4 (One included w/Pump)		1		
_	194340	HUB ASSEMBLY (Spline Shaft End)	2	2	2	2
A PASSING	131010	Consists of Hub which is not serviced separately,			T THE	I
		plus items listed below:			3	1
-	194341	HUB, Coupling		THE PERSON NAMED IN		X
- 1	194343	BLOCK, Rubber (Grommets)			1	1
-	194342	INSERT. Rubber Block (Bushing)	73	1		1
-		BOLT, 7/16 - 14 x 1-1/4 Hex. LOCKWASHER, 7/16 Hub to Sheave		1	4	4
28	102161					
20	192161	HUB ASSEMBLY (Spline Shaft End)	1			
		Consists of Hub which is not serviced separately, plus items listed below:				
29	190753	DI COUL DILL 10	4	Δ		
30	192164	INSERT, Rubber Block (Bushing)	4	4		
31	300376	BOLT, 1/4 - 28 x 1 Socket Hd. Hub to Sheave.				
32		LOCKWASHER, 1/4 Sheave	4	4		
CONTRACTOR AND ADDRESS.	The second secon		-	-	-	Annual Control

Loaders

MODELS 19-22 and 23 (Prior), 19-42 (Prior), 60,61 (Prior), 70 & 71

F) 4	G. PART NO	MODELS 19-22 and 23 (Prior), 19-42 (Prior), 60,61 (Prior), 70 & 71 NAME AND DESCRIPTION	T			
		THE MEDICAL PROPERTY.	-	YTG	1	1
		Group 7-2—HYDRAULIC PUMP AND DRIVE PARTS	19-22.23	19-42,70	19-60	19-61,71
33 34 35 	192167 194344	SHEAVE, Drive PIN, Dowel 1/4 x 3/4 - Sheave to Crankshaft CAPSCREW, 5/8 - 18 x 7/8, Slotted Hd. (Spec.) CAPSCREW, 5/8 - 18 x 1-3/16 LOCKWASHER, 5/8, Internal WASHER, 5/8, Flat Sheave to Crankshaft	1 1 1	1	18	1 1
36 36 37 38 39		PLATE, Suspension (Welded Assembly). PLATE, Suspension (Welded Assembly). BOLT, 5/8 - 18 x 1-5/8 Hex. Hd. WASHER, 5/8 Flat (Spacers) LOCKWASHER, 5/8 NUT, 5/8 - 18 Hex.	1 1 3 1 1	1	1	1
39A 39I 39C 39E	3	PIN, 3/4 x 2-1/4 (Rivet) COTTER PIN, 3/16 x 1-1/4 BOLT, 3/8 - 16 x 1-1/4 Hex. LOCKWASHER, 3/8 NUT, 3/8 - 16 Hex. Plate to Pump & Axle Support		1 1 4 4 4	1 1 2 2 2	1 1 2 2 2
-		BOLT, 1/2 - 20 x 1-1/2 Hex. LOCKWASHER, 1/2 BOLT, 5/8 - 18 x 1-1/2 Hex. LOCKWASHER, 5/8 Pin to Plate		1 1 1	1 1 1 1	1 1 1
41A 41B 41C 41D 42 43	8CM-8287	BUSHING, Reducing, 1/2 to 3/8 - Pump, Right Side ELL, Street, 3/8 x 450 BUSHING, Reducer, 1 to 3/4 (Not on Models 19-70,71) PIPE, Pump Inlet, 1 x 8 (Models 19-70,71 Only). HOSE, Inlet, 1-1/4 I.D. x 4-1/2 (Models 19-70,71 Only). CLAMP, Hose w/Screws (Models 19-70,71 Only) NIPPLE, Hose to Frame, 1 x 3 (Models 19-70,71 Only) HOSE, Hydraulic, w/Male Couplings, 3/8 ADAPTER, Hydraulic Hose, Female, 3/8 - Hose to Pipe ELL, Street, 3/4 - 450 - Pump, Left Side	1 1		1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
44	190395	NIPPLE, Pipe, 3/4 x 3 (Relocated on Models 19-70,71).	1	-	-	-
45 46 47	194383 190314 194382	HOSE, Outlet, 1 x 8-1/2 CLAMP, Hose, w/SCREW (Aircraft Type) (Not on Models 19-70,71) PIPE, Frame to Pump	1	2		2 2
48	193929 304578	PIPE, Frame to Pump (Not on Models 19-70,71)		1,		1
49 50 51 52	190371 191181	*PUMP ASSEMBLY, Hydraulic. Consists of Body, Poppet Assembly, Gears, Gear Shafts, Wear Plates and Cover which are not serviced separately, plus items listed below: BOLT, 5/16 - 18 x 1-1/4 Hex. Hd. LOCKWASHER, 5/16 SEAL, Oil. RING Sealing Woon Plate.	1 1 8 1	1	1	1
53 54 55	191182 1911 191 ₁ 84	WASHER, Tension PIN, Dowel, Wear Plate RING, Sealing, Cover	2 1 1 1 1 1			
	COMPANY AND RESIDENCE OF THE RESIDENCE OF	*The old style (Pesco) Pump is no longer serviced as a complete unit. Replaced by Part Number 192504 Pump Assembly. Interchangeable by adding a Bushing - Item 41.				
						*

MODEL 19-7 (Prior)

Group 8-BUCKET ASSEMBLIES, MATERIAL AND FORK TYPES

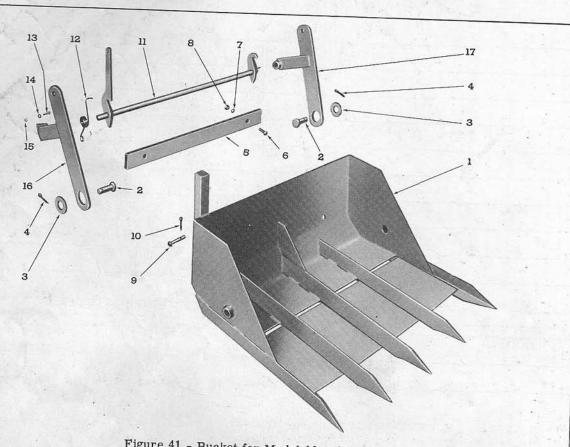


FIG. 41	PART NO.	NAME AND DESCRIPTION	QTY.
		Group 8-1—BUCKET For Model 19-7 (Prior)	REQ
	190619	BUCKET ACCENDED	
		BUCKET ASSEMBLY	1
45		Consists of Welded Bucket which is not serviced separately plus items	1
1	190629	PLATE, Dirt PIN, Pivot. WASHER, 1 Plain	
2	190623	PIN, Pivot.	1
3		WASHER, 1 Plain	2
5	190639	COTTER PIN, 1/4 x 1-1/2 Pivot Pin	2
6	130039		
7		I OCITIVA CONTRACTOR AND	2
3		NUT, 7/16 - 20 Hex. Bar to Bucket	2
-	300123	PIN, 3/8 x 2-1/2 (Drilled Rivet)	17
)		COTTER PIN. 1/4 x 1 Bucket Latch	
	190647	Tanu Laich. Irin (Wolded Aggestal.)	. 2
	190682	SPRING, Latch and Trip Lever BOLT, 1/4 - 28 x 1 Hex. Hd. 1	1.
		TIVA CITIED 111	1
		WASHER, 1/4 Plain NUT, 1/4 - 28 Hex. Spring to Bucket	
	190710	RELEASE Bucket Bu (Wald 14	1
	190711	RELEASE, Bucket, RH. (Welded Assembly) RELEASE, Bucket, LH. (Welded Assembly)	1

MODELS 19-8 (Prior), and 19-8A(Prior)

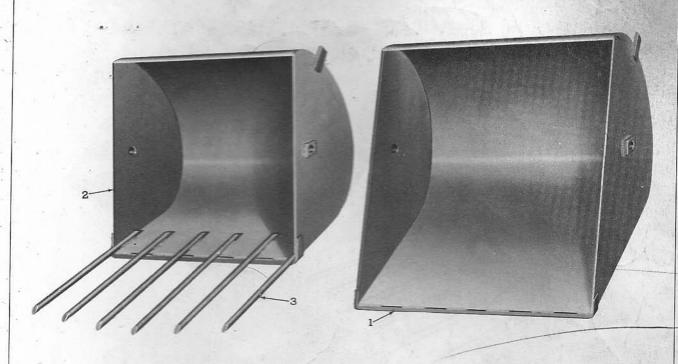


Figure 42 - Buckets for Models 19-8 (Prior) and 19-8A(Prior)

FIG.	MODELS	NAME AND DESCRIPTION	QTY. REQ.
		Group 8-2—BUCKETS For 19-8 (Prior) and 19-8A (Prior)	Ter.
1	19-9 19-9A	BUCKET ASSEMBLY, Material Type	. 1
2 2	19-10 19-10A	BUCKET ASSEMBLY, Manure Fork Type BUCKET ASSEMBLY, Manure Fork Type	1 1
3	190510	TINE, Fork	6
1 1			
- 1			

MODELS 19-21, 22, and 23 (Prior)

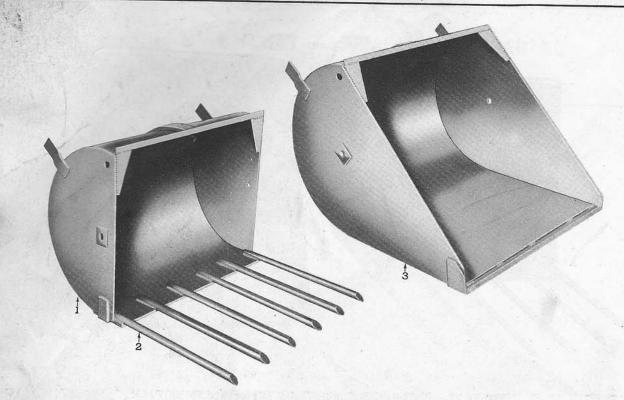


FIG. 43	PART NO.	DESCRIPTION	QTY REG
		Group 8-3—BUCKETS For Models 19-21, 22, 23 (Prior), 59 and 60	
1 2 3	100010	BUCKET ASSEMBLY, Manure Fork Type TINE, Fork BUCKET ASSEMBLY, Material Type	1 6 1
	by the cust	t Assembly is considered to be optional equipment to the Loader and is governed tomers required usage. Therefore, the Bucket is not furnished under the model of the Loaders and should be ordered separately.	
	Model 19-3 Model 19-3 It will be need	draulic Bucket Control Cylinder is used and it is necessary to replace the ambly with Serial numbers prior to the following: B1 Bucket Assembly, Serial #5059 B2 Bucket Assembly, Serial #3295 Cessary to replace the Pin & Clip Assembly, Pt. No. 190337, that was previously ing the control cylinder to the Bucket) with the parts listed below:	
	192551	Sleeve (1) Bolt, 5/8 - 11 x 5 Hex. Hd. (1) Lockwasher, 5/8 (1) Nut, 5/8 - 11 Hex. (1)	
	194498	Yoke and Gusset Assembly Adapts Model 19-31, & 32 Buckets to Model 19-23 Loader. Effective with Serial #16405 on Model 19-31 and with Serial #17851 on Model 19-32.	1

Loaders

MODELS 19-21, 22, 59, & 60

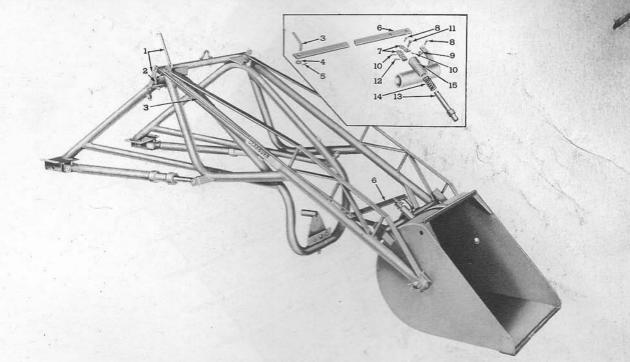


Figure 44 - Bucket Release Assembly for Models 19-21, 22, 59, & 60

FIG.	PART NO.	NAME AND DESCRIPTION	QTY. REQ
		Group 8-3A—BUCKET RELEASE ASSEMBLY For Models 19-21, 22, 59 and 60	
1 2 -	191356 191475	LEVER, Release (Welded Assembly)	1 1 2 2
3 4 5	191363	ROD, Release	1
6 7 8 8 9 10	190331 190353 300116 192075	BAR, Latch Control LINK, Latch PIN, 3/8 x 1 (Drld. Rivet) PIN, 3/8 x 1-1/4 (Drld. Rivet) WASHER, 3/8 Flat COTTER PIN, 1/8 x 3/4 Bar to Links and Pivot Point	
11 _ 12	303869	PIN, 3/8 x 1-1/2 (Drld. Rivet) COTTER PIN, 1/8 x 3/4 Links to Latch Pin	1
13 14 15	190359 190339	PIN, Latch	1

MODELS 19-29, 65



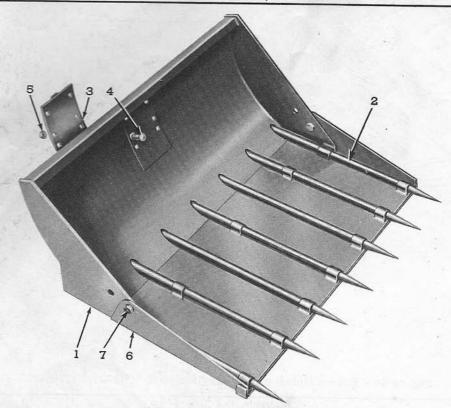


Figure 45 - Bucket/for Models 19-29, 65

FIG. 45	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
1 2 - 3 4 5	192331 192342 192338	Group 8-4—BUCKET For Models 19-29 and 65 BUCKET, Rear Mounted Loader (Welded Assembly). TINE, Bucket COTTER PIN, 1/4 x 1 - Tine to Bucket PLATE, Latch (Welded Assembly) BOLT, 7/16 - 14 x 1 Carr. NUT, 7/16 - 14 Hex. Latch to Bucket	1 7 7 1 6
6	Mod. 19-41	Plate assembly, Material (Welded Assy.) (Extra Equipment) Consists of Plate which is not serviced separately plus items listed below: BOLT, 5/8 - 11 x 1 hex. hd. NUT, 5/8 - 11 Hex. Plate to Bucket	2

MODELS 19-42 (Prior), 61 (Prior), 70,71

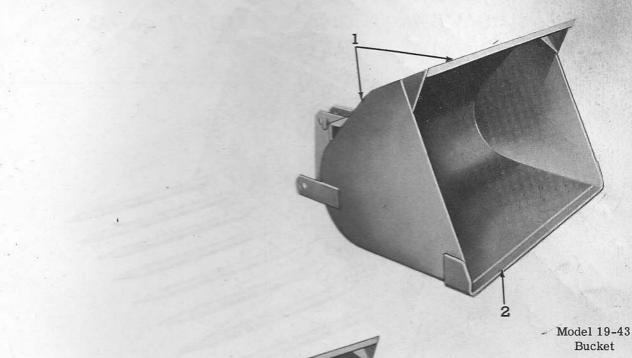

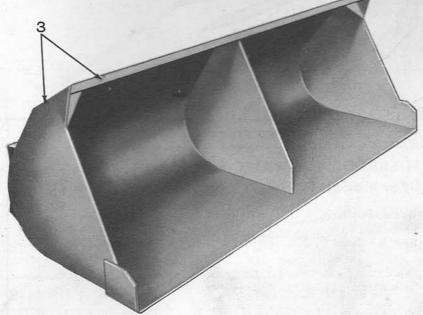

Model 19-53 Dearborn Snow and Grain Bucket

Figure 46 - Buckets, Models 19-43 and 53

FIG.	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
1 2	19-43 193902	Group 8-5—BUCKETS For Models 19-42 (Prior), 61 (Prior), 70 & 71 BUCKET ASSEMBLY, Material Type	1 1
3	19-53 194100	DEARBORN SNOW AND GRAIN BUCKET	1 1

MODELS 19-42 (Prior), 61 (Prior), 70 & 71

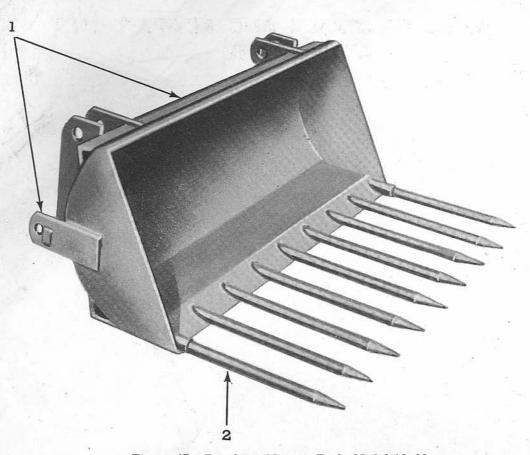


FIG. 47	PART NO.	NAME AND DESCRIPTION	QTY. REQ.				
1 2	Group 8-6—DEARBORN MANURE FORK For Models 19-42 (Prior), 61 (Prior), 70 & 71 19-68 192342 DEARBORN MANURE FORK TINE, Manure Fork						
		COTTER PIN, 1/4 x 1 - Tines	9				
		Ro					

Group 9—CRANES AND ADAPTER UNIT **ATTACHMENT**

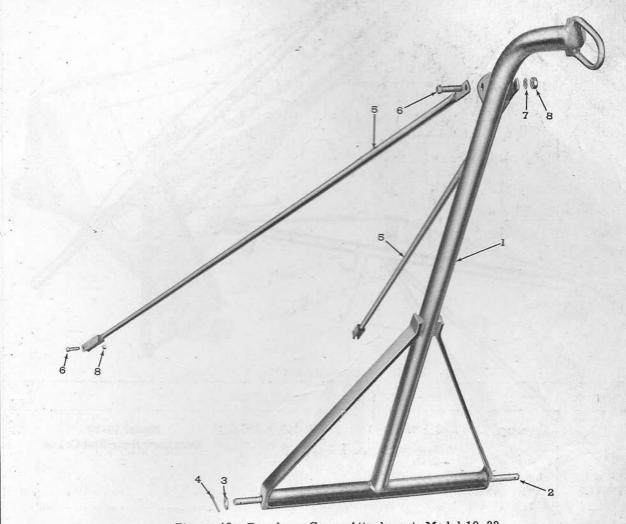


FIG. 48	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 9-1—DEARBORN CRANE ATTACHMENT For Models 19-21, 22, 23 (Prior), 59 and 60	1 1 2 1 1 1 1 1 1 1
1 2 3 4 5	192076 192063 192067	BOOM (Welded Assembly) SHAFT, Cross WASHER, 1 Flat COTTER PIN, 1/4 x 2 ROD, Guide (Welded Assembly) BOLT, 5/8 - 18 x 2-1/4 Hex. hd.	1 1 2 2
7 8		LOCKWASHER, 5/8 NUT, 5/8 - 18 Hex. Rods to Loader Frame and Boom	1 3

Loaders

MODELS 19-52, & 22-53 (Prior)

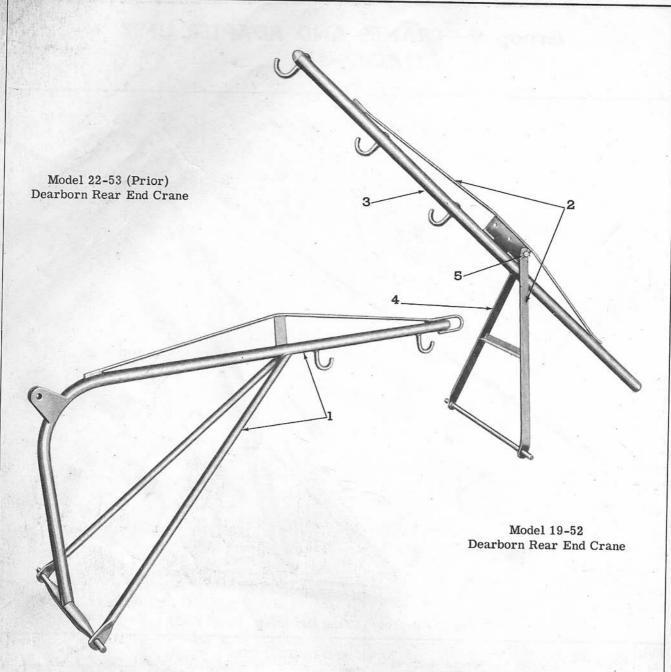


Figure 49 - Dearborn Rear End Crane, for Models 19-52, and 22-53 (Prior)

FIG. 49	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 9-2—DEARBORN REAR END CRANE For Models 19-52 and 22-53 (Prior) Fits All Tractors	6 11
1 - 2 3 4 5 5	19-52 112220 22-53 220070 220076	DEARBORN REAR END CRANE DECAL, Implement . DEARBORN REAR END CRANE BOOM (Welded Assembly) ARM, Lift (Welded Assembly). PIN, 5/8 x 1-3/4 Clevis COTTER PIN, 1/8 x 1-1/4 Lift Arm to Boom	1 · 1 · 1 · 1 · 1 · 1 · 1 · 1

Coaders

MODELS 19-42 (Prior), 61 (Prior), 70 & 71

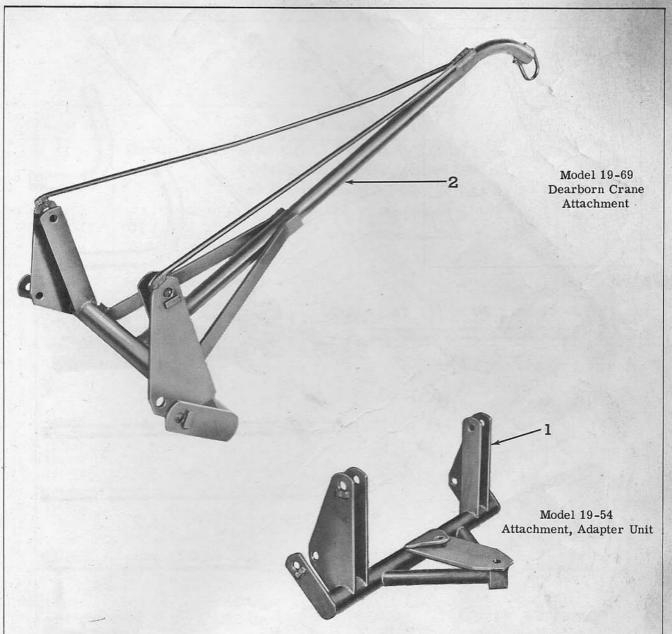


Figure 50 - Attachment, Adapter unit, Model 19-54 and Dearborn Crane Attachment, Model 19-69

FIG. 50	PART NO.	NAME AND DESCRIPTION	QTY.
7		Group 9-3—ATTACHMENT, ADAPTER UNIT, Model 19-54 and DEARBORN CRANE ATTACHMENT Model 19-69 For Models 19-42 (Prior), 61 (Prior), 70 & 71	
	19-54	ATTACHMENT, Adapter Unit NOTE: This Unit makes possible the usage of the following implements with Models 19-42, 61, 70, 71 Model 19-2 Dearborn Angle Dozer Model 19-3 Dearborn Blade Snow Plow Model 19-4 (Prior) Dearborn "V" Snow Plow PIN ASSEMBLY, ADAPTER	1
		BOLT, 1 - 8 x 6 Hex. Implement to Attachment	1
2	19-69 194100	DEARBORN CRANE ATTACHMENTDECAL, Implement	1

MODELS 19-21, 22

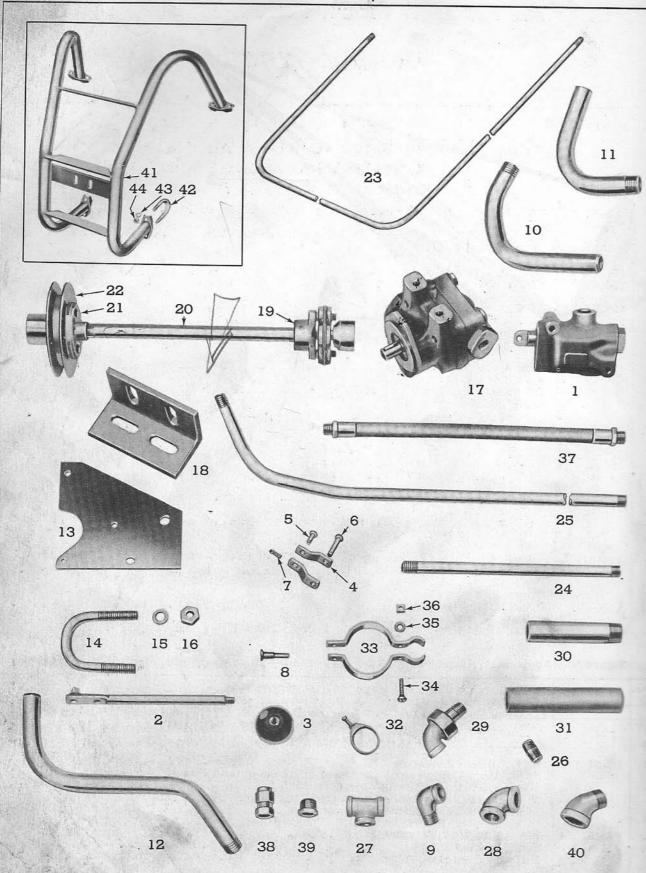


Figure 51 - Standard to Heavy Duty Loader Conversion Kit Model 19-26

MODELS 19-21, 22

Group 10—KITS

FIG. 51	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
		Group 10-1—STANDARD TO HEAVY DUTY LOADER CONVERSION KIT Model 19-26 For Model 19-21 to 19-22	
1	191479 300890	VALVE ASSEMBLY, Control (See Fig. 37 For Component Parts) BOLT, 5/16 - 18 x 3 Hex. Hd. LOCKWASHER, 5/16 NUT, 5/16 - 18 Hex. Valve to Mounting Plate	1
2 3	191345 190369	LEVER, Control Valve KNOB, Control Valve Lever	1 1
4 5 6 7	191362 192171 192172	LINK, Control Valve to Lever PIN, Link (Rivet, 5/16 x 3/4 Rd. Hd. Drld.) PIN, Link (Rivet, 5/16 x 1-1/4 Rd. Hd. Drld.) COTTER PIN, 1/8 x 3/4 - Link Pin	2 1 1 2
8 -	190365	PIN, Pivot, Valve Lever NUT, 3/8 - 24 Hex. LOCKWASHER, 3/8 COTTER PIN, 1/8 x 3/4 Pivot Pin	1
9	304503	ELL, Street, 3/8 - Valve Nipple to Tee	1
10 11 12	192546 192547 194382	PIPE, Valve to Hose PIPE, Frame to Hose PIPE, Frame to Pump	1 1 1
13 14 15 16	192046 191475	PLATE, Mounting, Control Valve	1 1 2 2
17 	192504	PUMP ASSEMBLY, Hydraulic (See Fig. 40 For Component Parts) BOLT, 1/2 - 13 x 1-1/4 Hex. Hd. Pump to Mounting Bracket	1 2
18 	192043	ANGLE, Mounting, Pump BOLT, 1/2 - 13 x 1-1/2 Hex. Hd. WASHER, 1/2 Flat NUT, 1/2 - 13 Hex. Bracket to Bumper Mounting	2
19		COUPLING ASSEMBLY (See Figure 40 for Component Parts)	1
20	194354	SHAFT, Drive	1 1
21	192161 300376	HUB ASSEMBLY, (See Figure 40 for Component Parts) BOLT, 1/4 - 28 x 1 Socket Hd. LOCKWASHER, 1/4 Hub to Sheave	1 4
22	192160 192167	SHEAVE, Drive	1 1 1
23 24 25	192151 304378 191359	PIPE, Equalizer (U-Shape) PIPE, Extension, 3/8 x 10 PIPE, High Pressure Feed Line, 3/8 x 69-1/4	1 1 1

FIG		MODELS 19-21, 22	
51	PART NO.	NAME AND DESCRIPTION	QTY
			REG
		Group 10-1-STANDARD TO HEAVY DUTY LOADER	
		CONVERSION KIT Model 19-26	
		For Model 10 01 - 10 00 /s	
		For Model 19-21 to 19-22 (Cont'd)	
26	191364	NIDDI E Omifica Co. 1 N. 1	
27	193658	NIPPLE, Orifice, Control Valve Restrictor, 3/8	1
28	304578	TEE, Pipe, 3/8 x 3/8 x 3/8	1
29	191164	ELBOW, Pipe, 3/4 - 90°	1
10	190395	UNION, Pipe - Feed Line to Valve NIPPLE, Pipe, 3/4 x 3	1
1	194383	NIPPLE, Pipe, 3/4 x 3 HOSE, Outlet 1 x 8 1/2	1
2	190314	HOSE, Outlet 1 x 8 1/2 CLAMP, Hose, w/Screw (Aircraft Type)	2
		CLAMP, Hose, w/Screw (Aircraft Type).	4
3	191471	CLAMP ASSEMBLY Ding	
		CLAMP ASSEMBLY, Pipe Consists of Two Half Clamps which are not gorwing.	5
		Consists of Two Half Clamps which are not serviced separately, plus items listed below:	
4			
5		BOLT, 1/4 - 20 x 1 Rd. Hd. Stove	10
6		LOCKWASHER, 1/4	10
	landers.		10
7	192114	HOSE, Hydraulic, w/Male Couplings, 2/9	
3	192115	ADAPTER, Hydraulic Hose Female	1
)	192593	BUSHING, Reducing 1 to 3/4 Proper Left Civil	1
)	190607	BUSHING Reducing 1/9 to 2/9	1
)	304496	ELL, Street, 3/4 - 450 - Pump Left Side	1 .
			1
	194463	BUMPER, Loader (Welded Assembly)	5
	191475		1
		LOCKWASHER, 1/2 NUT, 1/2 - 13 Hex Bumper to Frame	4
		NUT, 1/2 - 13 Hex.	8
			8
		NOTE:	
1		The following extra part is also included in this kit for conversion of	1
		manufactured prior to September 1, 1950.	30
	190454	NIPPLE, Pipe, 3/4 x 5	4 3 3
			3
			100
30			
18			
1			
			33
100			-
1			
			2900
100			
17 761	U and the first of		



MODELS 19-42 (Prior), 61 (Prior), 70 & 71


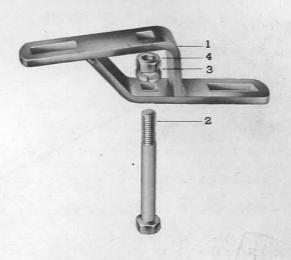


Figure 52 - Fender Bracket Kit

FIG. 52	PART NO.	NAME AND DESCRIPTION	QTY. REQ.
1 2 3 4	194447	Group 10-2—FENDER BRACKET KIT For Models 19-42(Prior), 61 (Prior), 70 & 71 KIT, Fender Bracket Consists of Brackets which are not serviced separately plus items listed below: BOLT, 5/8 - 11 x 6 Hex. Hd. LOCKWASHER, 5/8 NUT, 5/8 - 11 Hex. Fender	1

MODELS 19-21, 22, 42 (Prior) & 70

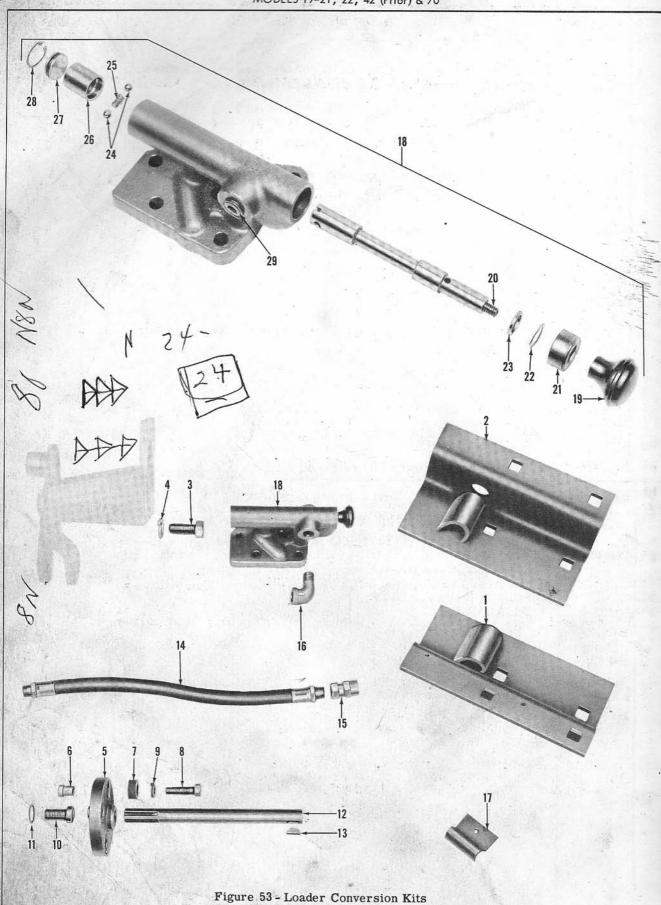

Loaders

MODELS 19-22, 22, 42 (Prior), 70

FIG. 53	PART NO.	NAME AND DESCRIPTION	1500	QTY REG	
		Group 10-3—KITS FOR CONVERSION TO NAA TRACTORS	9-62	19-63	19-64
1000		STANDAND LOADER CONVERSION KIT MODEL 19-62 for MODEL 19-21	1		
		HEAVY DUTY LOADER CONVERSION KIT AND		1	
· 17 17 18		MODEL 19-64 for MODEL 19-42 (Prior), 70			1
1 2 - 3 4	194369 194370	BRACKET, Axle Mounting, L.H. BRACKET, Axle Mounting, R.H. BOLT, 1/2 - 20 x 1-1/2 Hex. Hd. LOCKWASHER, 1/2 BOLT, 5/8 - 18 x 1-1/2 Hex. Hd. LOCKWASHER, 1/2 Suspension Plate to Axle Support	1	1 1 1 1	1 1
5	194340	HUB ASSEMBLY, Sheave		1	1
7 8 9	194343	INSERT, Rubber Block BLOCK, Rubber BOLT, 7/16 - 14 x 1-1/4 Hex. Hd. Hub to Sheave LOCKWASHER, 7/16		4 4	4
10 11 12 13 14 15 16	194344 194355 192114 192115 194404	CAPSCREW, 5/8 - 18 x 1-3/16 Fill. Hd. WASHER, 5/8 Flat SHAFT, Drive, Pump KEY, 3/16 x 3/4, #9 Woodruff HOSE, Hydraulic w/Male Couplings, 3/8 x 16-3/4 ADAPTER, Hose, 3/8 ELL, Street, 3/8, 90° - Valve to Hose CLAMP, Pipe	1 1 1	1	1 1 1
9 0 1 2 3	Model 23-10 192240 230455 230706 230461	SELEC-TROL VALVE Consists of Body and Spool which are not serviced separately plus items listed below: KNOB, Control SET SCREW, 5/16 - 18 x 7/8 Hex. Socket, Headless - Knob to Spool SEAL, Oil RING, Snap Internal WASHER, Flat, Special	1 1 1 1 1 1 1 1		
4 5 6 7 - 8	230458 230459 230462 230463 230464 230457	BALL, Steel, Detent, 1/4. SPRING, Tension, Detent Ball SLEEVE, Detent Ball RETAINER, "O' Ring "O' RING. 674 ID x .875 OD x .103 Rubber RING, Snap, Internal	1 1 1 1 1		
-	NAA-937-A NAA-937-D NAA-937-E	"O" RING, .301 ID x .438 OD x .070 Rubber "O" RING, .424 ID x .625 OD x .103 Rubber of Valve of Valve	1 3 1		
9		PIPE PLUG, 3/8 - 16 x 3/4 Socket, Headless - Body	1		

190351 Rod 36	PART NO.		PAGE NO	. PART NO		PAGE NO
19-9A	11 04 CT 1.5 CT	Bucket Assembly	. 71	The second		
19-10		Bucket Assembly	. 71	190369	Knoh	51 (272)
19-10A Bucket Assembly 71 190371 Soal 65,69 19-32 Bucket Assembly 72 190375 Pin 32 19-32 Bucket Assembly 74 190377 Pin and Clip 24 19-43 Bucket Assembly 75 190380 Screen 65 19-53 Dearborn Rear End Crane 78 190380 Screen 65 19-54 Attachment, Adapter Unit 79 190382 Plate 65 19-68 Dearborn Manure Fork 76 190388 Pipe 25 19-69 Dearborn Crane Attachment 79 190388 Pipe 25 19-69 Dearborn Crane Attachment 79 190389 Union 59 19-69 Dearborn Crane Attachment 79 190398 Pipe 25 2N-574 Pin, Linch 31 190416 Ring 82 2N-575 Ring 31 190416 Ring 37 8N-633 Valve 48,49 190447 Nut 37 8N-638 Valve 48,49 190448 Wiper 37 8N-638 Valve 48,49 190459 Cylinder Assembly 38 8NAA-937-D 'O'' Ring 85 190450 Cylinder Assembly 38 8NAA-937-D 'O'' Ring 86 190465 Bolt 38 8NAA-937-D Pipe 24,25 190467 Box 38 11220 Decal 35,78 190270 Pipe 24,25 190470 Wiper 38 190270 Pipe 24,25 190467 Box 38 190312 Nipple 59 190487 Plug 26 190314 Clamp 59 190487 Plug 26 190315 Strainer Assembly 65 190467 Box 38 190316 Strainer Assembly 39 190459 Plug 26 190317 Pipe 24,25 190467 Box 38 190318 Strainer Assembly 65 190468 Plug 25,26 190338 U-Bolt and Plate Assembly 32 190471 Wiper 38 190339 Plug 30,48 Plug 26 190331 Bar 23 23 190331 Bar 23 23 190333 U-Bolt and Plate Assembly 32 190571 Brace 23 190336 Plug 33,73 190584 Cylinder 36 190355 Plug 33,73 190584 Cylinder 36 190356 Plug 33,73 190584 Cylinder 36 190356 Plug 33,73 190584 Cylinder 36 190357 Plug 36 190591 Plug 36 190358 Plug 36 190591 Plug 36 190358 Plug 33,73 190584 Cylinder 36 190358 Plug 33	19-10	Bucket Assembly	. 71	100000	KIIOD	
19-31 Backet Assembly 72 19-32 Bucket Assembly 72 19-41 Plate Assembly 74 19-43 Bucket Assembly 75 19-52 Dearborn Rear End Crane 78 190380 Screen 65 19-52 Dearborn Row and Grain 190381 Wrench 37 19-52 Dearborn Row and Grain 190381 Wrench 37 19-54 Attachment 75 190382 Plate 65 190389 Plipe 25 25 23-10 Selec Tyol Valve 50,85 26 27 27 27 27 27 27 27	19-10A	Bucket Assembly	71	100271	05-1	10.
19-32 Bucket Assembly 74 190377 Pin and Clip 24 19-43 Bucket Assembly 75 32 26 19-53 Bucket Assembly 75 190382 Plate 65 37 19-54 Attachment, Adapter Unit. 79 190382 Plate 65 19-68 Dearborn Snow and Grain 19-68 Dearborn Manure Fork 76 190382 Plate 65 19-69 Dearborn Crane Attachment 79 190389 Union 59 19-310 Selec-Trol Valve 50,85 36 28 28 28 28 28 28 28 2		Bucket Assembly	72			. 65,69
19-41	19-32	Bucket Assembly	72	190375	Pin	. 32
19-32 Backet Assembly 75 19-32 19-32 19-52 Dearborn Rear End Crane 78 190380 Screen 65 19-53 Dearborn Show and Grain 19-54 Attachment, Adapter Unit. 79 190381 Wrench 37 19-54 Attachment, Adapter Unit. 79 190389 Union 59 19-68 Dearborn Manure Fork 76 190389 Union 59 190323 Union 59 190321 Selec-Trol Valve 50,85 65 65 65 65 65 65 65	19-41	Plate Assembly	. 12	100000		[24
19-52	19-43	Bucket Assembly	. 14	190377	Pin and Clip	. { 26
19-53 Dearborn Snow and Grain 190380 Screen 65		Dearborn Roar End Crons	. 75			32
Bucket		Dearborn Spow and Coni	. 78		Screen	. 65
19-54		Bucket	THE CONTRACTOR	1	Wrench	. 37
19-68	19-54	Attachment Adout II	. 75		Plate	. 65
19-69		Dearbase M.	. 79		Pipe	. 25
23-10 Selec-Trol Valve 50,85 50,85 56 59		Dearborn Manure Fork		190389	Union	59
2N-574 Pin, Linch		Dearborn Crane Attachment		190391	Pipe	25
2N-574	23-10	Selec-Trol Valve	50,85			
Nipple	017 554		30			19270
2N-575 Ring	ZN-574	Pin, Linch	31	190395	Nipple	100000
No.614			36			
Sect				Late Section 1		C 624 10-5
SN-614 Gasket	2N-575	Ring	31	190416	Ring	(82
SN-614 Gasket			36		Nut	. 37
88-638		Gasket	43	1. Process (1992) 212 (27 25 Policy (1992) 1	Winor	. 37
NAA-937-A (O'' Ring 85 190459 Cylinder Assembly 38 NAA-937-D (O'' Ring 85 190460 Cylinder 38 190460 Cylinder 38 190463 Shaft 38 NAA-937-E (O'' Ring 85 190463 Shaft 38 NAA-3126A Pin 68 190464 Stop 38 NAE 112220 Decal 35,78 190155 Pin Assembly 79 190267 Pipe 24 190466 Lockwasher 38 190268 Tee 59 190467 Box 38 190269 Pipe 24,25 190469 Nut 38 190273 Union 59 190276 Cap 24 190466 Cylinder Assembly 32 190487 Plug 38 190312 Nipple 59 190488 Plug 26 190310 Rod 32 190487 Plug 26 190488 Plug 25,266 190510 Tine 71,72 190314 Clamp 59 190488 Plug 25,266 63 190550 Cross member 21 190318 Strainer Assembly 65 190550 Cross member 21 190318 Strainer Assembly 65 190550 Cross member 21 190568 Brace 23 190339 Spring 33,73 190571 Brace 23 190339 Pin 33,73 190577 Arm 30 190350 Pin 33,73 190587 Arm 30 36,37 190355 Pin 33,73 190589 Shaft 36 190365 Pin 33,73 190589 Shaft 36,37 190365 Pin 36,37 190579 Ring 36,37 190589 Shaft 36,37 190589 Shaft 36,37 190365 Pin 36,37 190589 Shaft 36	8N-638				Nipple	. 37
NAA-937-D "O" Ring 85 190460 Cylinder 38 NAA-937-E "O" Ring 85 190463 Shaft 38 NAA-3126A Pin 68 190464 Stop 38 112220 Decal 35,78 112220 Decal 35,78 190155 Pin Assembly 79 190267 Pipe 24 190467 Box 38 190269 Pipe 24,25 190467 Box 38 190270 Pipe 24,25 190469 Nut 38 190270 Pipe 24,25 190470 "O" Ring 38 190276 Cap 24 190467 Cap 24 190470 "O" Ring 38 190276 Cap 24 190471 Wiper 38 190310 Rod 32 190312 Nipple 59 190488 Plug 25,26 54 190310 Rod 56 190550 Cross Brace 21 190314 Clamp 59 190314 Clamp 59 190314 Strainer Assembly 65 190550 Cross Brace 21 190318 Strainer Assembly 65 190568 Brace 23 190331 Bar 23 190331 Bar 32 190333 U-Bolt and Plate Assembly 32 190573 Arm 30-35 190334 Link 33,73 190572 Brace 23 190351 Rod 33 190359 Pin 33,73 190589 Shaft 36,37 190368 Pin 33,73 190589 Shaf	NAA-937-A	"O" Ring	85		Cylinder A 13	. 82
NAA-937-E 40" Ring 85 190463 Shaft 38 NAA-937-E 40" Ring 68 190464 Stop 38 112220 Decal 35,78 112220 Decal 35,78 190265 Pin Assembly 79 190267 Pipe 24 190466 Lockwasher 38 190268 Tee 59 190467 Box 38 190270 Pipe 24,25 190469 Nut 38 190270 Pipe 24,25 190470 "O" Ring 38 190273 Union 59 190276 Cap 24 190471 Wiper 38 190310 Rod 32 190487 Plug 26 190487 Plug 26 190312 Nipple 59 190488 Plug 26 190488 Plug 26 19050 Shaft 34 190314 Clamp 59 190488 Plug 26 68 190550 Crossmember 21 190318 Strainer Assembly 65 190550 Crossmember 21 190318 Strainer Assembly 65 190568 Brace 23 190331 Bar 23 190338 U-Bolt and Plate Assembly 32 190573 Arm 30-35 190339 Spring 33,73 190572 Brace 23 190339 Pin 33,73 190589 Shaft 36 190589 Pin 33,73 190589 Shaft 36 190369 Pin 33,73 190589 Shaft 36 190368 Pin 33,73 190589 Shaft 36 36,37	NAA-937-D	"O" Ring	85		Cylinder Assembly	. 38
NAA-3126A Pin 68 190464 Stop 38	NAA-937-E	"O" Ring	95		Cylinder	. 38
SCM Section	NAA-3126A	Pin			Shart	. 38
112220 Decal 35,78 190405 Bolt 38 1902155 Pin Assembly 79 79 190267 Pipe 24 190466 Lockwasher 38 190268 Tee 59 190467 Box 38 190270 Pipe 24,25 190469 Nut 38 190271 Union 59 190276 Cap 24 190471 Wiper 38 190310 Rod 32 190488 Plug 26 190312 Nipple 59 190488 Plug 25,26 53 190488 Plug 25,26 54 190510 Tine 71,72 190314 Clamp 65 190550 Cross Brace 21 190318 Strainer Assembly 65 190552 Plate 21 190331 Bar 23 190338 U-Bolt and Plate Assembly 32 190572 Brace 23 190339 Spring 33,73 190572 Brace 23 190350 Pin 33,73 190584 Cylinder 36 190350 Pin 33,73 190589 Shaft 36 190350 Pin 33,73 190589 Shaft 36 190365 Pin 52,81 190591 Ring 36,37 190365 Lower 190561 Rod 36 190365 Pin 52,81 190591 Ring 36,37 190366 Lower 190591 Ring 36,37 190367 Lower 190591 Ring 36,37 190368 Lower 190591 Ring 36,37 190367 Lower 190591 Ring 36,37 190368 Lower 190591 Ring 36,37 190368 Lower 190591 Ring 36,37 190367 Pin 52,81 190591 Ring 36,37 190368 Lower 190591 Ring 36,37 190368 Lower 190591 Ring 36,37 190368 Lower 190591 Ring 36,37 190370 190487 190499 Ring 36,37 190489 190471 Wiper 38 190490 Nut 190471 Wiper 38 19049049 Nut 190471 Wiper 38 190490 Nut 190471 Wiper 190471 Wiper 190471 190490 Nut 190471 Wiper 190471 Viver 190471 190490 Nut 190471 Viver 190471 Viver 190471 190490 Nut 190471	8CM-8287	Clamp				
190267		Decal		190400	Bolt	. 38
190267	190155	Pin Assembly	Section of the sectio			
190268 Tee		Pine		100466		
190269	CONTRACTOR OF THE PARTY OF THE	Too			Lockwasher	. 38
190270		Ding		THE RESERVE OF THE PARTY OF THE	Box	38
190273		Dine		THE RESERVE OF THE PERSON NAMED IN COLUMN	Nut	3.0
190276		Union		190470	"O" Ring	38
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$		Con		100		
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$		Pod		190471	Winer	00
190314 Clamp 59		Nimal-		190487	Plug	38
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	190312	Nippie	59	10 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Plug	
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$			25. 1 V. CORNERS STREET, 19.	HEROTECH PROPERTY OF THE		
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$		15	54		Tino	
Strainer Assembly Stra	100214		56		Side Momban and	71,72
190318 Strainer Assembly 190550 190551 Plate 21 190552 Plate 21 190552 Plate 21 190568 Brace 23 190571 Brace 23 190571 Brace 23 190572 Brace 23 190573 Arm 30-35 190339 Spring 33,73 190577 Arm 30 30 190351 Rod 33 190583 Hoist Assembly 36 190359 Pin 33,73 190589 Shaft 36 190368 Lawer 190368 Lawer 190368 Lawer 190591 Ring 36,37 190368 Lawer 190368 Lawer 190361 Rod 33 190581 Rod 33 190589 Shaft 36 190368 Lawer 36,37 190581 Ring 36,37	190314	Clamp	59	100011	Choose Pos	The same of
190318 Strainer Assembly 65			65	190550	Cross Brace	21
190318 Strainer Assembly 65			68		Crossmember	21
190318 Strainer Assembly 65 190568 Brace 23			82		Plate	21
	190318	Strainer Assembly	65		Plate	21
190331 Bar 23 32 73 190572 Brace 23 23 190573 190338 U-Bolt and Plate Assembly 32 190573 Arm 30-35 30-35 30 30 190342 Link 59 190583 Hoist Assembly 36 36 36 36 36 36 36 36 37 190353 Link 33,73 190584 Cylinder 36 36 36 36 37 36 36 37 190368 Pin 33,73 190589 Shaft 36 36 37 36 36 37					Brace	23
190331 Bar 32 190572 Brace 23 190338 U-Bolt and Plate Assembly 32 190573 Arm 30-35 190339 Spring 33,73 190577 Arm 30-35 190342 Link 59 190583 Hoist Assembly 36 190351 Rod 33 190353 Link 33,73 190584 Cylinder 36 190359 Pin 33,73 190589 Shaft 36 190365 Pin 52,81 190591 Ring 36,37			ſ 23	190971	Brace	23
190338 U-Bolt and Plate Assembly 32 190572 Brace 23 190339 Spring 33,73 190573 Arm 30-35 190342 Link 59 190583 Hoist Assembly 36 190351 Rod 33 190353 Link 33,73 190584 Cylinder 36 190359 Pin 33,73 190589 Shaft 36 190365 Pin 52,81 190591 Ring 36,37	190331	Bar				
190338 U-Bolt and Plate Assembly 32 190573 Arm 30-35 190339 Spring 33,73 190577 Arm 30-35 190342 Link 59 190583 Hoist Assembly 36 190351 Rod 33 190583 Cylinder 36 190353 Link 33,73 190584 Cylinder 36 190359 Pin 33,73 190589 Shaft 36 190368 Lever 52,81 190591 Ring 36,37				1905.72	Brace	-
190339 Spring 33,73 190577 Arm 30 190342 Link 59 190583 Hoist Assembly 36 190351 Rod 33 190353 Link 33,73 190584 Cylinder 36 190359 Pin 33,73 190589 Shaft 36 190365 Pin 52,81 190591 Ring 36,37	190338	U-Bolt and Plate Assembly	THE REST OF THE PARTY OF THE PA		Arm	
190342 Link 59 190583 Hoist Assembly 36 190351 Rod 33 190583 Hoist Assembly 36 190353 Link 33,73 190584 Cylinder 36 190359 Pin 33,73 190589 Shaft 36 190365 Pin 52,81 190591 Ring 36,37	190339	Spring	A CONTRACTOR OF THE LOCAL PROPERTY OF THE LO		Arm	
190351 Rod 33 190353 Link 33,73 190584 Cylinder 190359 Pin 33,73 190589 Shaft 36 190365 Pin 52,81 190591 Ring 36,37	190342	Link			Hoigt Aggarda	
190353 Link	190351	Rod		-2000	noist assembly	36
190359 Pin 33,73 190584 Cylinder 36 190365 Pin 33,73 190589 Shaft 36 190368 Lever 52,81 190591 Ring 36,37	190353	Link		100504		
190365 Pin		Pin			Cylinder	36
190368 Layer 36,37		Pin			Shaft	36
190592 Ring 36		Lever	The state of the s		Ring	36,37
			59	190592	Ring	

PART NO.		PAGE NO.	PART NO.		PAGE NO.
190596	Packing	. 36	190950	Clamp	23
190597	Nut	. 36	190951	Housing and Bushing Assy	. 36
		[43	190952	Handle	. 23
190600	Connector	. 48	190953	Rod	. 31
		49	190954	Rod	31
190602	Pipe	. 48	191061	Flange Assembly	
190603	Bracket	. 48,49	191140	Yoke	
190605	Valve Assembly	. 48			43
		ſ48			53
190607	Bushing	56	191164	Union	54
100001	Dabining	00			56
		l 82			(81
190608	Fitting		191181	Ring	
190619	Bucket Assembly		191182	Washer	
190623	Pin		191183	Pin	
190629	Plate		191184	Ring	
190639	Bar		191192	Coupling	
190647	Shaft and Latch		191196	Hub w/Pins Assembly	
190651	Cable		191338	Bracket	
190657	Knob		191345	Lever	
190658	Holddown		191356	Lever Assembly	THE REAL PROPERTY OF THE PERSON OF THE PERSO
190668	Post and Base		191357	Clamp Assembly	
190669	Post and Base				53
190672	Chain		191359	Pipe	
190673	Clevis				81
1.90677	Pin		191360	Pin & Clip	
190678	Pin		191362	Link	
190679	Pin		191363	Rod	
190682 190693	Spring		101204	Nimala	∫ 53 54
190694	Bracket		191364	Nipple	81
190708	Bracket		191463	Anm Aggambly	The state of the s
190710	Knob		191403	Arm Assembly	· 645
190711	Release				53
190736	Fitting		191471	Clamp Assembly	55
190737	Bushing		THE CASE OF STREET		82
190740	Cylinder				COL
190741	Shaft				[26
190742	Ring				27
190743	"O" Ring				32
190747	Packing Y				49
190751	Coupling Assembly		191475	U-Bolt	. 52
190753	Block				54
190757	Hub w/Pins Assembly				73
190760	Shaft				81
190762	Flange				82
190770	Plate		191479	Valve Assembly	. 60,81
190771	Plate	. 65	191743	Valve Assembly	. 59
190778	Spring	. 32	192010	Hose	. 48
190813	Ring		192011	Adapter	. 48
190814	Retainer		192021	Coupling	
190815	Spring	. 59	192025	Bracket	
190816	Nut		192026	Bracket	
190817	Gasket		192034	Pin	. 45
190818	Cap				
190936	Hose		192038	Pipe	CONTRACTOR IN CO
190943	Hose		192039	Cylinder Assembly	THE PARTY OF THE P
190944	Adapter	. 65	192040	Pipe	45,55

Loaders

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO
192043	Angle	67,81	192149	Wiper	45,47
		[52	192150	Packing	39
192046	Plate	54			53
		81	192151	Pipe	
192063	Shaft	77			81
192067	Rod		192152	Sheave	
192075	Pin		192153	Plate	26,68
192076	Boom	77	192160	Sheave	
192088	Cylinder Assembly		192161	Hub Assembly	. 68,81
		ſ 4 5	192164	Insert	. 68,81
192103	Coupling	{ 47	102101	misert	68
		56	192167	Bolt	
192109	Pipe		102101		1000
		ſ 24	192169	Counting Aggamble	81
	The state of the first three the state of the	25	192171	Coupling Assembly	67
		47	192172	Pin	. 52,81
		49	192181	Pin	52,81
	~ , m - 1 (1 (1)	50	192199	Bracket	. 49
192114	Hose	53	THE RESERVE THE RESERVE AND ADDRESS OF THE PARTY OF THE P	Flange Assembly	. 67
		55	192204	Retainer	. 63
X 100 - 1			192205	Spring	. 60,63
80		56	192207	Washer	. 60,63
0		68	192213	Spacer	. 63
18		82	192218	Seal	. 63
01 10		- 185	192223	Gasket	. 63
()	The second second second	24	192230	Spring	. 60,63
[18		25	192237	Gasket	. 63
- 10		43	192240	Knob	. 85
		45	192242	Link	. 63
91		47	192243	Pin	. 63
192115		49	192244	Pin	. 63
/ 192115	Adapter	{ 50	192251	Washer	. 34
		53	192264	Follower & Ball Assembly.	. 60
		55	192267	Spring	. 60
	111 ~	56	192269	Seal	. 60
	401	68	192270	Slide	. 60
		82	192271	Spring	. 60
100110		L 85	192272	Cap	. 60
192116	Valve Assembly	49	192273	"O" Ring	. 47,60
192121	Pipe		192277	Spacer	
192122	Cylinder	39	192281	Gasket	. 60
192125	Shaft		192282	Cap	. 60
192126	Stop		192331	Bucket	. 74
192127	Box		192338	Plate	. 74
192128	Packing		192342	Tine	
192129	Gland		192343	Washer	. 43
192130	Wiper	. 39	192350	Cradle	. 29
		ſ 39	192361	Yoke	. 29
192131	"O" Ring	40	192363	Roller	
102101	o rung	45 .	192364	Spring	
		47 5	192366	Spacer	
192132	Nut		192370	Arm	. 29
192137	Cylinder	. 45	192380	Arm	
192140	Shaft	. 45	192385	Arm Assembly	. 29
192142	Cup		192390	Arm Assembly	. 29
192143	Spacer		192391	Link	
192145	Yoke		192392	Link	
192146	Gland		192395	Strut	
192147	Nut		192400		
		. 40,41	192400	Strut	. 29

PART NO.	PART NAME I	PAGE NO.	PART NO.	PART NAME	PAGE NO
192402	Brace	29	192592	Capscrew	67
192405	Spacer	29	The state of the s		56
192410	Frame Assembly	29	192593	Bushing	₹68
192424	Link	29			82
192426	Spacer	29	192846	Cap	27
192427	Spacer	29	193603	Frame	26
192428	Spacer	29	193636	Spacer	63
192429	Spacer	29	193637	Washer	63
192430	Rod	29	193641	Gasket	63
192456	Cylinder Assembly	43	193642	Seal Assembly	63
192461	Shaft	43	193645	Bracket	63
192462	"O" Ring	43	193647	Cap	63
192463	Wiper	43	193650	Follower	63
, 192465	Hitch	43	193651	Bonnet	63
192466	Pin	43	193652	"O" Ring	63
192470	Rod	43	193658	Tee	43
192473	Pin	43	193662	Barrel & Piston Assembly	63
192474	Clip	43	193830	Pin	43
192478	Tube Assembly	43	193831	Pin	43
192479	Tube Assembly	43	193854	Shaft	
192481	Tube Assembly	43	193855	Pin	45,47
192483	Tee	43	193856	Pin	
192484	Hose	43	193888	Pin	35
		65	193902	Lip	75
192504	Pump Assembly	67	193908	Bumper	A STATE OF THE STA
		81	193915	Pin	
192521	Cap	26			[27
192522	Lever	63	193916	Pin	35
192523	Lever	63			[47]
192524	Valve Assembly	63	193923	Cylinder	A SECTION OF THE PERSON OF THE
		25	193928	Pipe	
192544	Pin, Bucket	32	193929	Pipe	
152544	Till, Bucket	33	193930	Pipe	
		(34			45
			193931	Pipe	47
192546	Pipe	53,81	100010		56
		53	193942	Pipe	56 56
192547	Pipe	54	193943	Pipe	12.7
		81	193946	Cylinder Assembly	THE RESERVE OF THE PARTY OF THE
192548	Pipe	54	193947	Cylinder	
192551	Sleeve	45,72	193949 193952	Shaft	CONTROL STATE
192555	Plate	67	193953	Nut	2.0
192556	Spring	67	193954	Packing	
192557	"O" Ring	67	193957	Gland	
192558	Washer	67	193958	Wiper	THE RESERVE OF THE PARTY OF THE
192559	Body	67 67	193960	Cylinder Assembly	CALL THE REPORT OF THE PARTY OF
192560	Cover	67	193961	Washer	The state of the s
192561	Shaft		193963	Plug	
192562	Seal	67 67	193976	Pin	The second second
192563	Housing	67	193990	Chain	THE RESERVE OF THE PARTY OF THE
192564	Rotor		193991	Lug	0.5
192565	Vane	67	193996	Valve Assembly	
192568	Bearing		194009	Pin	00
192569	Bearing	0.4	194093	Pin	THE SELECTION OF THE SECOND SE
192580	Shaft		194094	Pin	
192583	Collar			Decal	THE RESERVE
192589	Ring	01	194142	Pipe	
192591	Pin	01	101114		

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO
194145	Hose	56,68	220070	Poom	
194147	Pipe	56,68	220076	Boom	. 78
194153	Pipe	56	230455	Arm	
194241	Plate	26,68	230457	Seal	. 85
194284	Coupling	43	230457	Ring	. 85
194340	Hub Assembly	67,85	230459	Ball	. 85
194341	Hub	67	230459	Spring	. 85
194342	Bushing	67,85	230461	Washer	. 85
194343	Block	67,85	230462	Sleeve	. 85
194344	Capscrew			Retainer	. 85
194349	Valve Assembly	68,85 63	230464	"O" Ring	. 85
194350	Bracket	63	230706	Ring	. 85
194351	Cap		300082	Pin	. 31
	отр	63	300116	Pin	. 73
194353	Gasket	60	300122	Washer	. 65
194354	Shaft	63	300123	Pin	. 70
194355	Shaft	67,81	300353	Set Screw	. 65
194365	Plate	67,85	300376	Bolt	. 81
194369	Bracket	26	300385	Bolt	. 27
194370	Bracket	26,85	300890	Bolt	. 81
194382	Bracket	26,85	303869	Pin	. 73
	1.pc	68,81	304008	Nipple	. 49
		53	304015	Nipple	. 59
		54	304062	Nipple	. 48
194383	Hose	56	304071	Nipple	. 50
101000	nose	59	304072	Nipple	. '59
		65	304237	Nipple	49,50
45 6 - 6		82			(25.
		(02	304378	Pipe	53
194387	Hose	56			55
194396	Hanger	43	204200	Region of Adjust and Section 2	L 81
194404	Clamp	50,85	304382	Pipe	49,50
194434	Bracket	43	304486	Ell	59
194441	Valve Assembly	63	304494 304496	Ell	56,68
194447	Kit	82	304496	Ell	68,82
194450	Pipe Assembly	43			50
194451	Pipe Assembly	43	204500		53
194453	Pipe	43	304503	Ell	{ 55
194455	Hose	43			56
194463	Bumper	26,82	204525		81
194476	Pipe	56	304505	Ell	56,65
		(24	304540	Elbow	68
194478	Pipe	25			56
		56	304578	Elbow	68
194480	Hose	56	358039-S	Dlug	81
40440			220029-2	Plug	25
194491	Head	45, 47			The trans
194496	Frame	27			
194497	Arm	35			
194498	Yoke & Gusset Assy's	72			
194568	Arm	35		Market Lynchols - Eller St.	
144000		. 2			Ser Ba
1		43			
		50 Karana			the man
				THE PROPERTY OF THE PARTY OF TH	
PROPERTY.		THE STATE OF THE			

